


1:72 SCALE Antonov An-2 Colt/Nanchang Y-5

安-2马驹多用途运输机

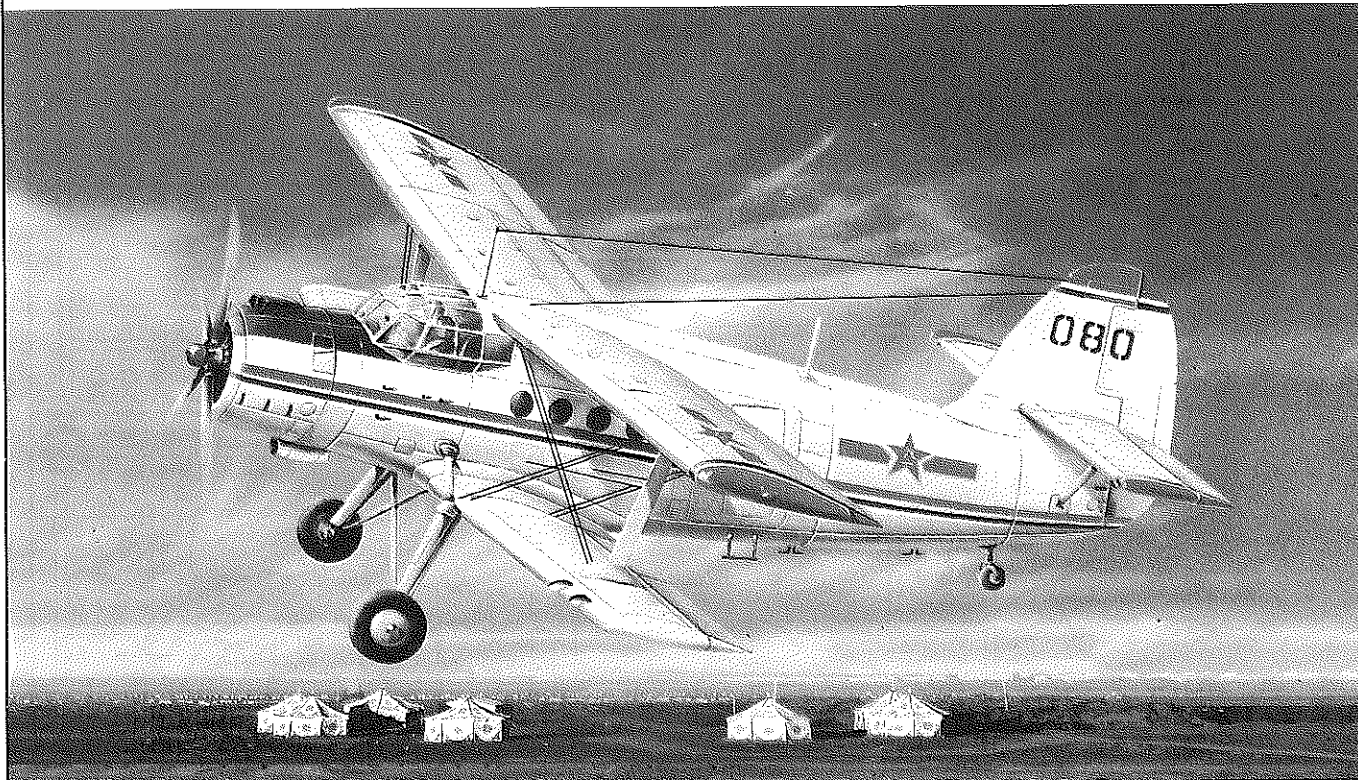

颜色指示 COLOR

[2]-黑色	Black
[3]-红色	Red
[4]-黄色	Yellow
[6]-绿色	Green
[8]-银色	Silver
[14]-深蓝色	Navy blue

[15]-浓绿	Lin green
[33]-消光黑	Flat black
[39]-暗黄色	Sandy yellow
[61]-烧铁色	Burnt iron
[115]-浅兰色	Light blue



cyanoacrylate glue
使用强力胶



weight
配重



make hole
钻孔



cut / remove
切除



bend
弯曲



file / sand
锉平



option
选择



no cement
不涂胶水



decal
贴纸





水贴纸的使用:

1. 从水贴上剪下印花;
2. 将印花放入温水中浸10秒, 然后放在干净布上。
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至水干, 气泡消失。



DECAL APPLICATION

1. Cut off decal from sheet.
2. Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.




部品图
Parts

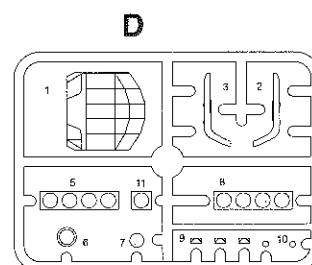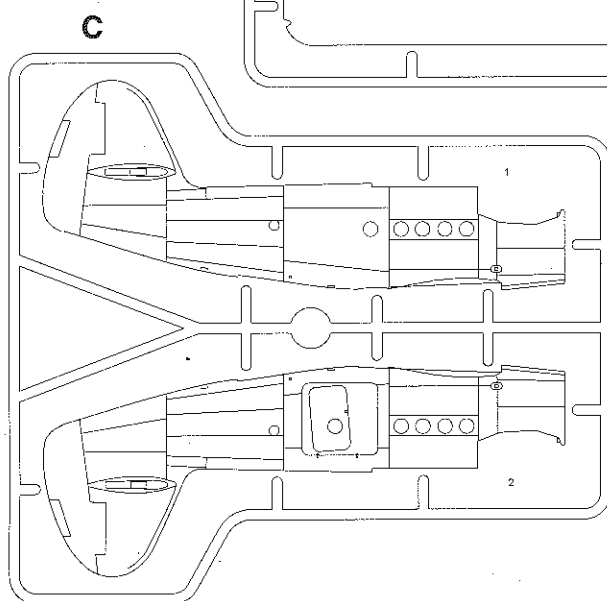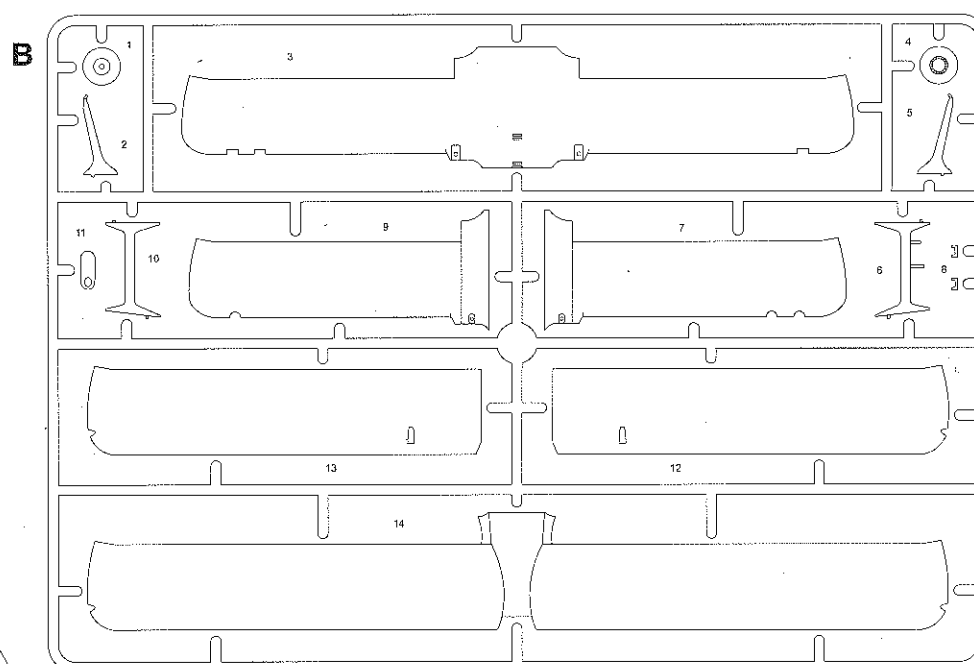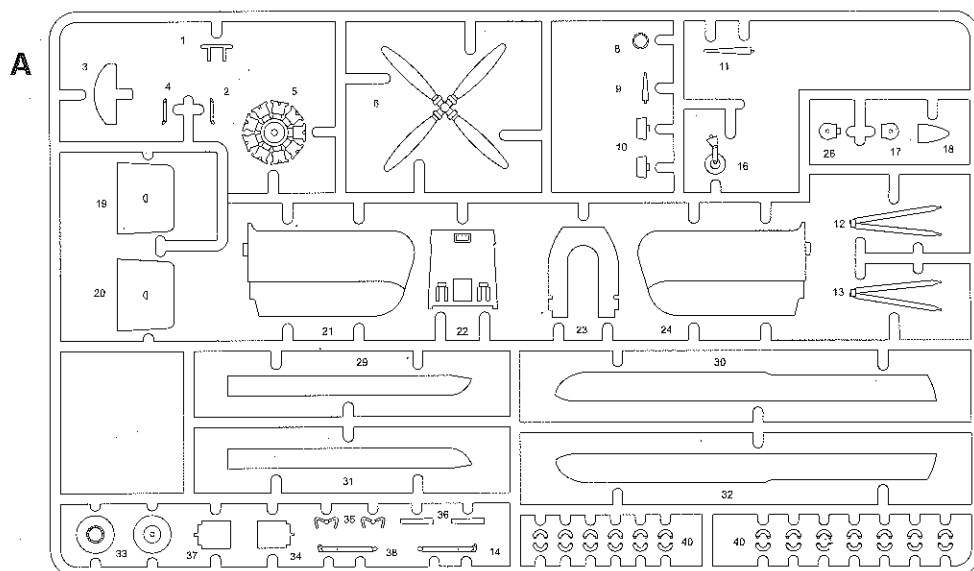



1 座舱的装配 Cockpit assembly

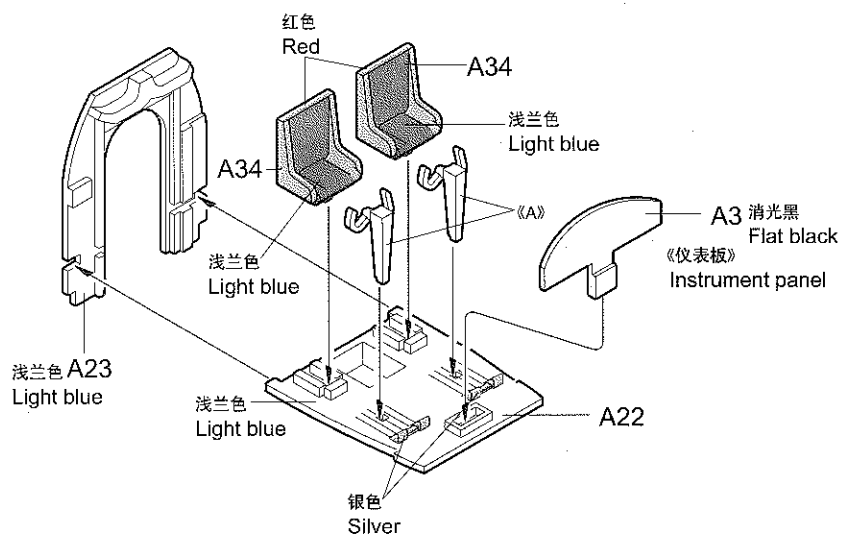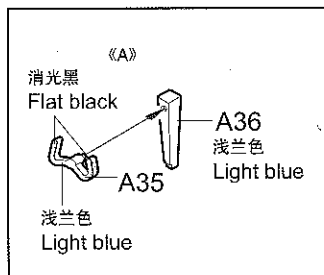



2 前机身的组装 Forward fuselage

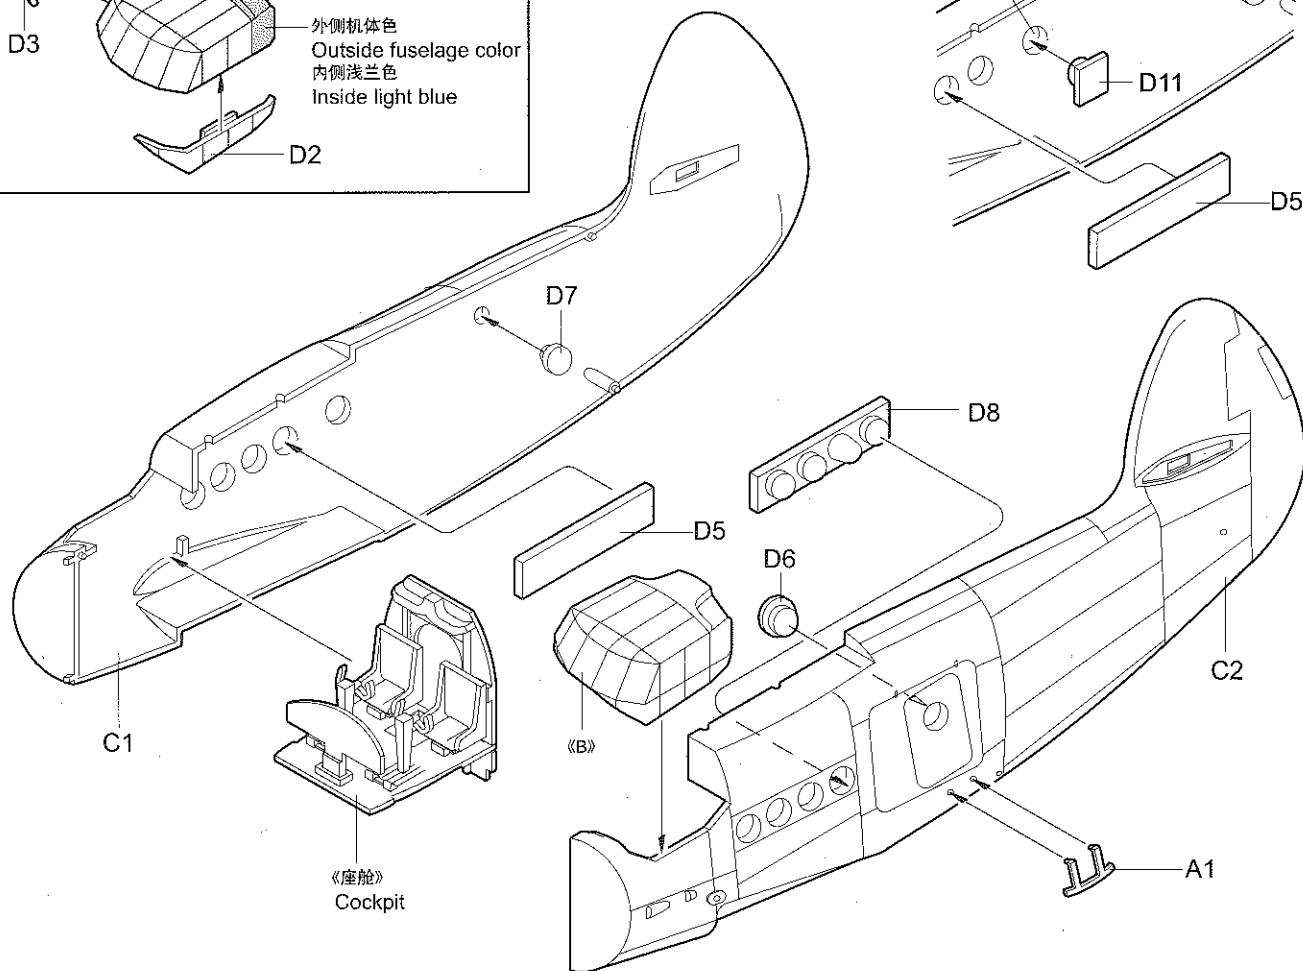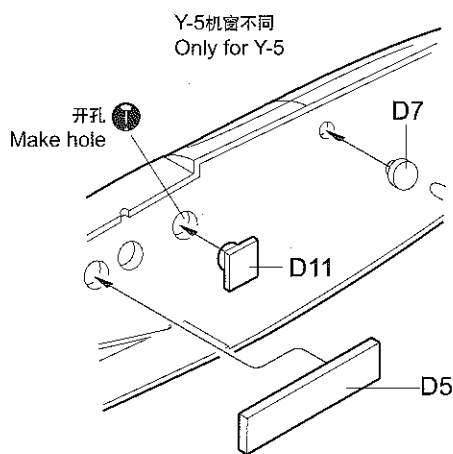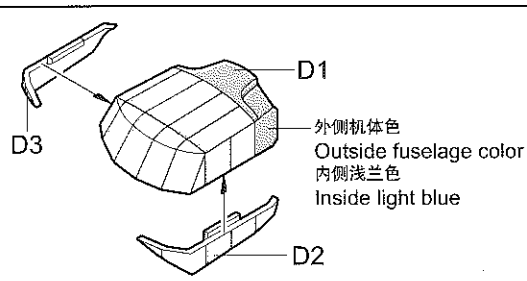




3 机翼的装配 Wing assembly

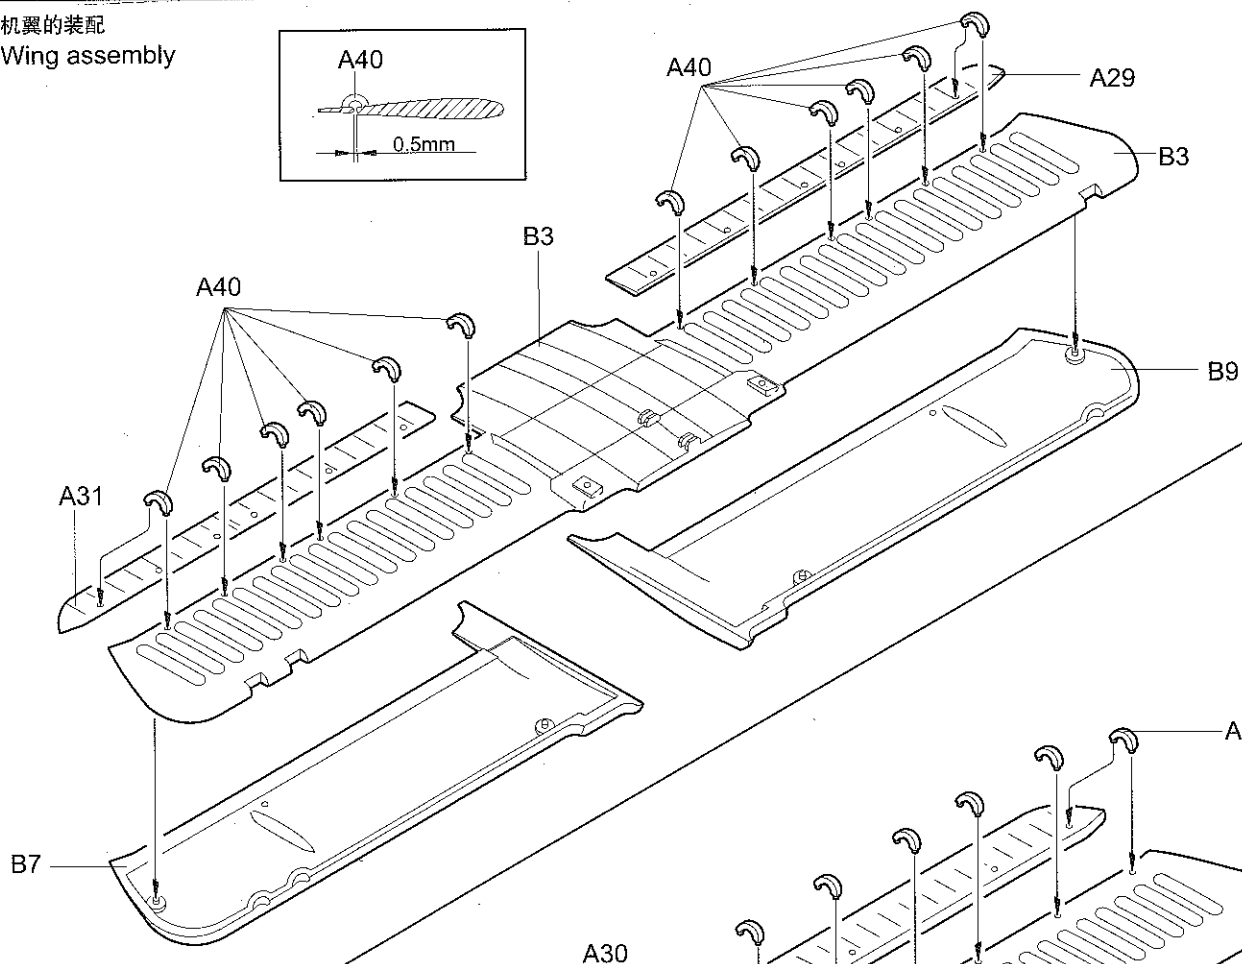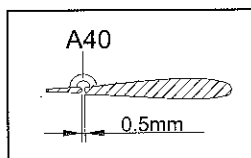


4 机翼的装配 Wing assembly

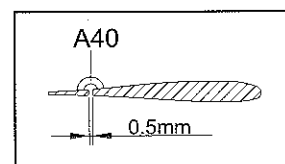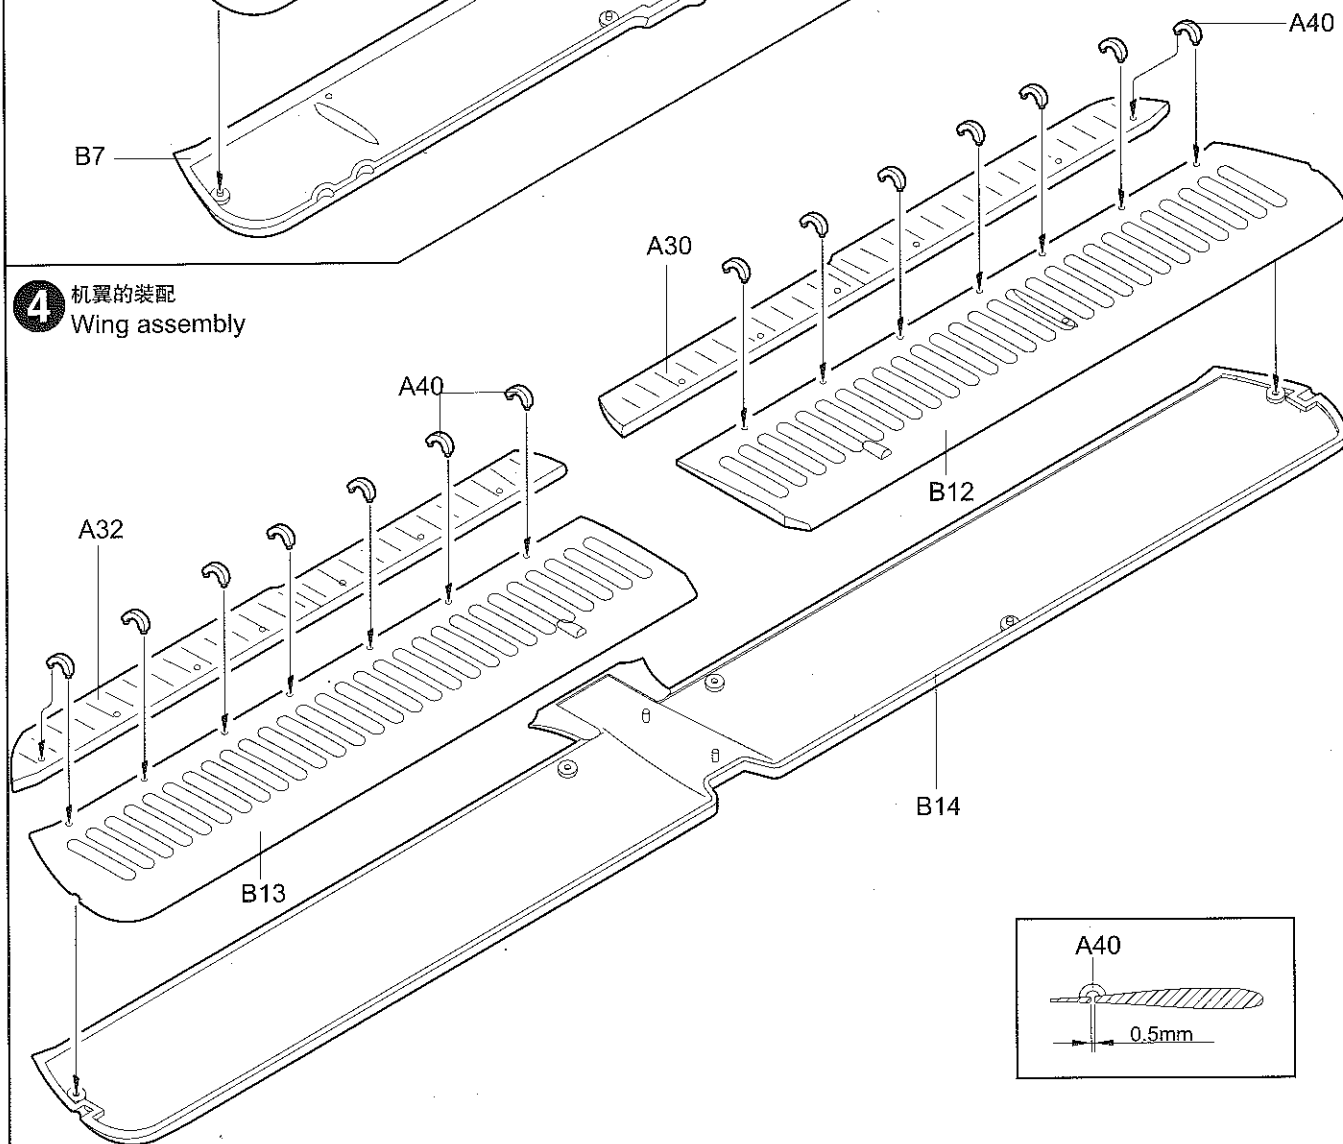


5 机翼的安装 Attaching wing

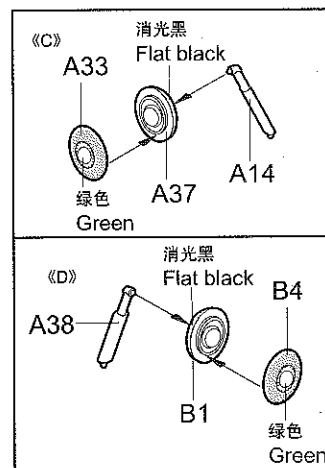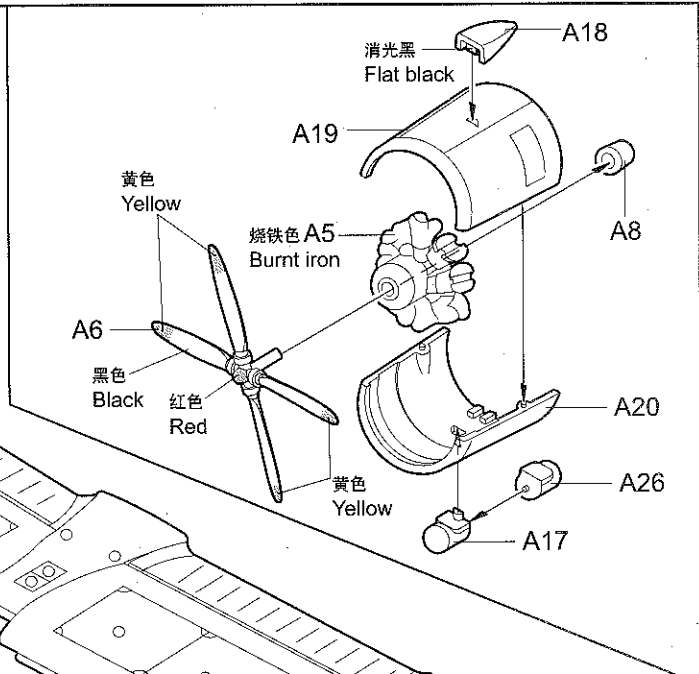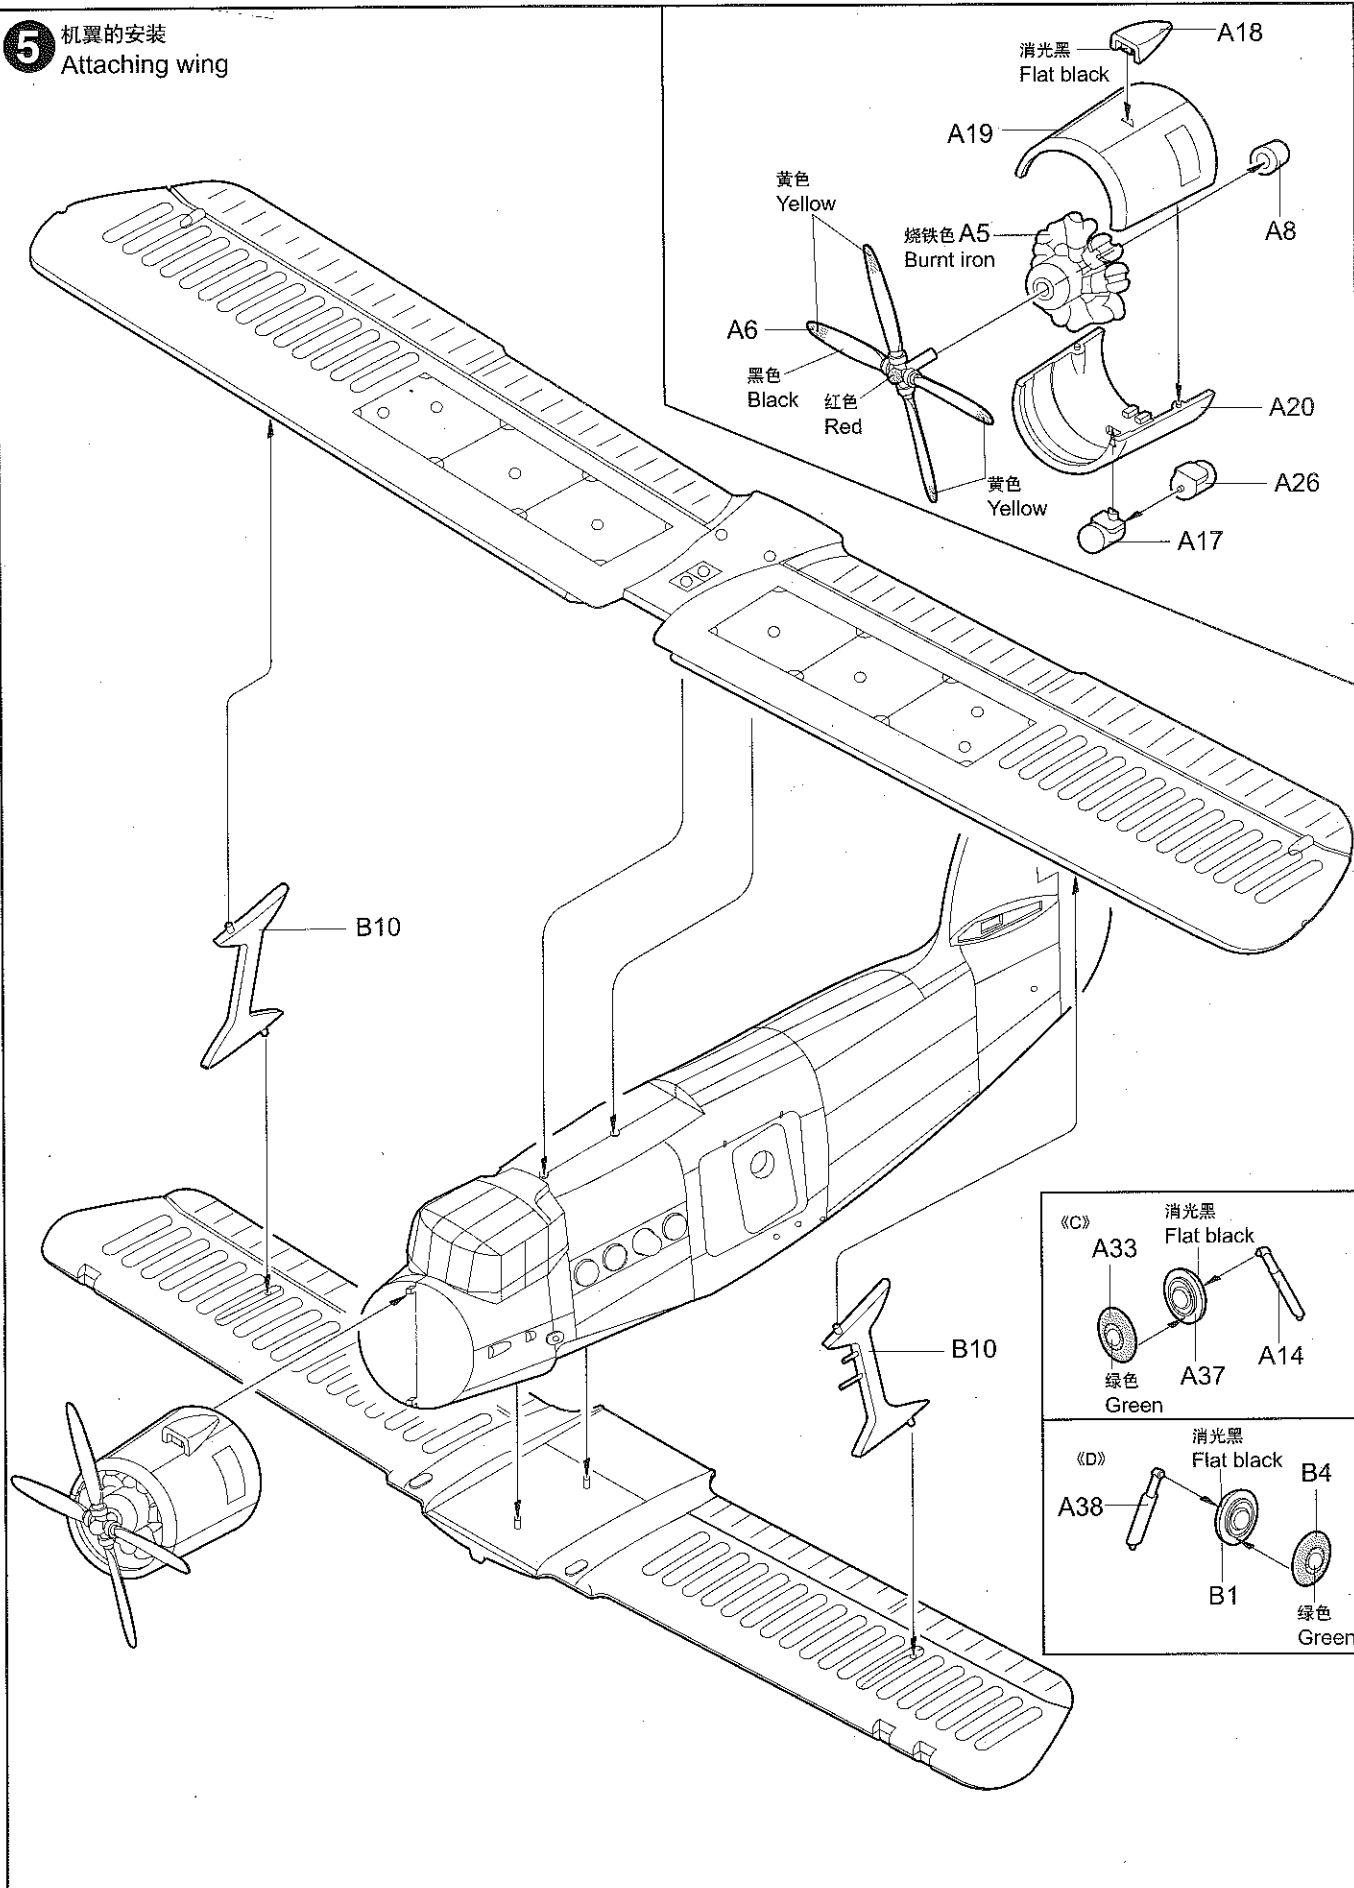

6 着陆架安装 Undercarriage

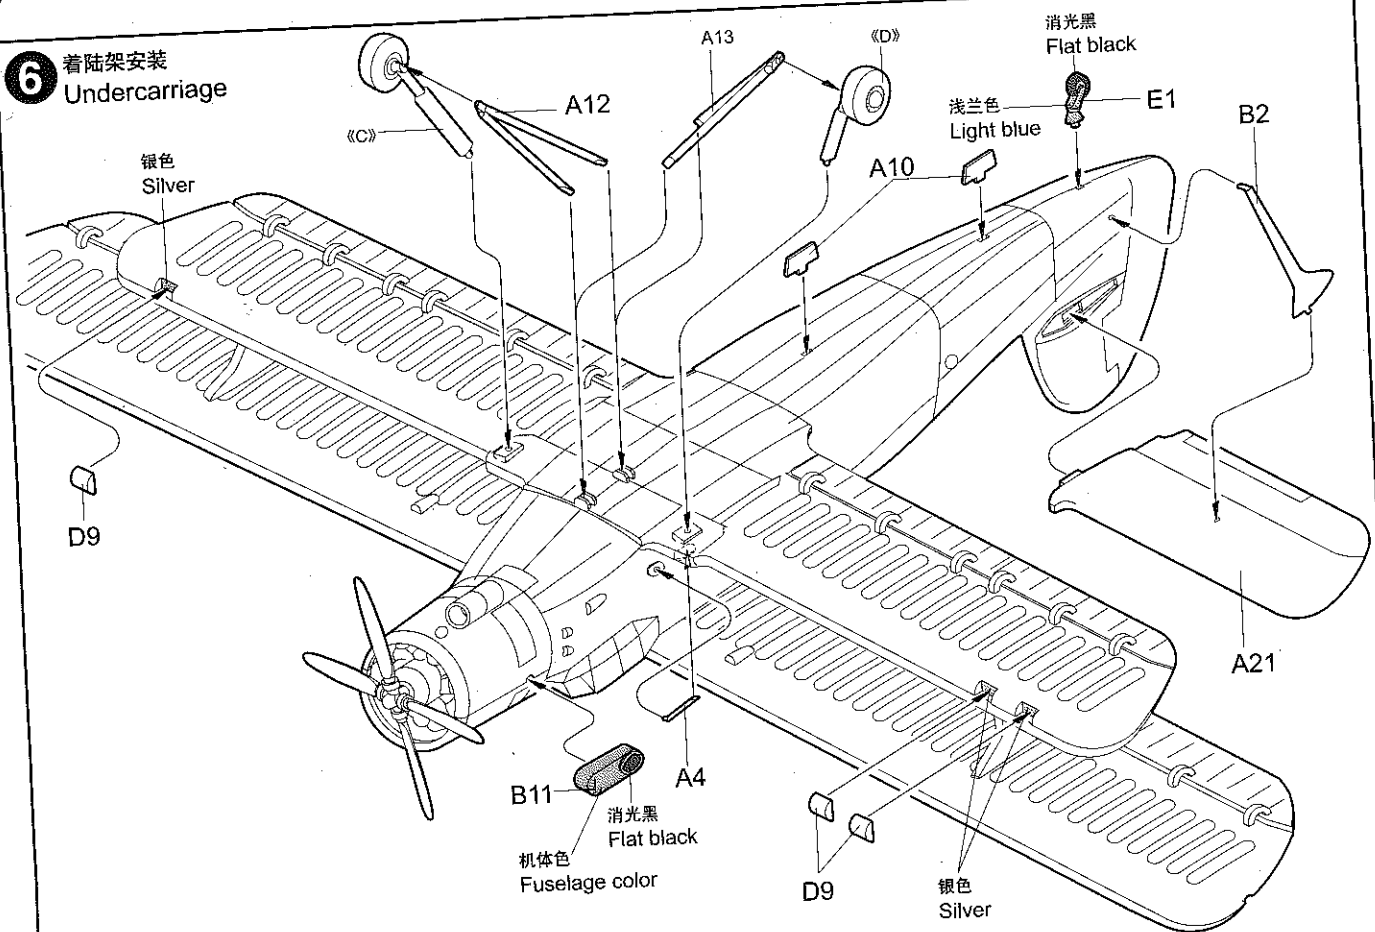


7 尾翼的安装 Attaching tailplane

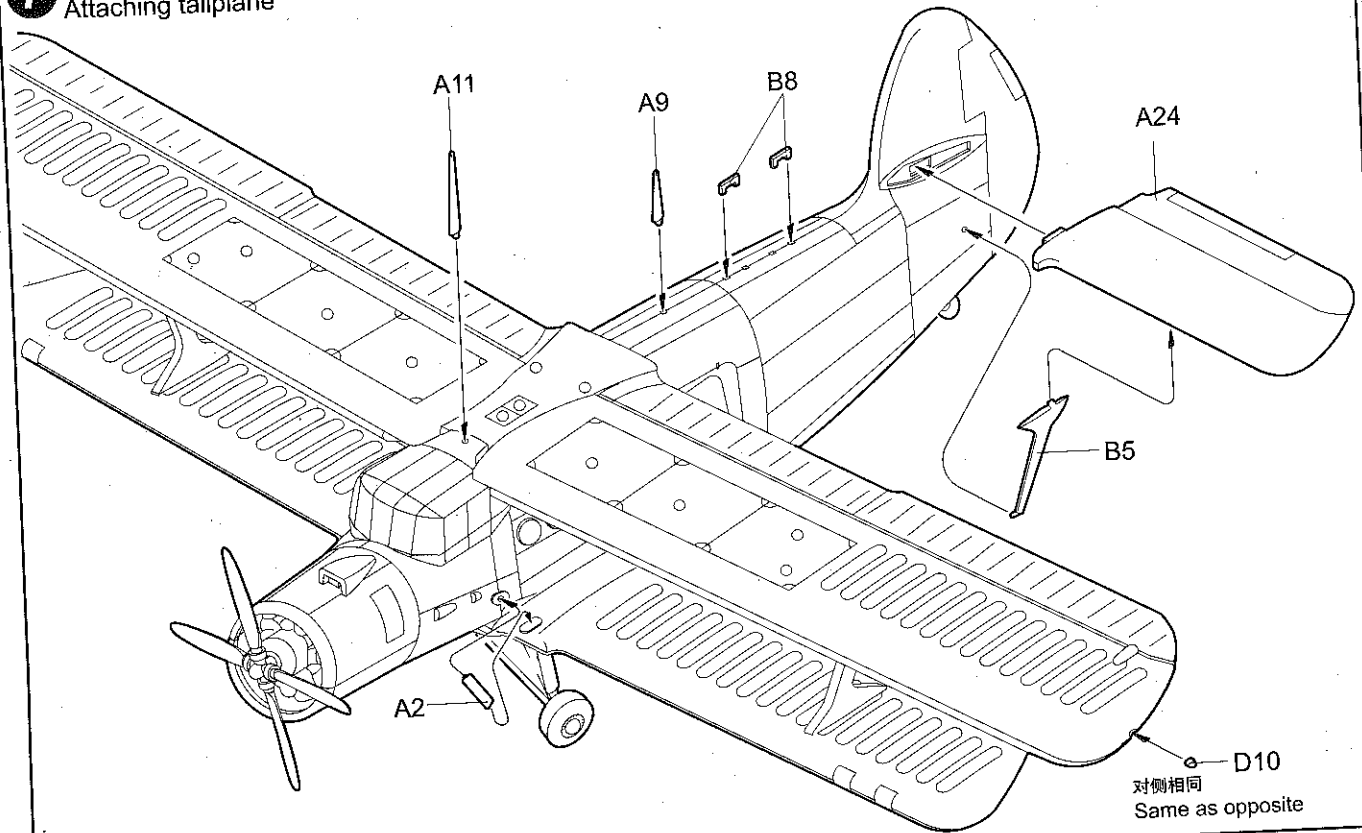

涂装同标贴指示 Painting & Marking guide

郡仕色使用

Gunze Mr. color used

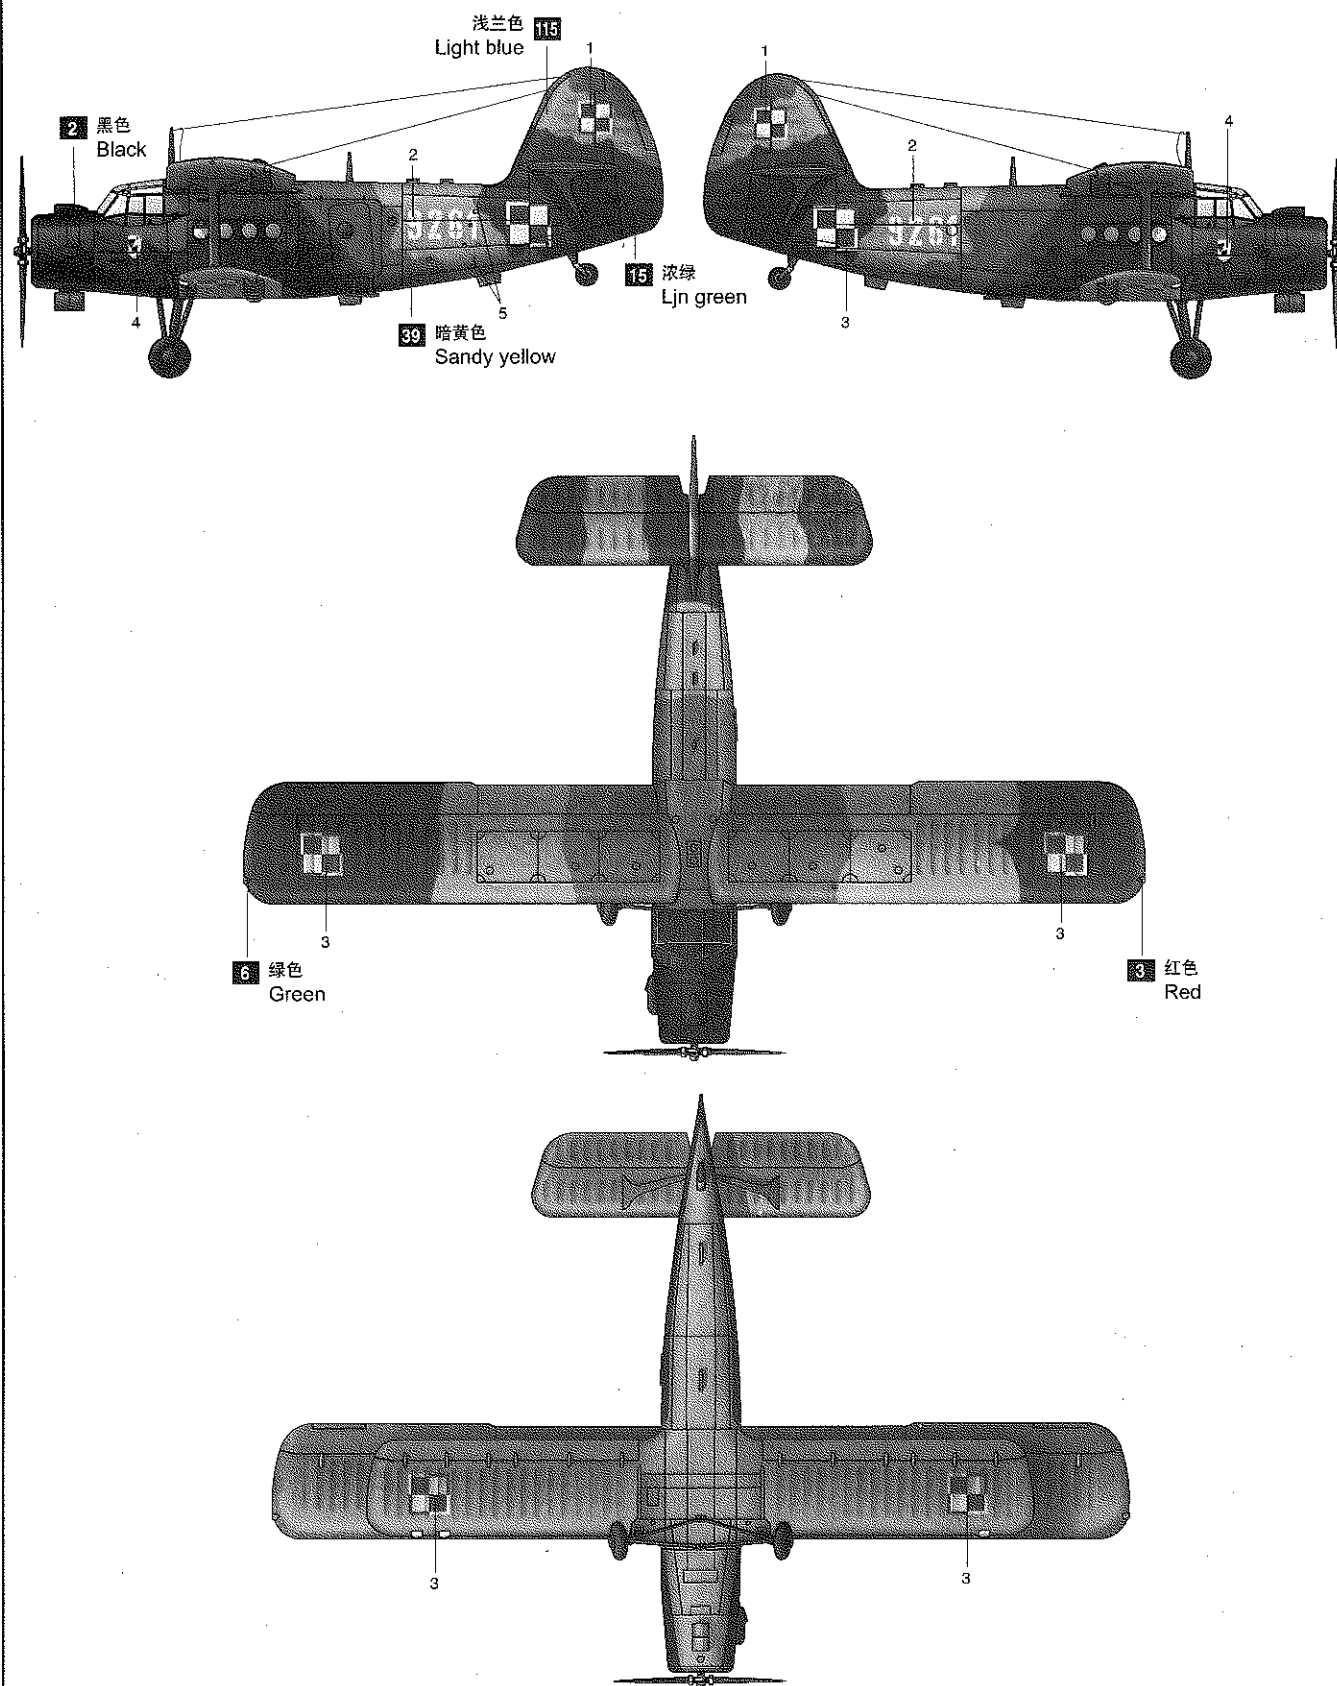

涂装同标贴指示 Painting & Marking guide

郡仕色使用

Gunze Mr. color used

