


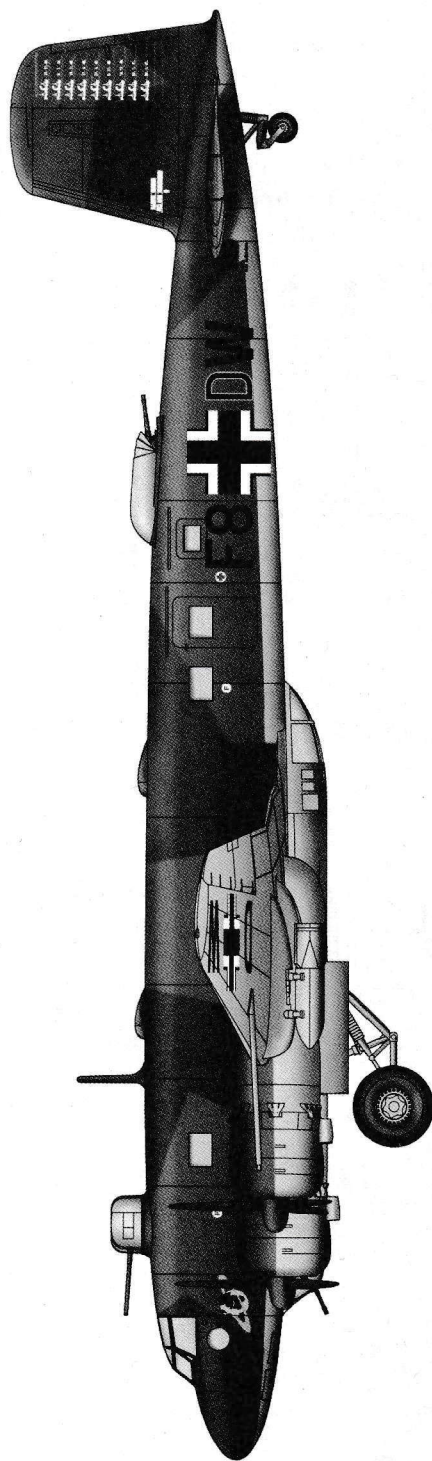

FW200 C-4 Condor

- This kit is not recommended for inexperienced modelers or for children under 14 years of age
- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed

1. 从水贴纸上剪下印花;
2. 将印花放入温水中浸10秒, 然后放在干燥处晾干;
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至干, 气泡消失。

1. Cut decals from sheet as needed
2. Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
3. Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.


4. While still wet, decal can be adjusted for better fit on model by dampening it gently with your finger.

5. When placed in the proper position, gently press decal down with a soft cloth until excess water and air bubbles are gone.





6. Allow decal to dry completely before handling model

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
 - 小心用刀片切下蚀刻片零件，不要遗失小零件。
 - 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快干胶水使用时可能导致可动零件会粘住，小心涂胶。
 - 取蚀胶片时应特别注意安全，防止边、划划伤手指。
 - 某些零件表面需贴上下水纸，请选择在装配的同时进行。
 - 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子钳，钻，剪刀，瞬间快干胶。
 - 软布同砂纸同时也应该是必备工具。
 - 请使用塑料胶水调和油漆，模型内不含。
 - 谨防小塑料吸吮塑料零件，或者将塑料袋套在头上，制作品时应将套材远离小孩接触。
- 本产品不适合14岁以下没有经验的模型爱好者。

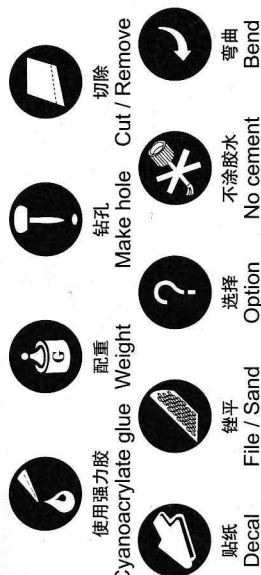

部品图 Parts

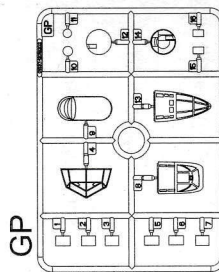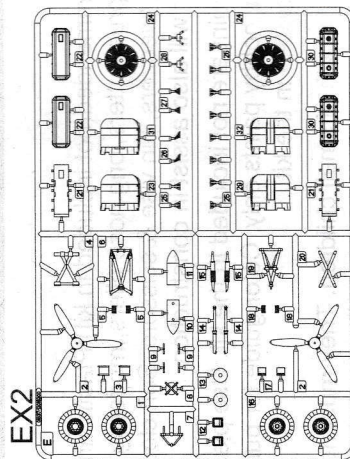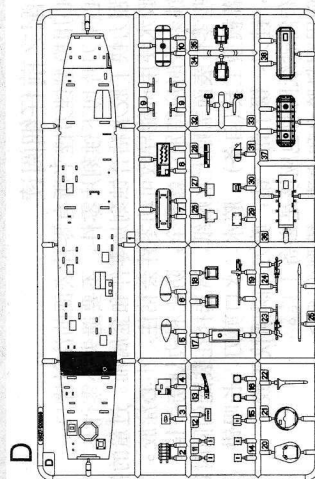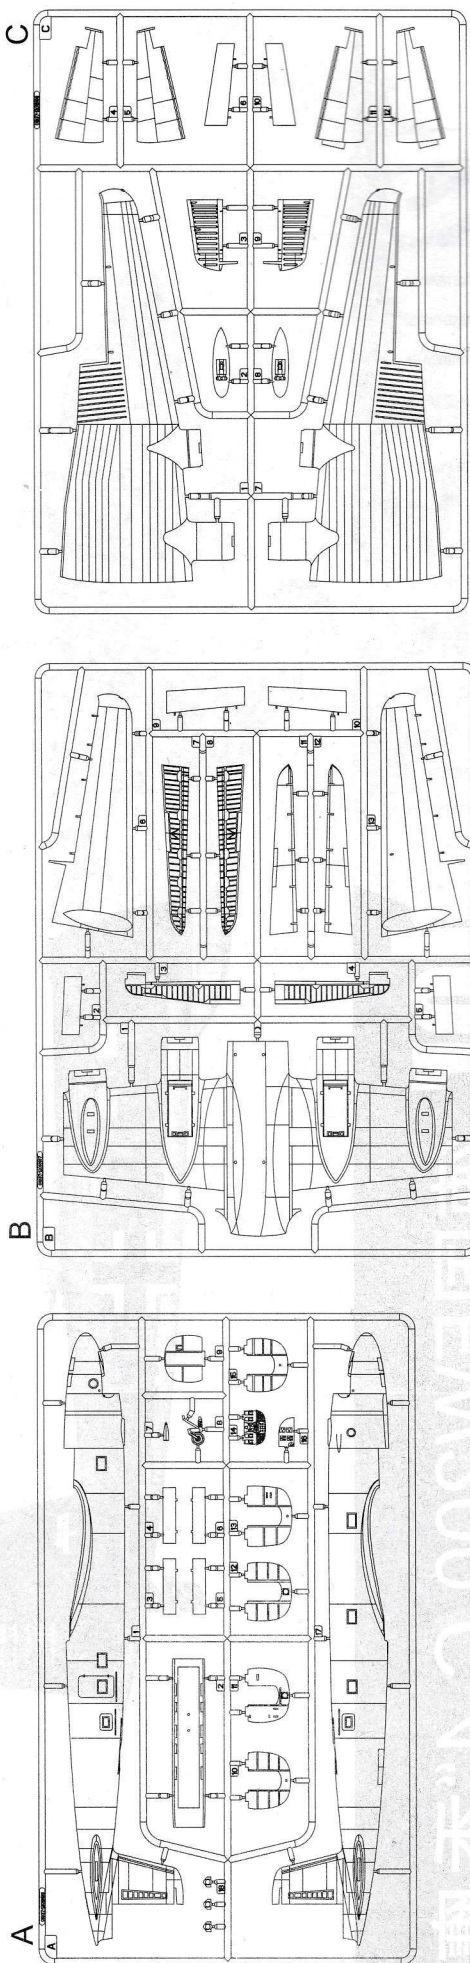


《水貼》
Decal




不用的部件: GP12
Unused parts




3

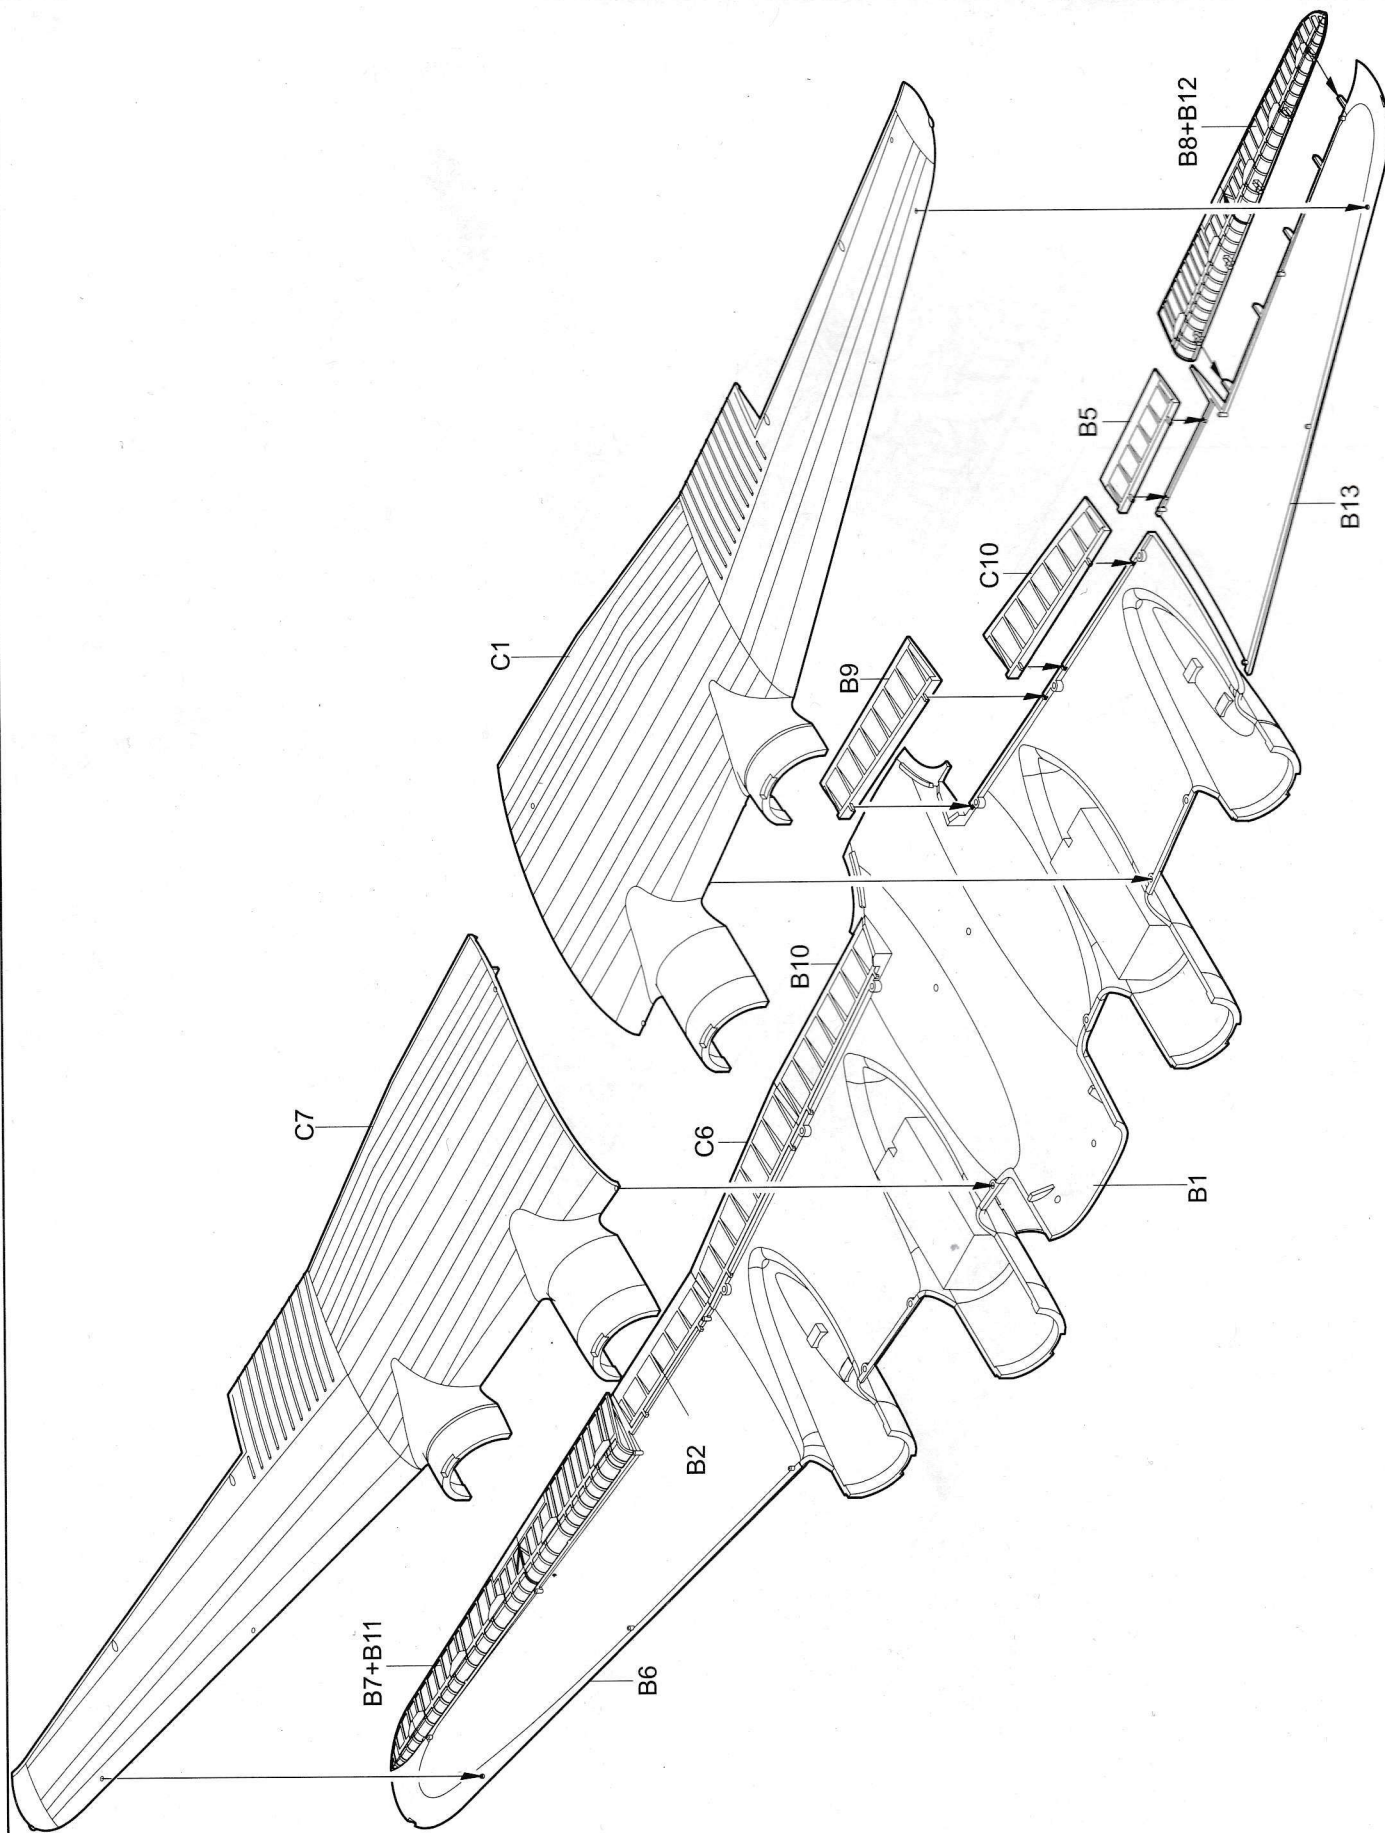


01638

4



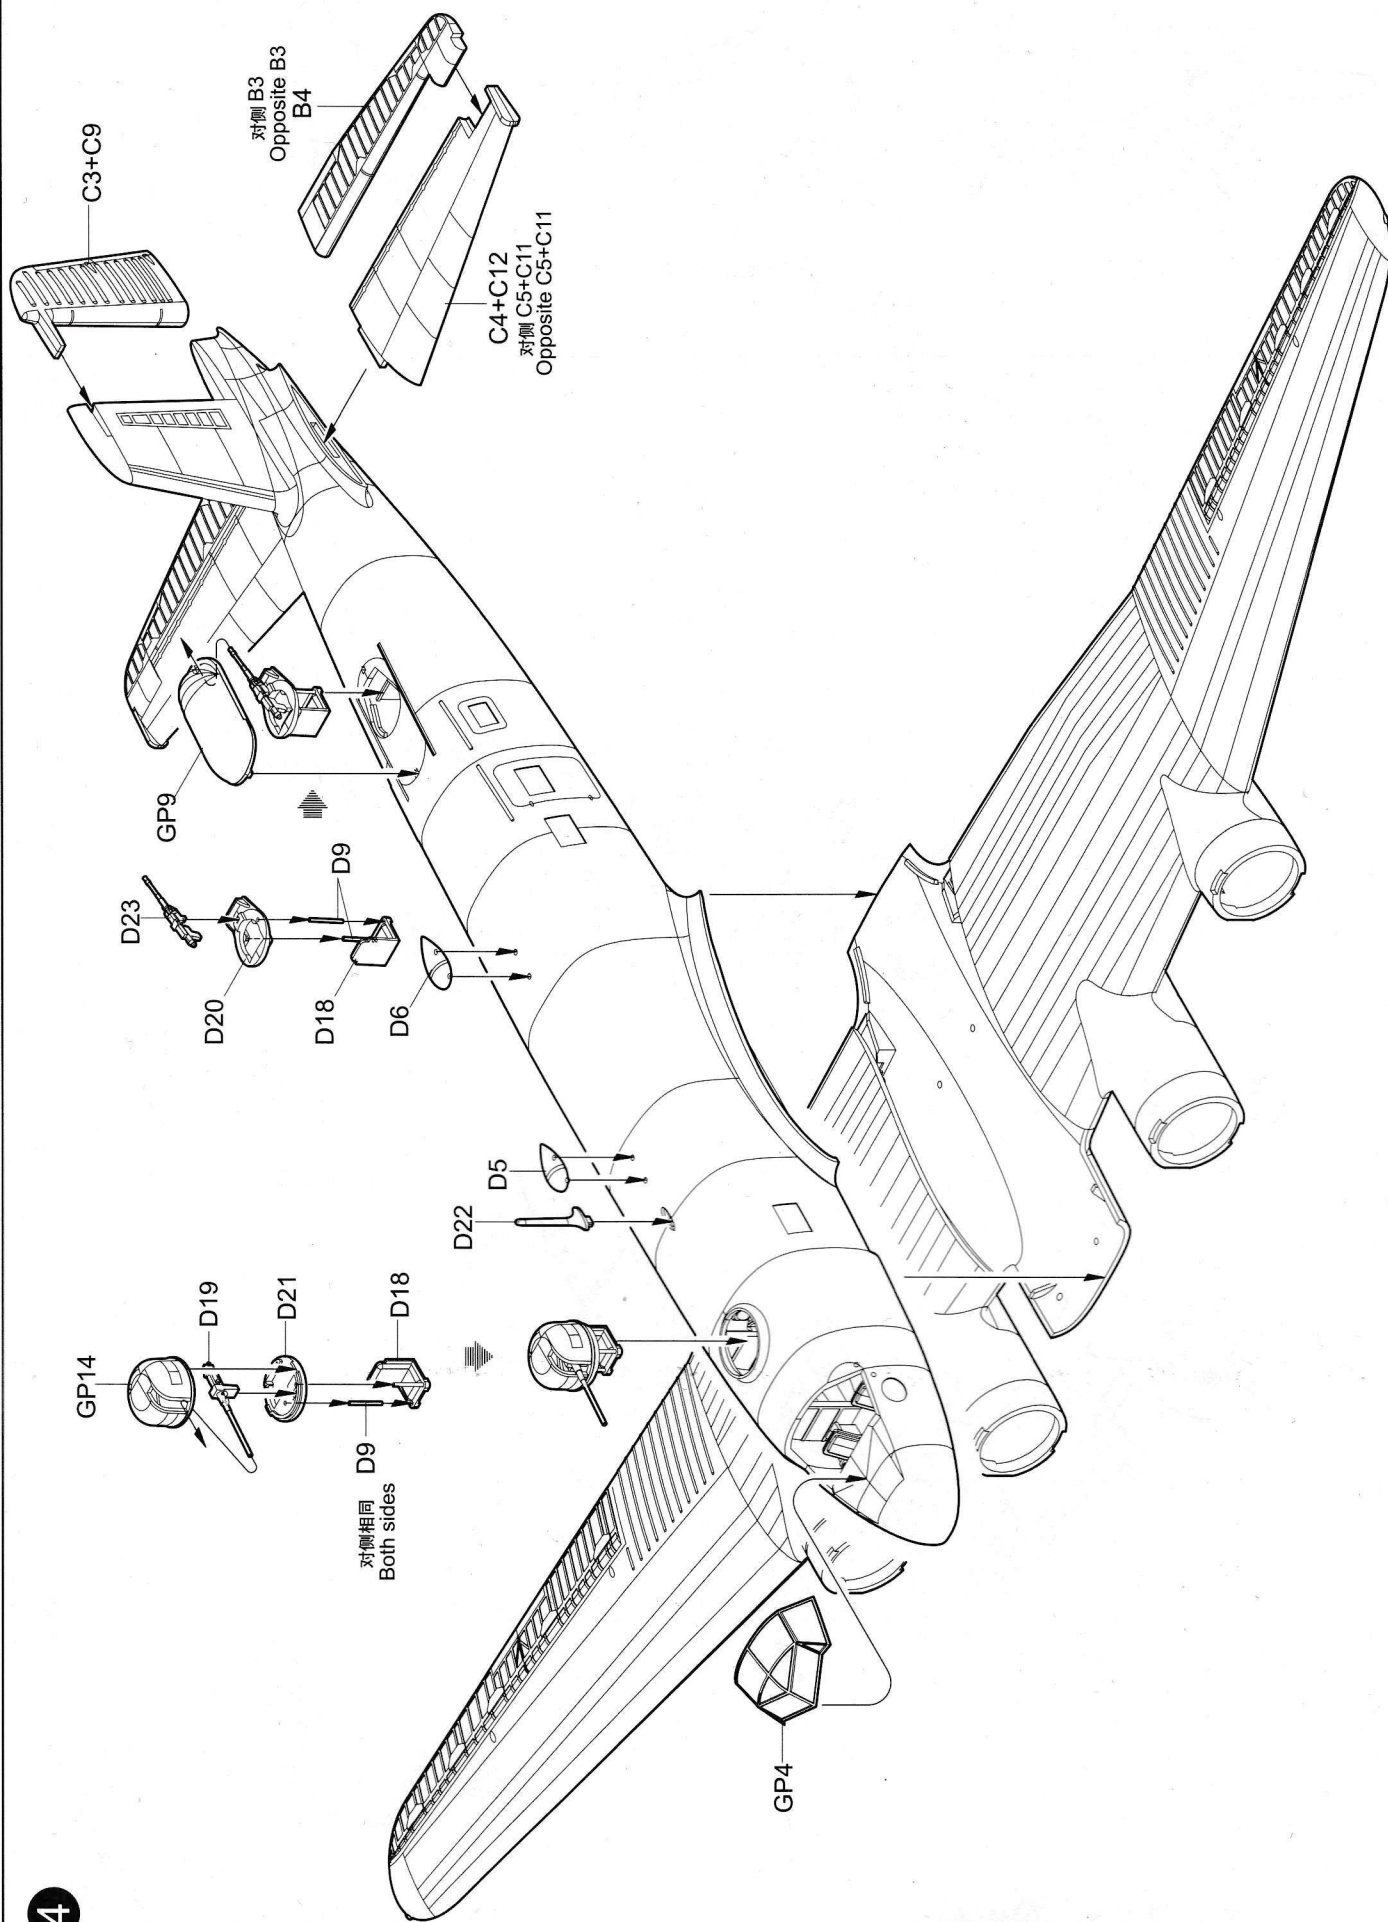


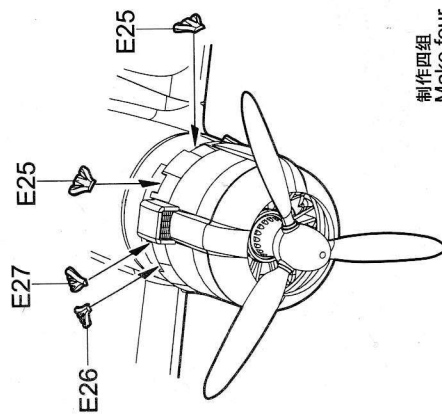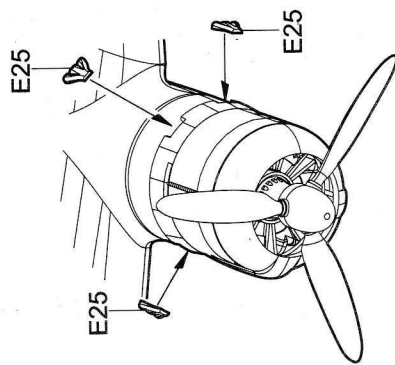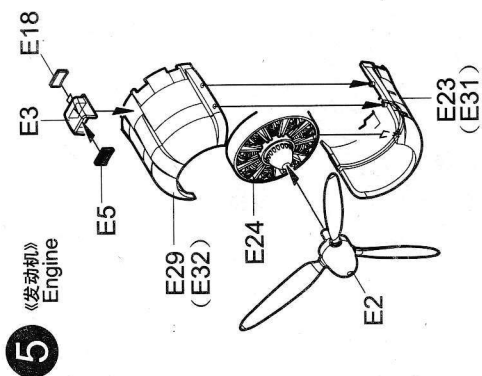




制作四组
Make four




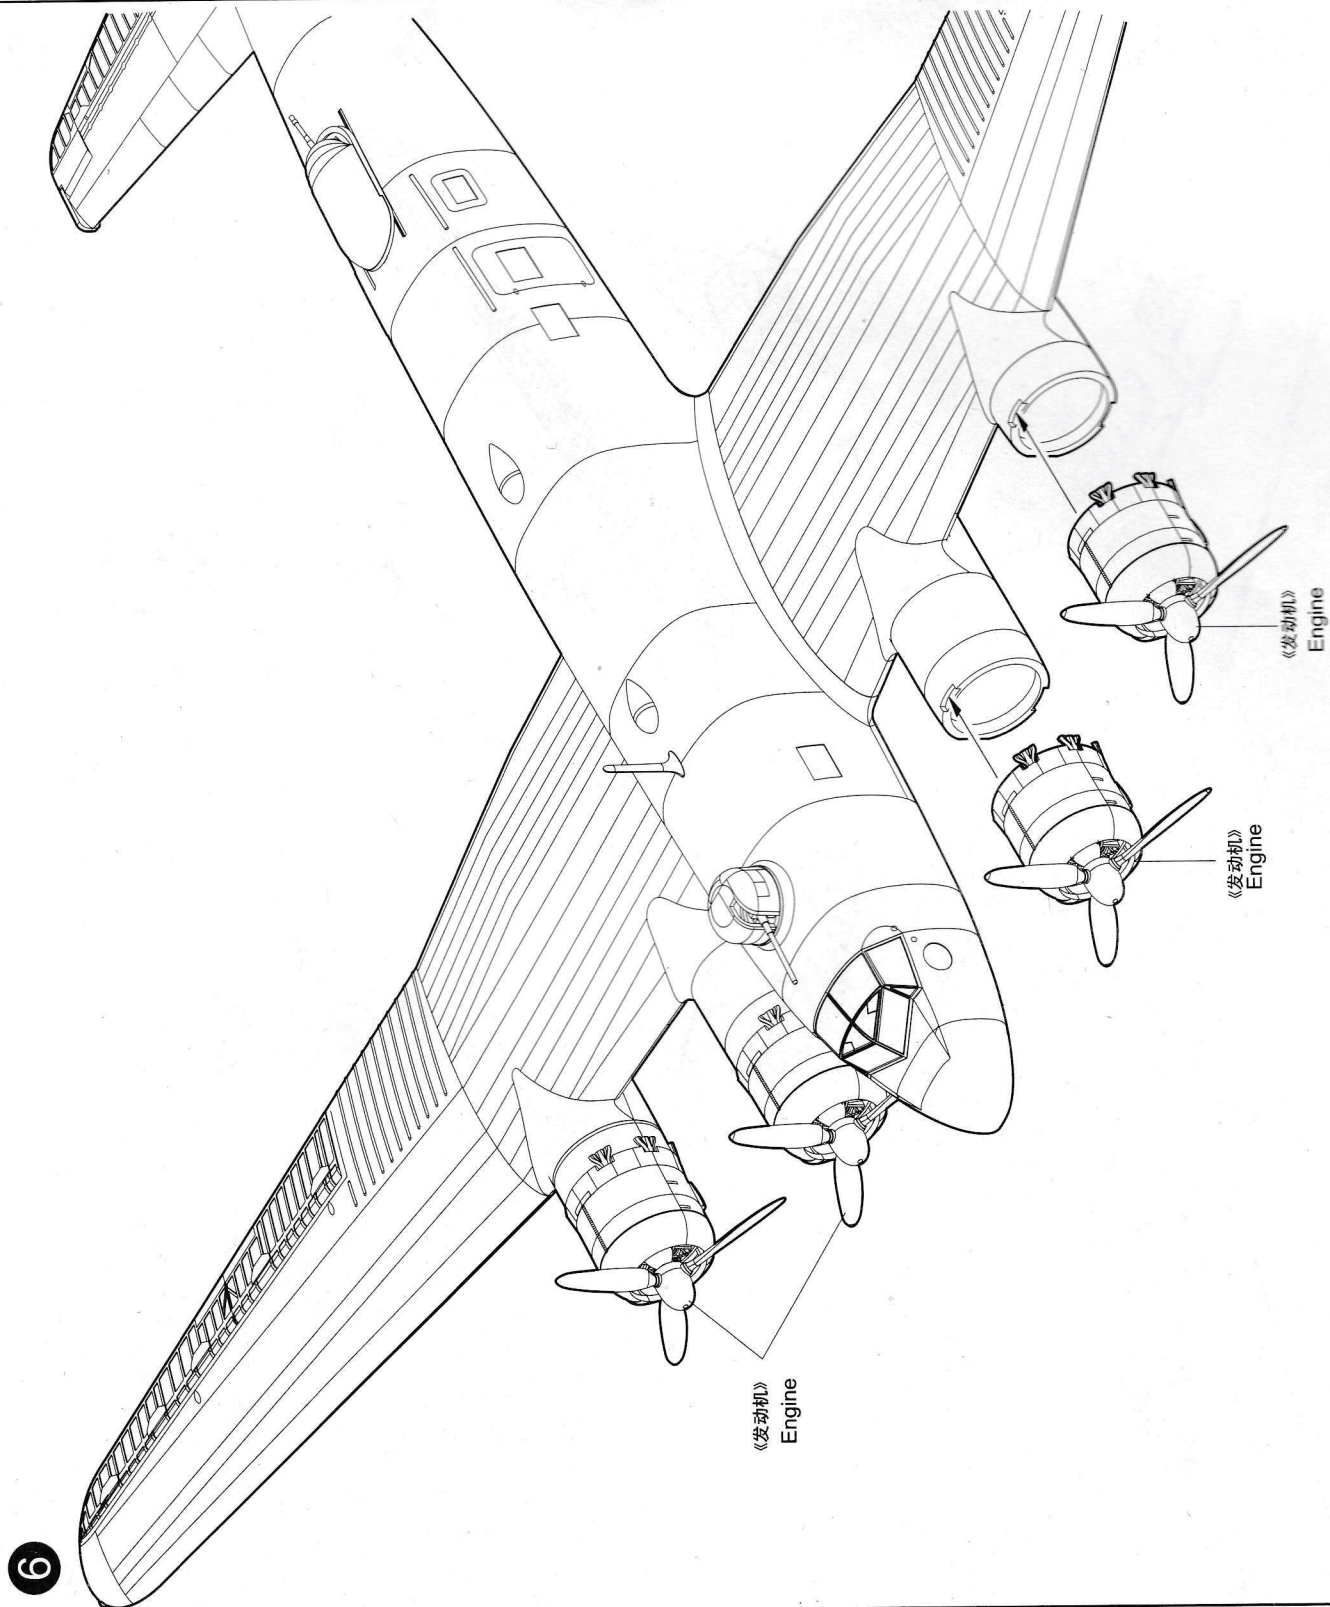


7

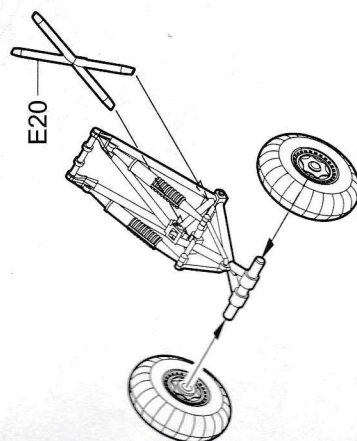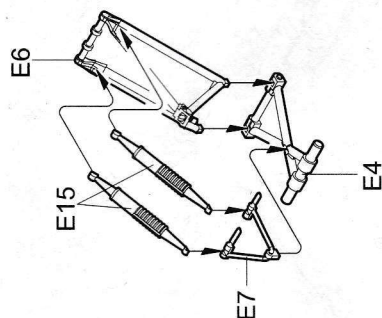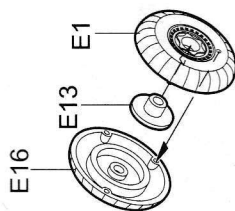《主起落架》
Main undercarriage制作两组
Make two

8

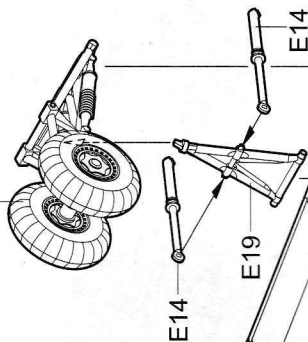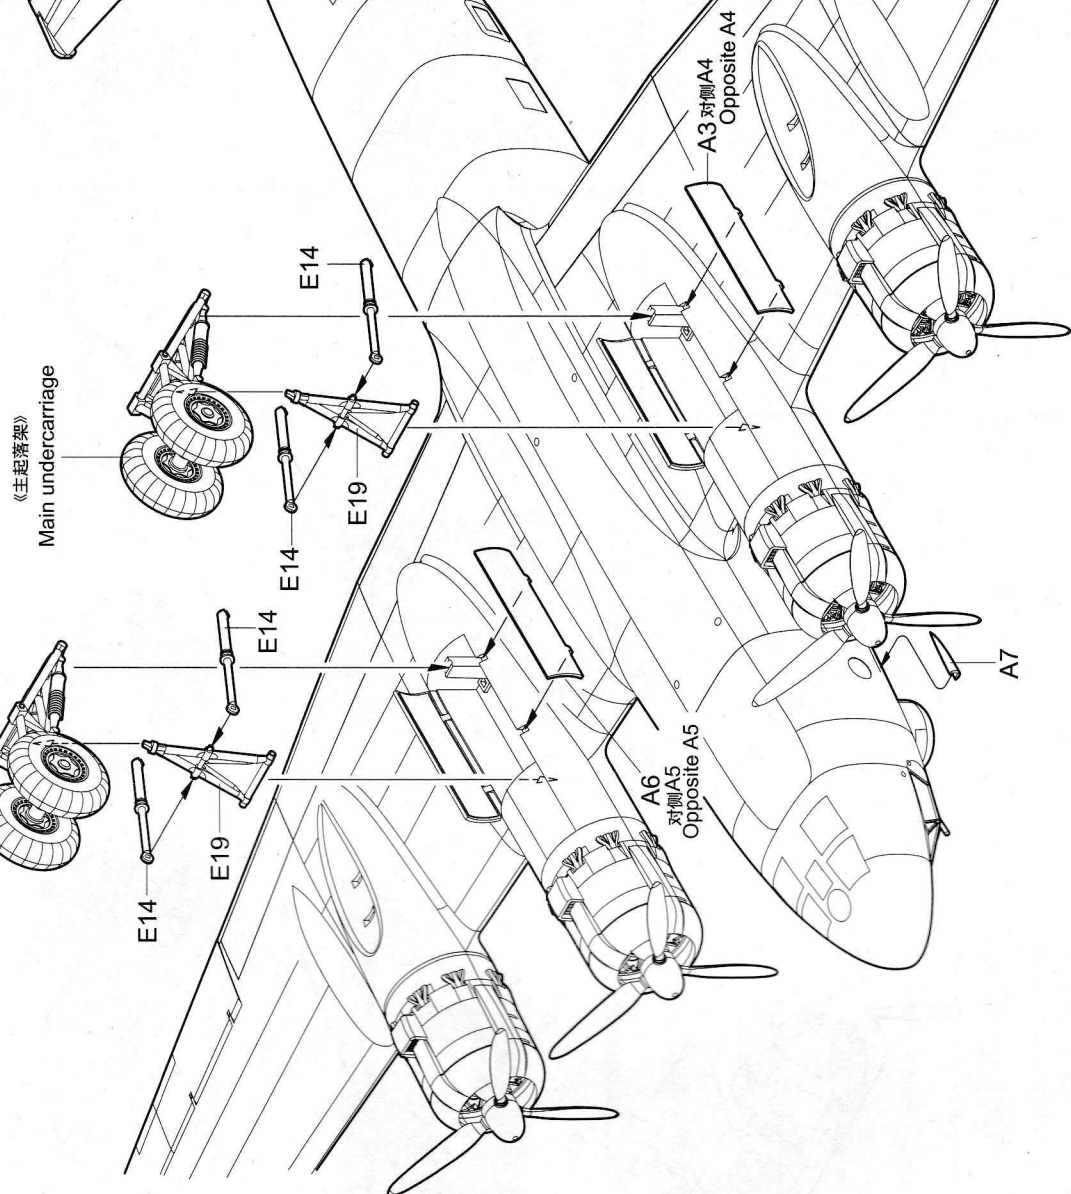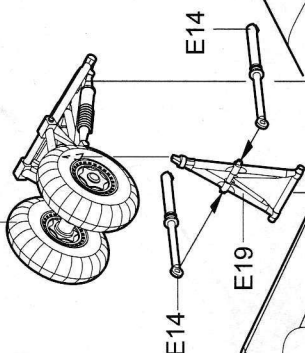《主起落架》
Main undercarriage《主起落架》
Main undercarriage

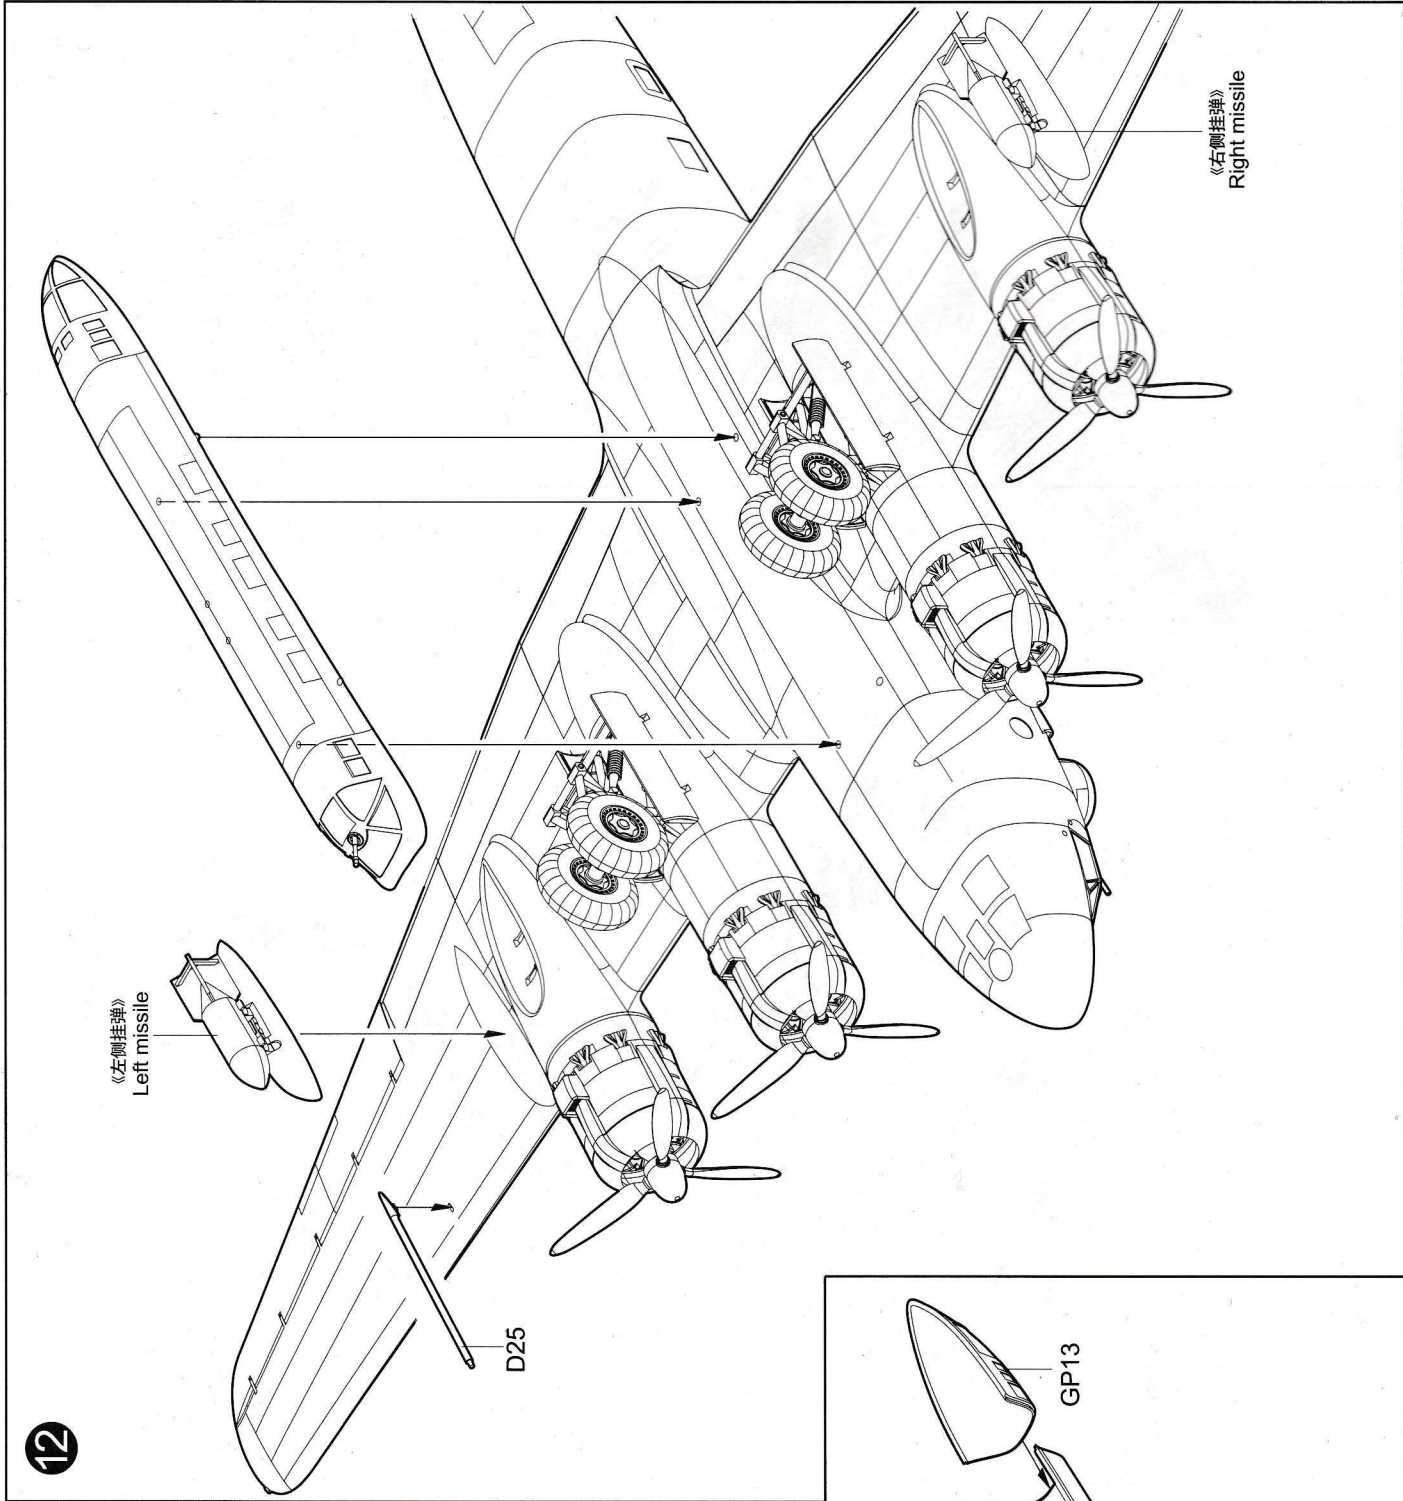
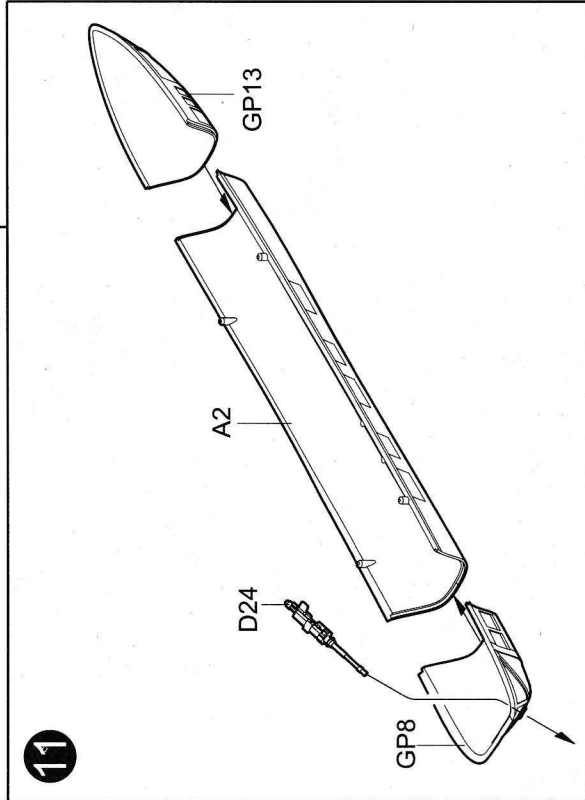
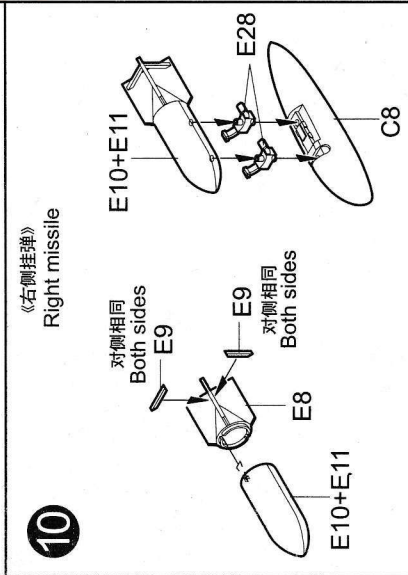
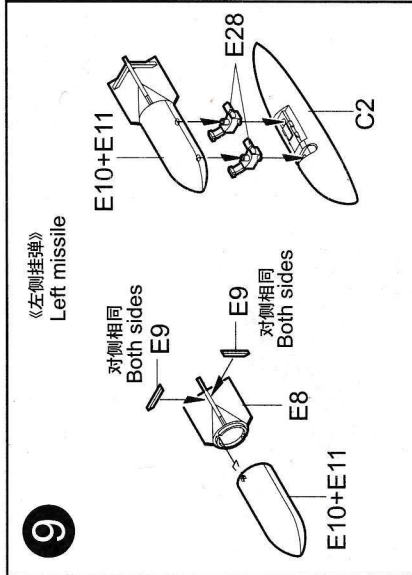


涂装同标贴指示 Painting & Marking guide

A German, F8+DW 200C-4.

PAINT REFERENCE COLOUR

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
墨绿色 RLM70 Black Green	H 65 18	897	—	XF27	91
暗绿色 RLM71 Dark Green	H 64 17	—	—	—	—
胎黑色 Tire Black	H 77 137	—	—	—	—

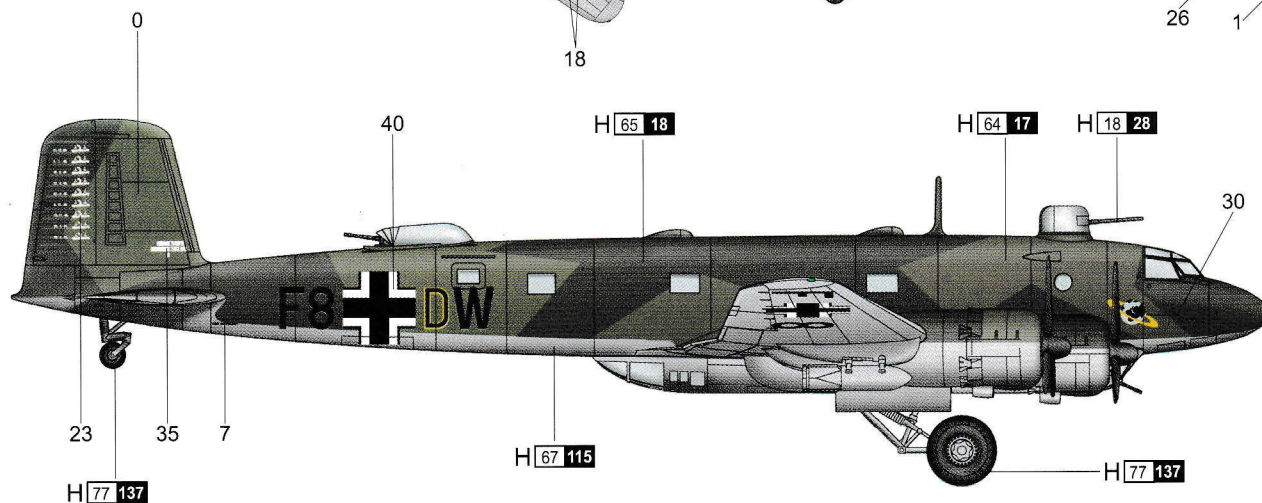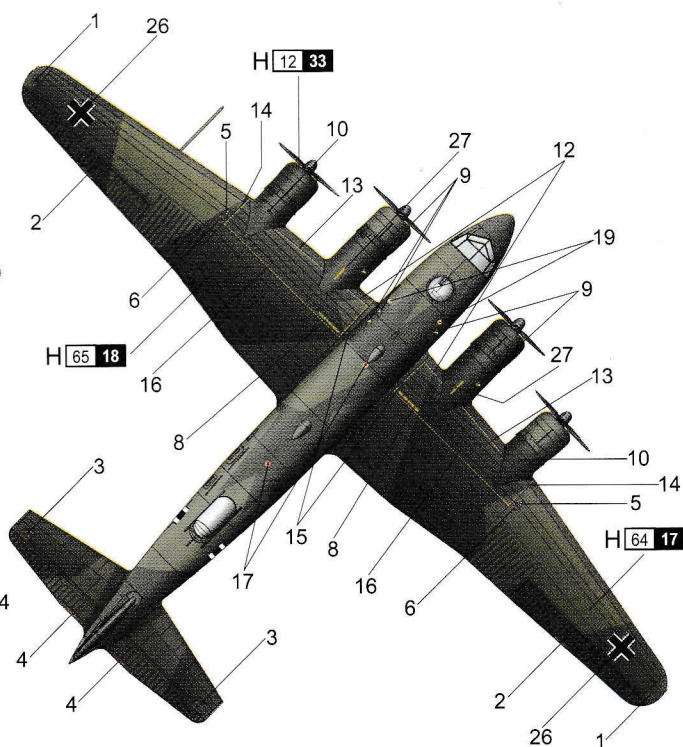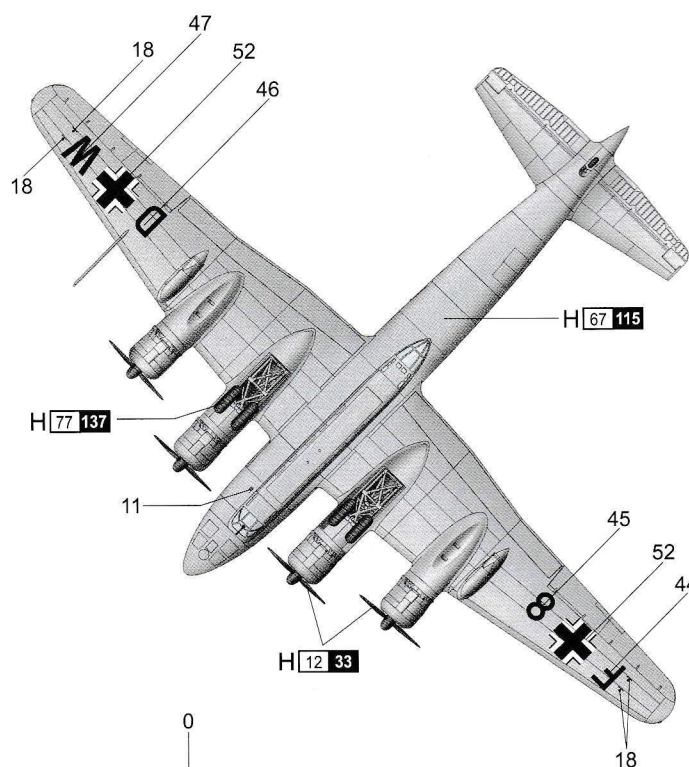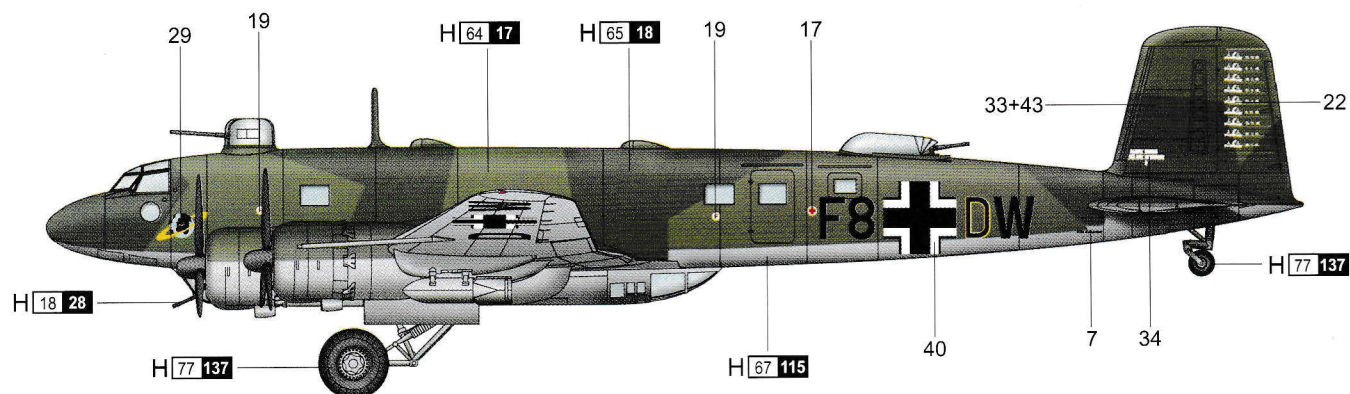

H X AQUEOUS HOBBY COLOR X Mr. COLOR


01638 1/72 FW 200C-4 Condor

涂装同标贴指示
Painting & Marking guide

PAINT REFERENCE COLOUR

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
浅蓝色 RLM65 Light Blue	H 67 115	906	—	XF23	65
黑铁色 Steel	H 18 28	864	1402	—	—
消光黑 Flat Black	H 12 33	950	1749	XF1	33

B German, F8+BH 200C-4.

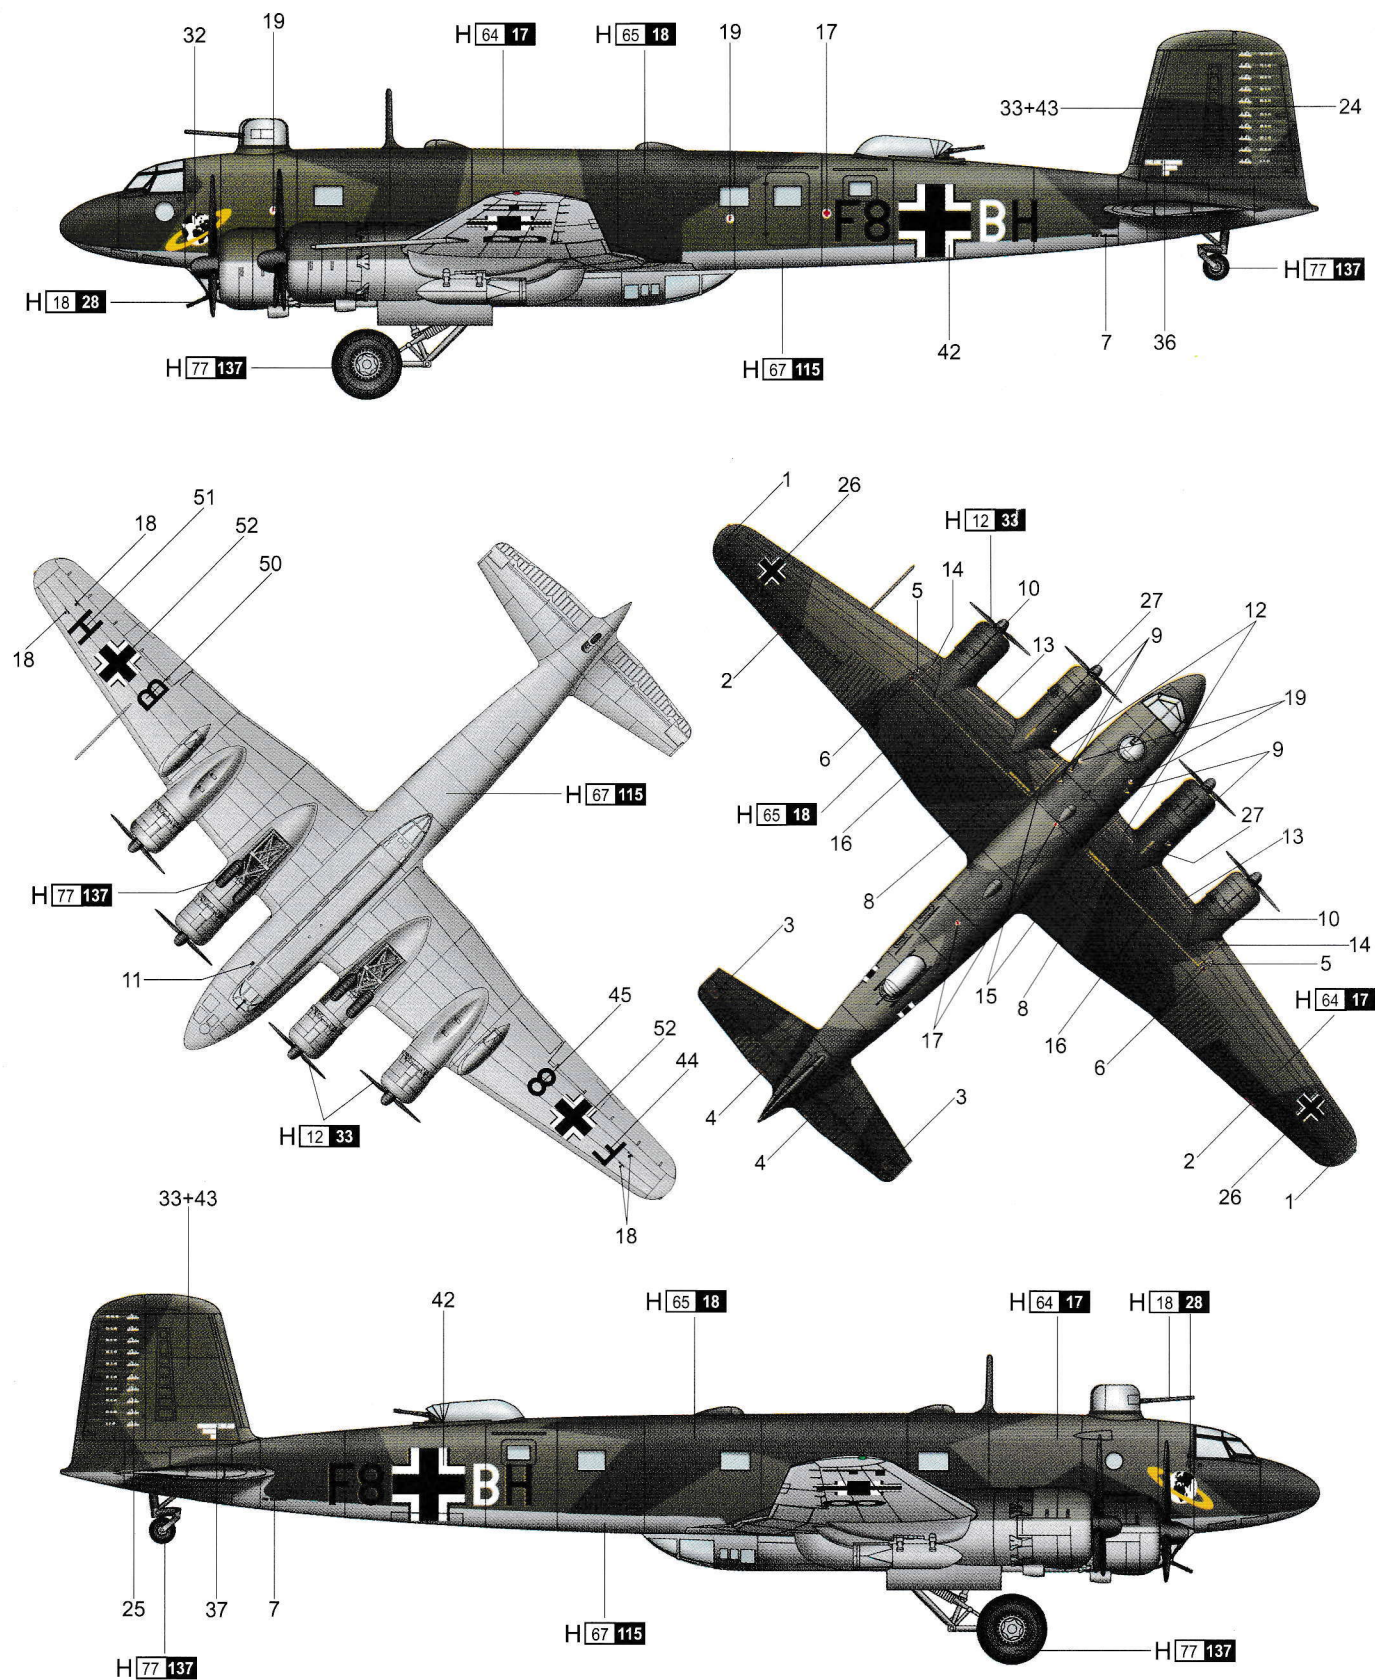

H(X) AQUEOUS HOBBY COLOR X Mr. COLOR

01638 1/72 FW 200C-4 Condor