


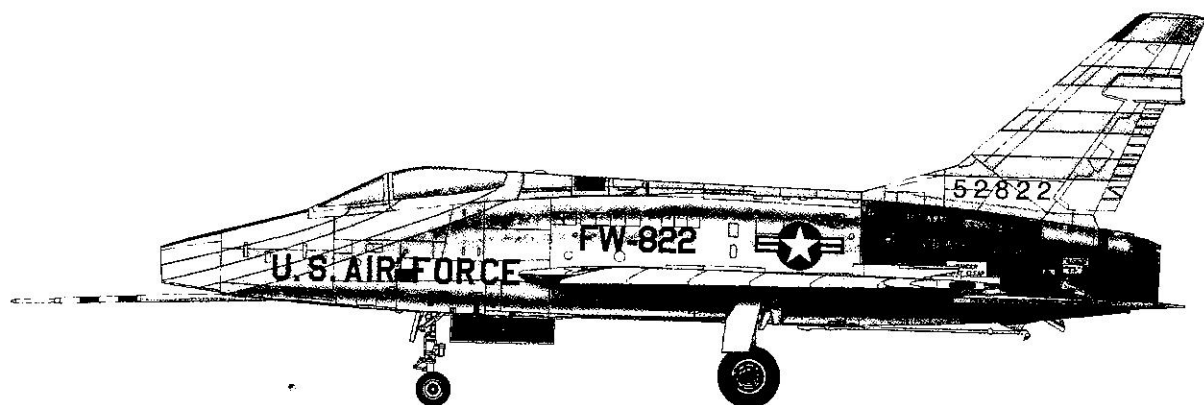

F-100D Super Sabre

F-100D “超佩刀” 战斗机

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements, sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴水上贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。



配重
Weight



使用强力胶
Cyanoacrylate glue



钻孔
Make hole



切除
Cut / Remove



贴纸
Decal



锉平
File / Sand



选择
Option



不涂胶水
No cement



弯曲
Bend

水贴纸的使用:







- 1.从水贴纸上剪下印花;
- 2.将印花放入温水中浸10秒, 然后放在干净布上。
- 3.拿着印花纸板将印花移到模型上;
- 4.手指蘸水将印花移到适当的位置;
- 5.用软布轻压印花直至水干, 气泡消失

DECAL APPLICATION

- 1.Cut decals from sheet as needed
- 2.Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
- 3.Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.



- 4.While still wet,decal can be adjusted for better fit on model by dampening it gently with your finger.
- 5.When placed in the proper position,gently press decal down with a soft cloth until excess water and air bubbles are gone.
- 6.Allow decal to dry completely before handling model

部品图 Parts

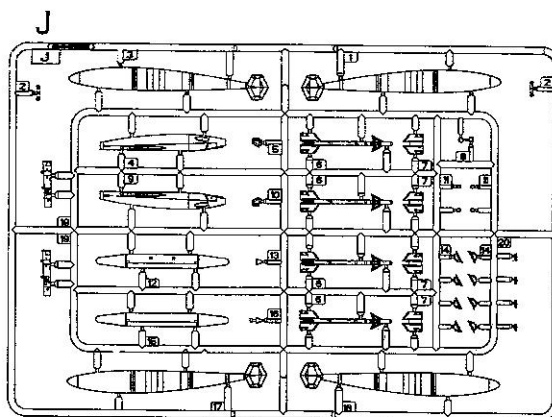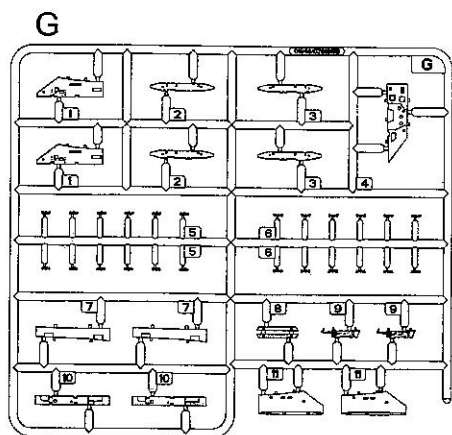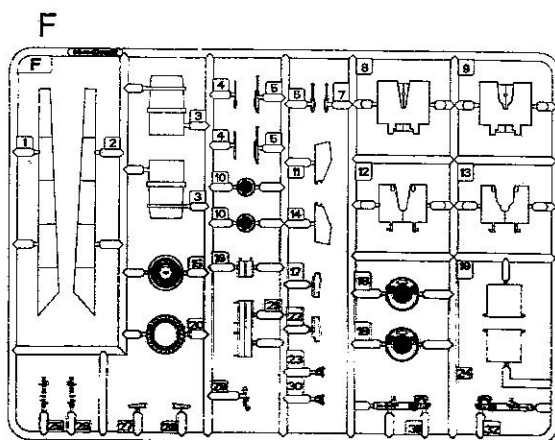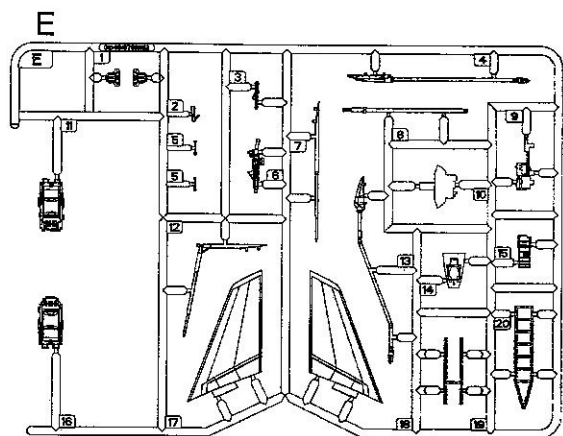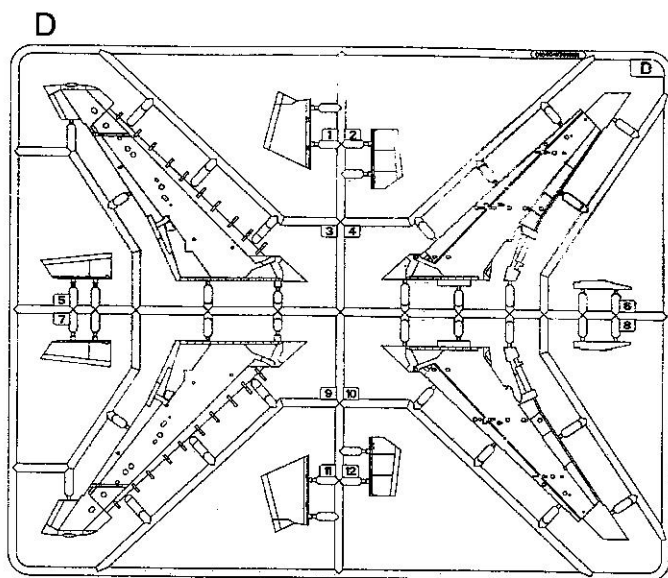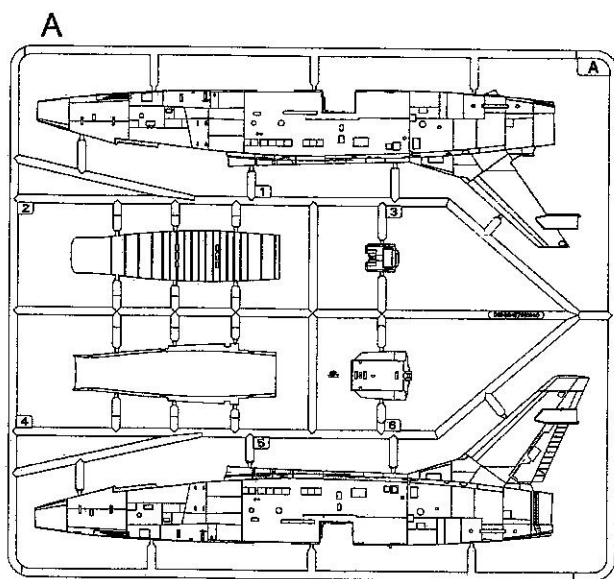

《水帖》
Decal


B

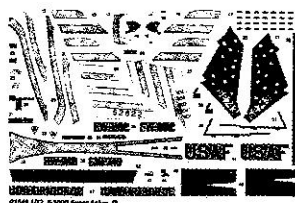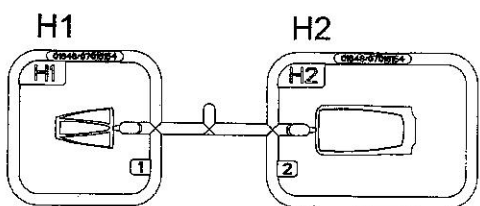

不用的部件: E11
Unused parts


1

《座舱》
Cockpit

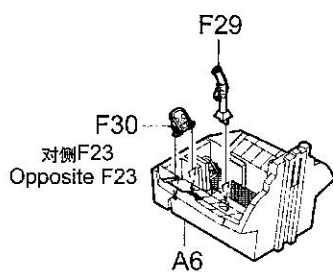

H 3 3
红色
Red

贴纸
Decal

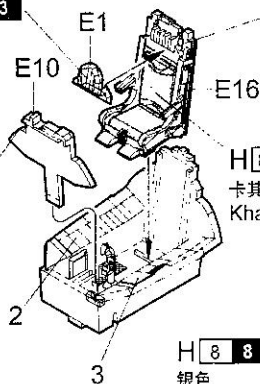

H 12 33
消光黑
Flat black

H 81 55
卡其色
Khaki

H 8 8
银色
Silver

A2+A4

2


《减速板》
Air brake

H 8 8
银色
Silver

选择
Option

F12

H 58 27
机体内部色
Interior Green

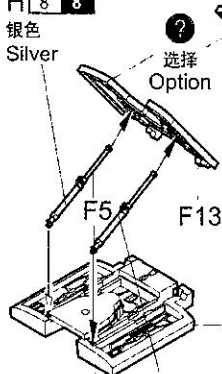

选择
Option

F8

H 8 8
银色
Silver


3

《发动机》
Engine




H 22 28
黑铁色
Steel

F3+F3




H 76 61
烧铁色
Burnt Iron

4

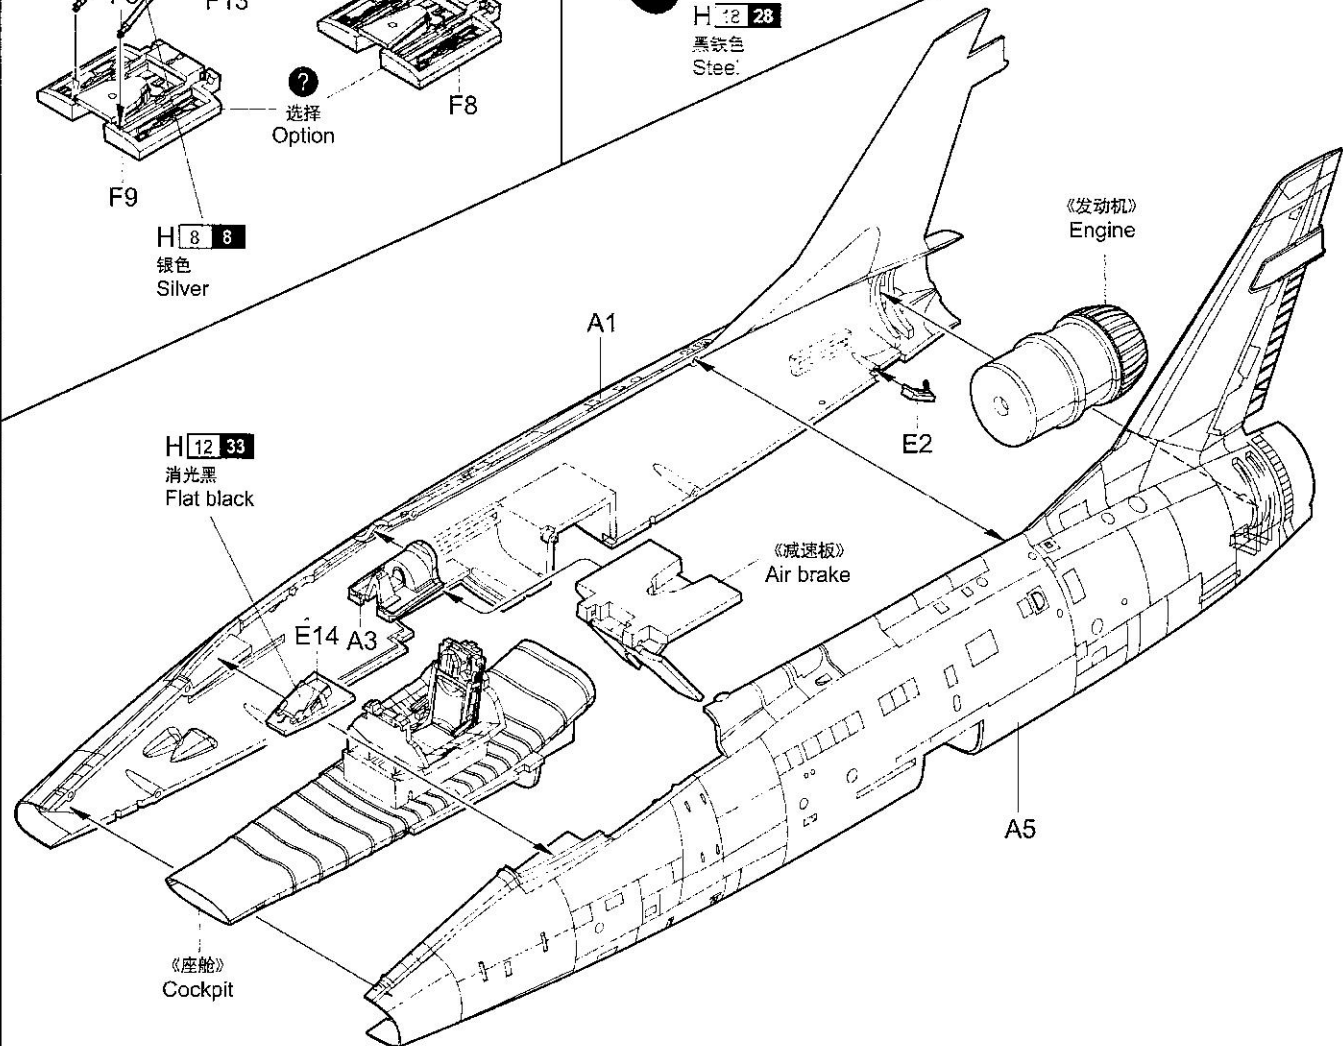


5

《左侧机翼》
Left wing

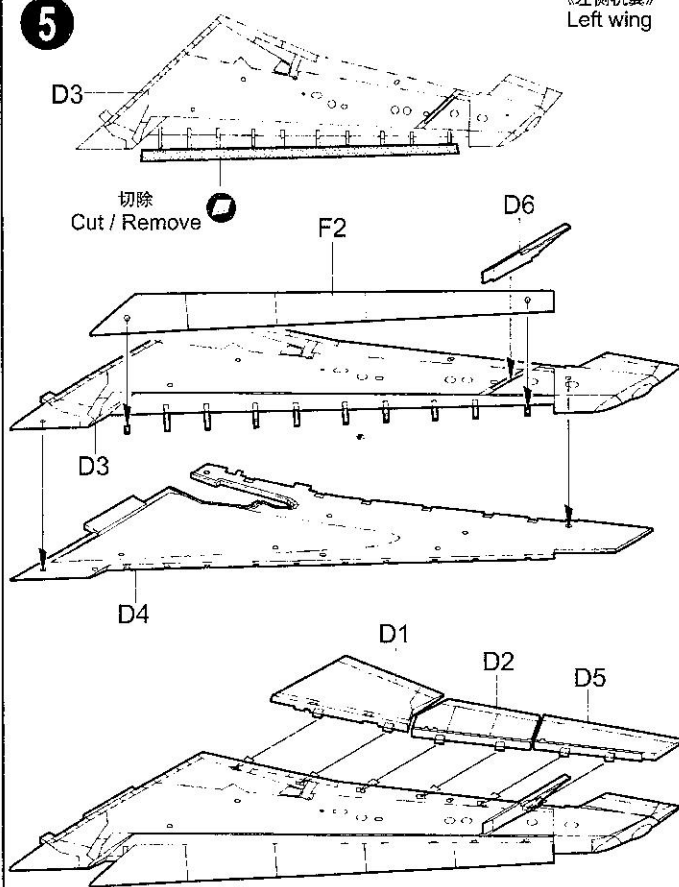

6

《右侧机翼》
Right wing

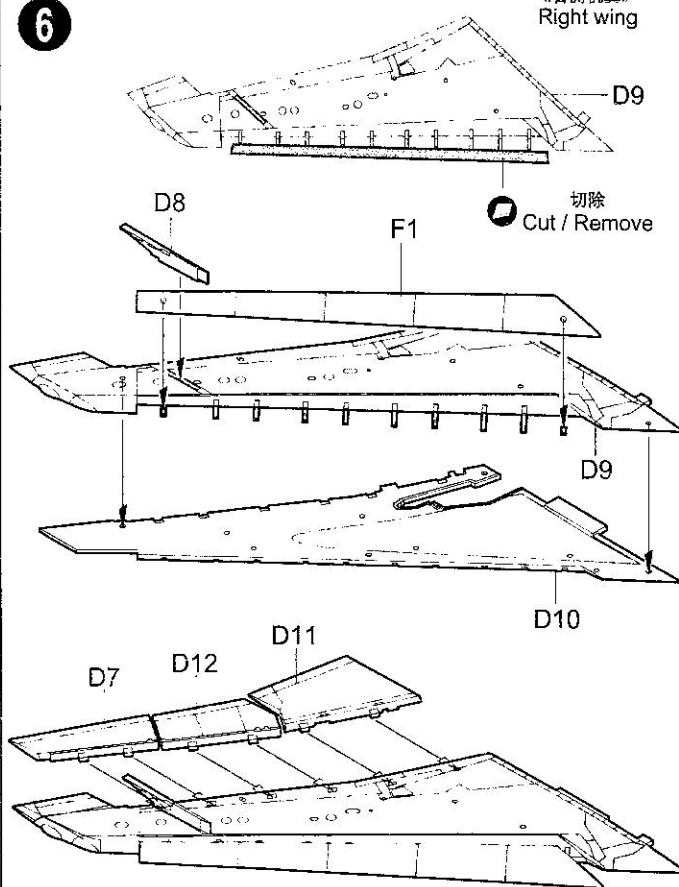


7


《右侧机翼》
Right wing

Opposite E17
对侧E17
E18

《左侧机翼》
Left wing

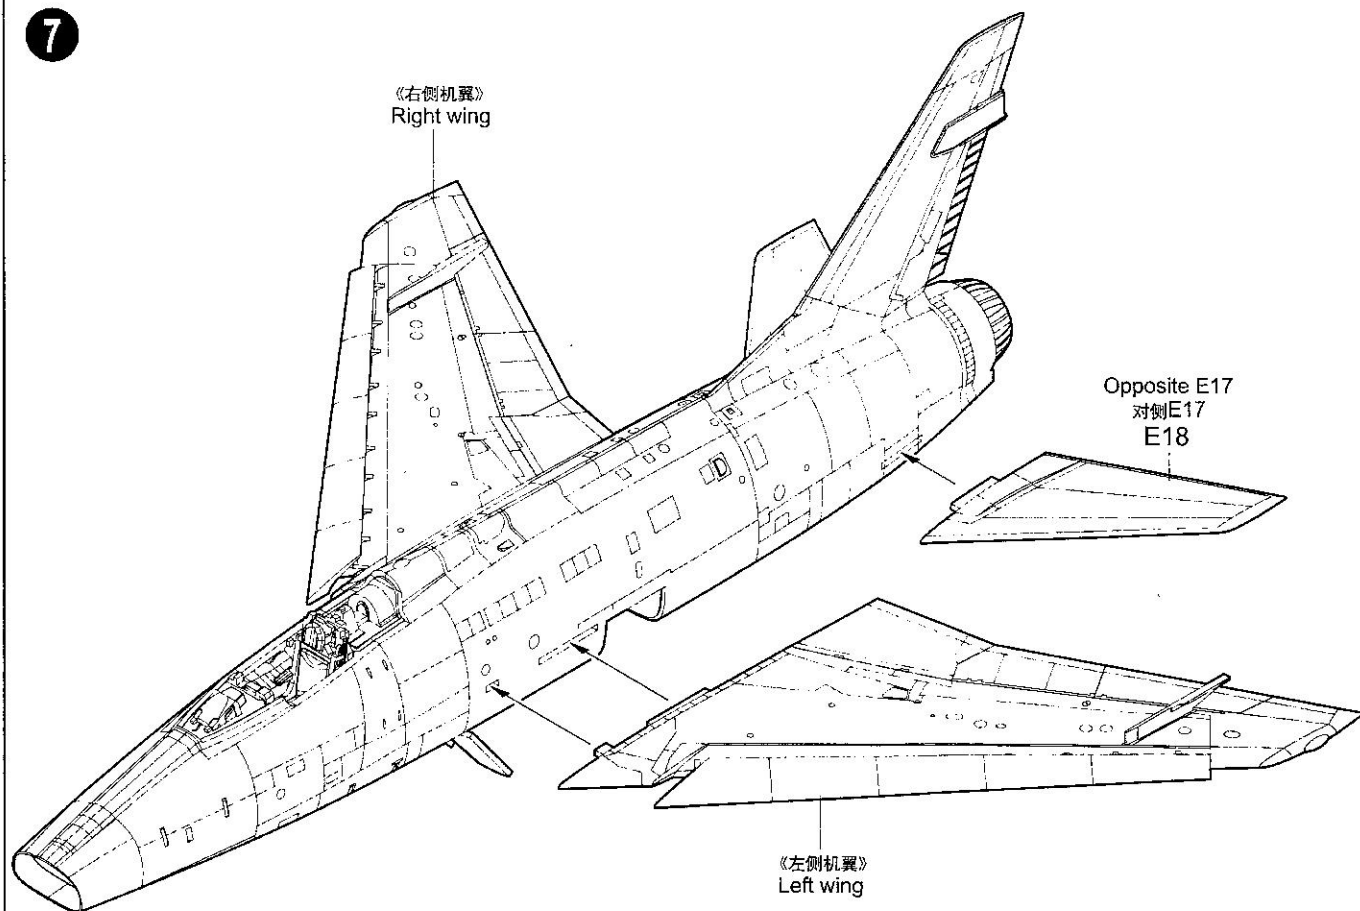


8

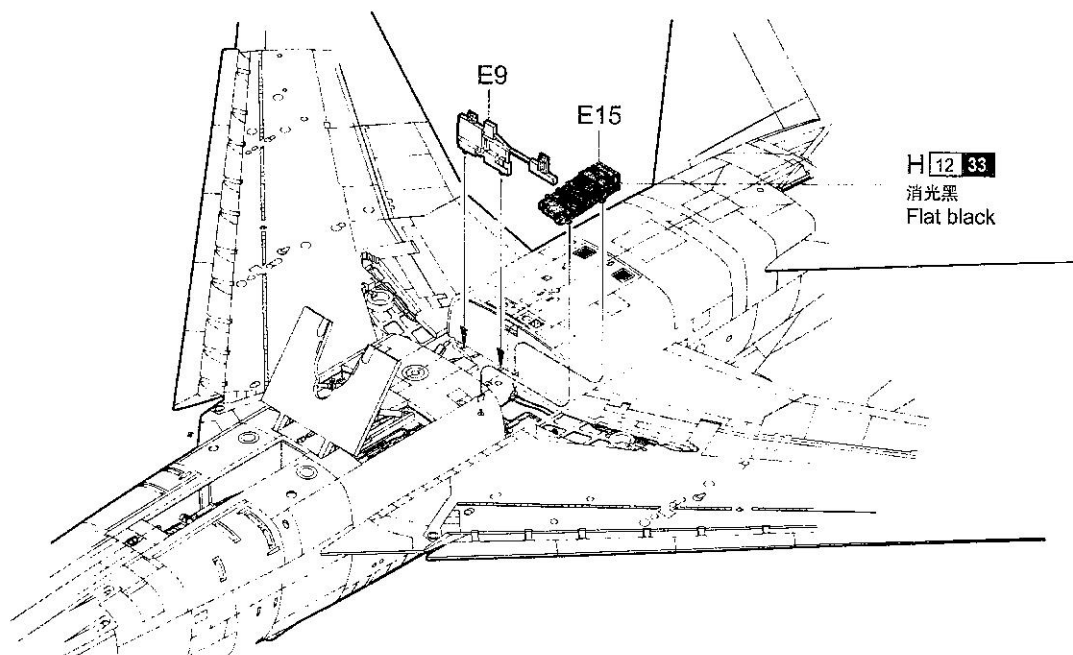


9

《左侧轮舱盖板》
Left gear cabin cover


《右侧轮舱盖板》
Right gear cabin cover

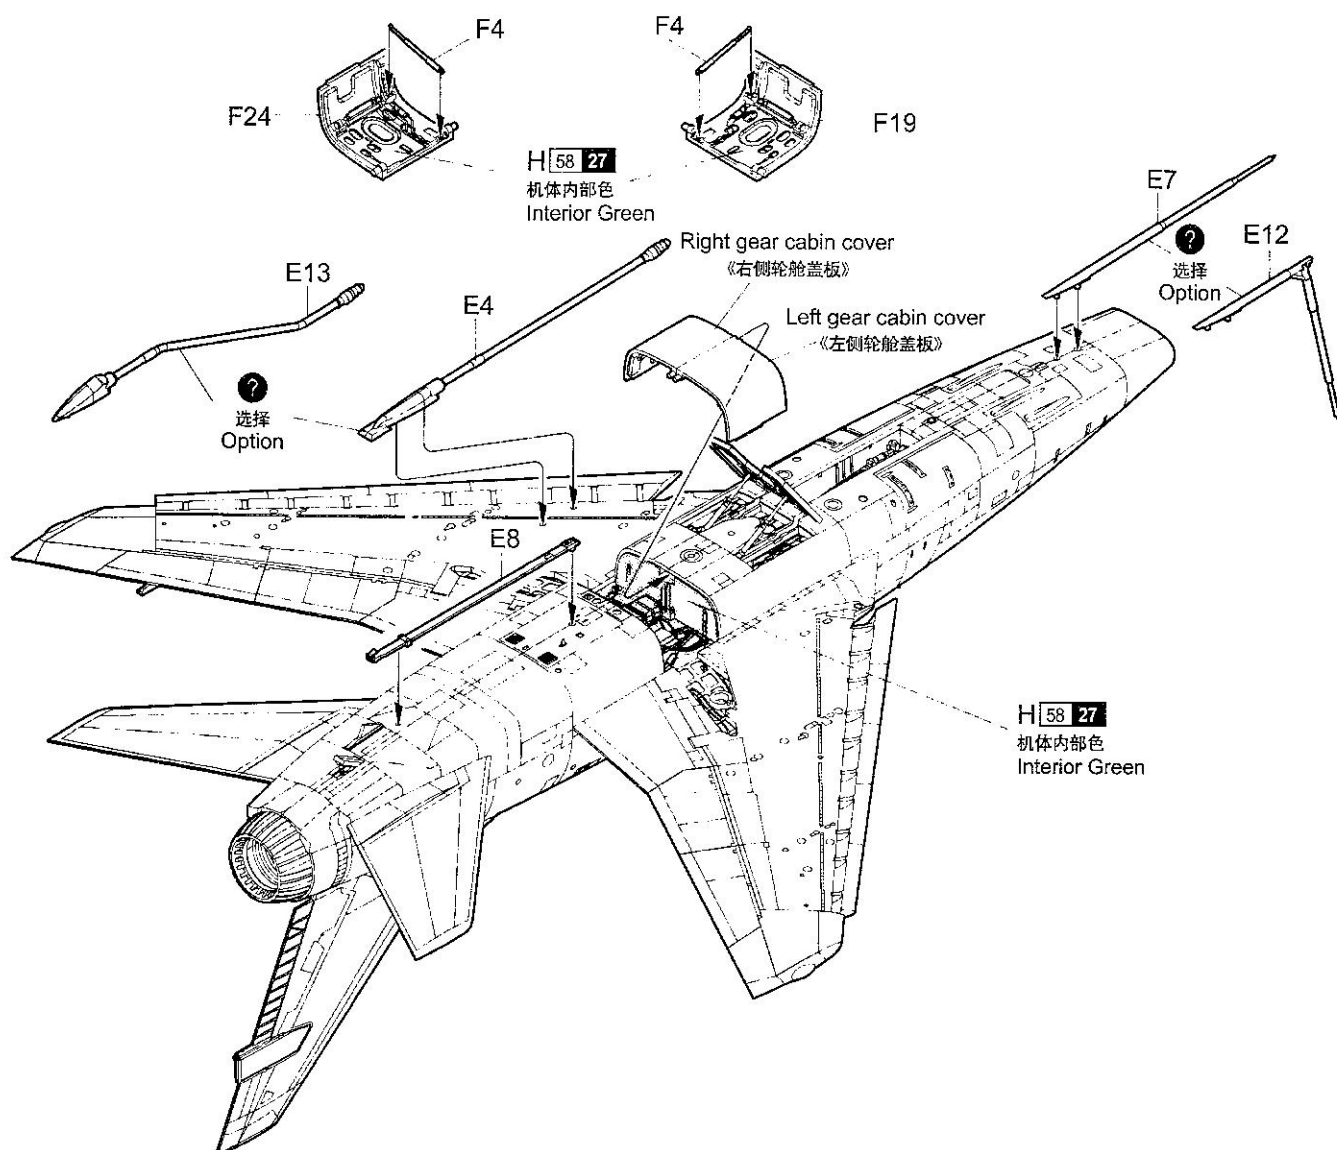


10 《左侧起落架》
Left undercarriage

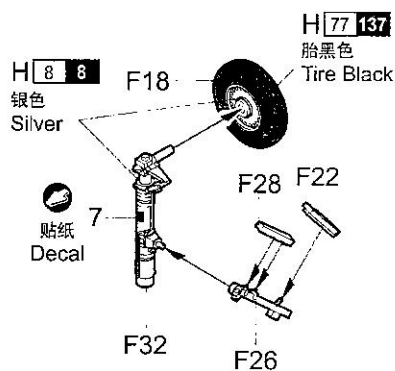


11 《右侧起落架》
Right undercarriage

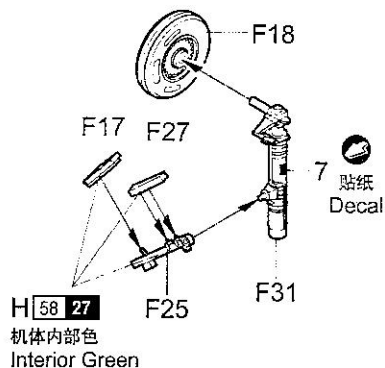


12 《前起落架》
Nose undercarriage

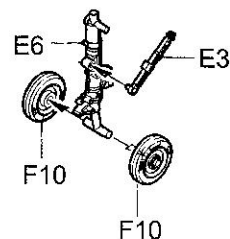


13

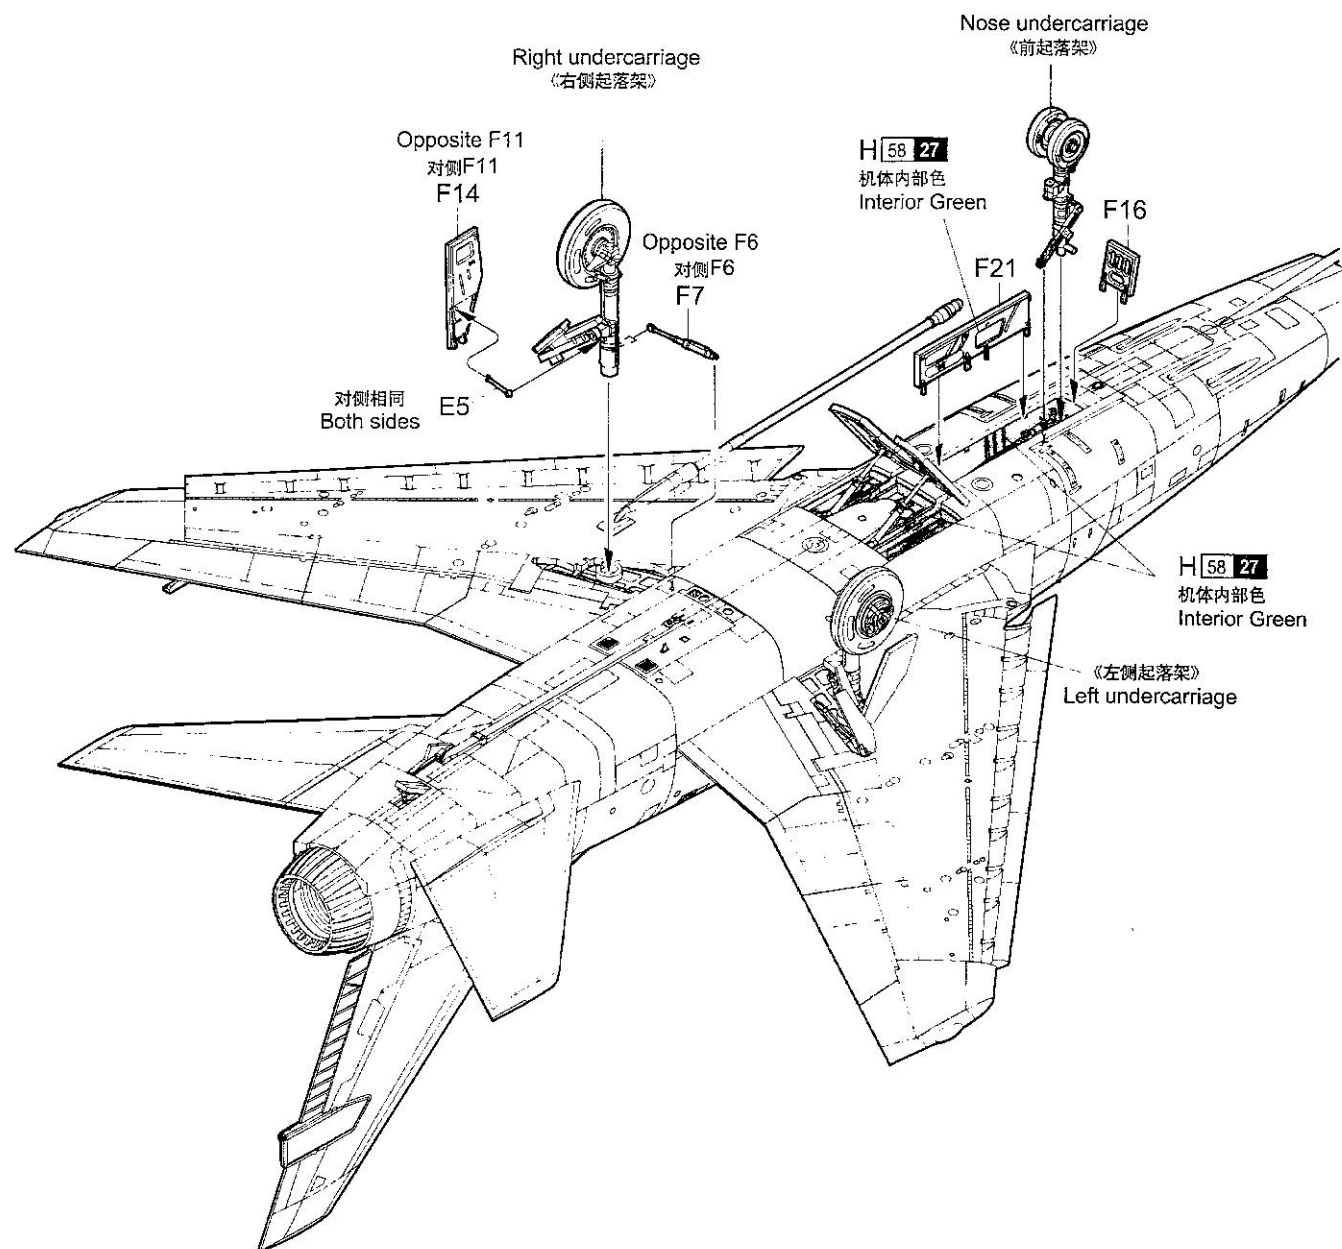


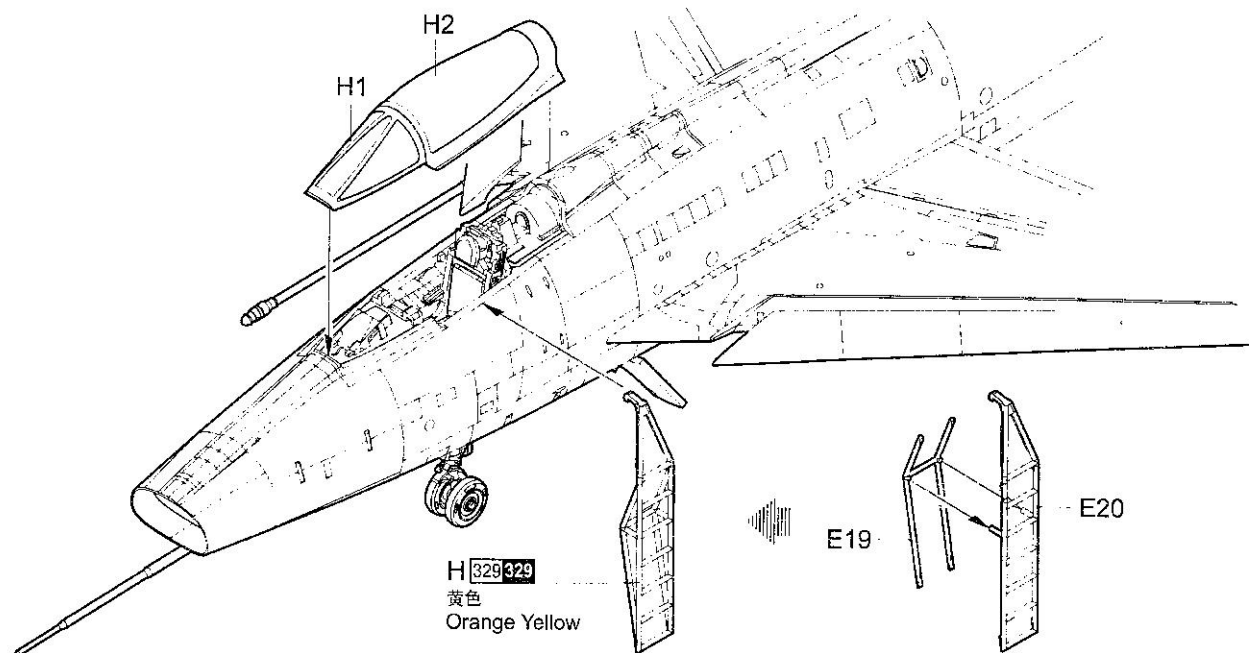

《AIM-9D》


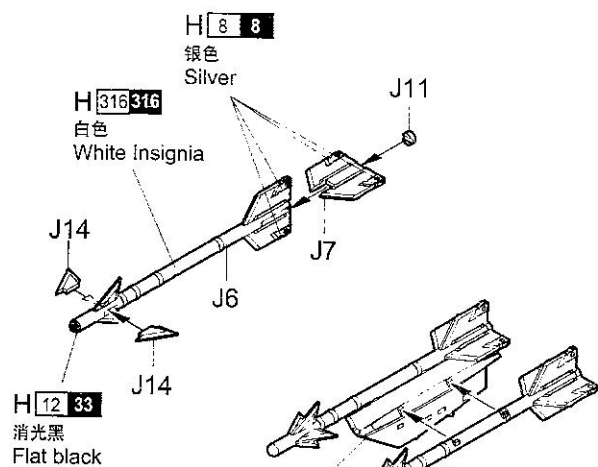


制作两组
Make two




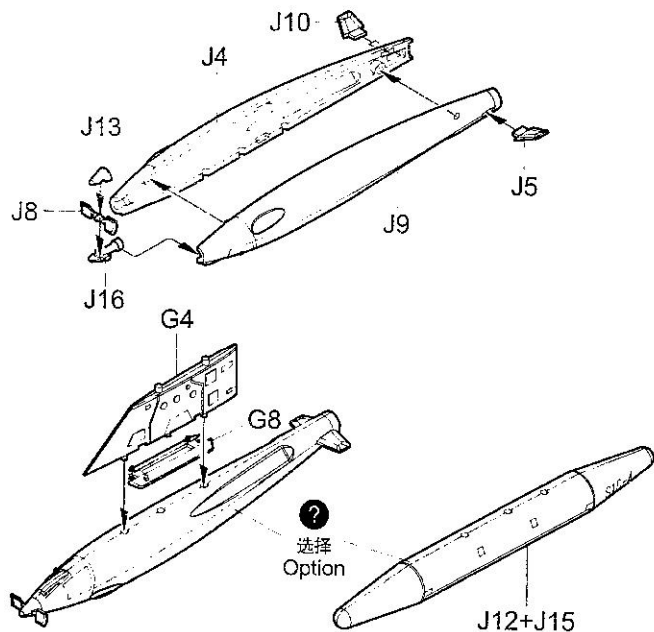


《ALQ-31》


《Practice Bomb》

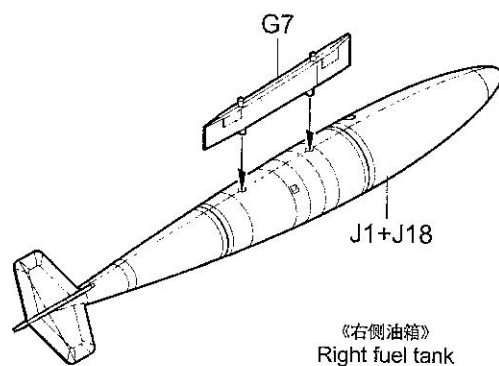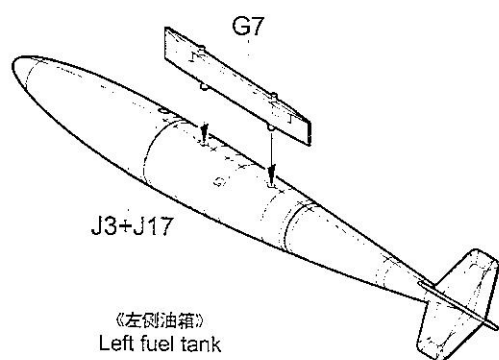

15

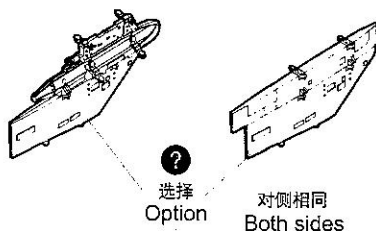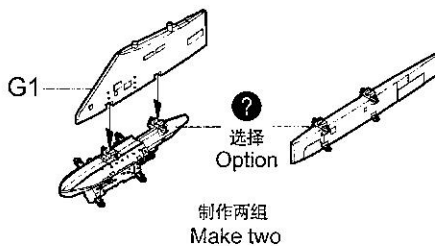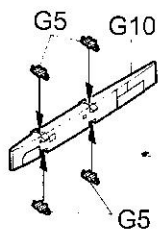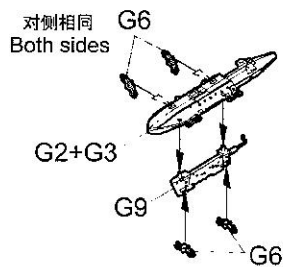

《ALQ-31》

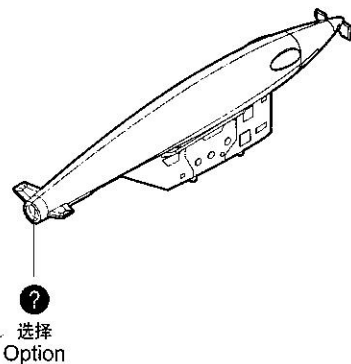

Right fuel tank
《右侧油箱》

J2 对侧相同
Both sides

《Practice Bomb》

《左侧油箱》
Left fuel tank

J20

J19

制作两组
Make two

对侧相同
Both sides

