


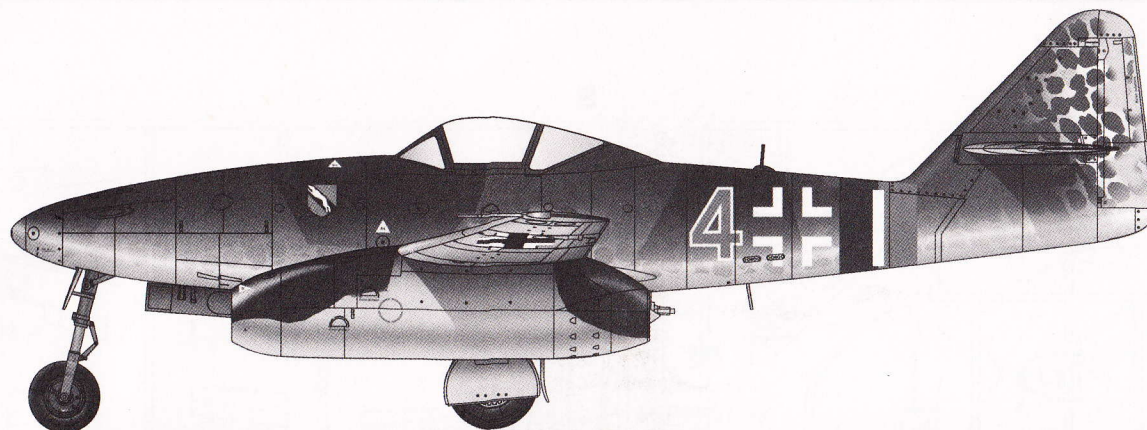

Messerschmitt Me 262 A-1a

1:32 SCALE

梅塞斯密特 Me 262 A-1a

READ BEFORE ASSEMBLY

装配之前仔细阅读

- Study and understand these instructions thoroughly before beginning assembly. Make sure all parts are included by comparing them to those shown on pages 2 & 3 of these instructions.
- Remove parts from sprues as needed, and trim excess with a hobby knife. Be careful not to lose small parts.
- Remove photo-etch parts from sprue as needed using a hobby knife or photo etch cutter.
- Apply cement to photo etch parts as shown on instructions. Applying too much cement will restrict the operation of these

movable parts. Apply cement carefully! Removed photo etch parts can have sharp edges. Take care when handling these to avoid injury.

- Apply decals to necessary parts prior to assembly.
- Additional tools recommended(not included):Sprue cutter, Long nose pliers, hobby knife, file, tweezers, pin vise, scissors, cement, sandpaper, soft cloth, glue and paint.
- Keep all parts out of reach of children, as they pose a choking hazard. Discard all unnecessary bags and sprues when model is completed to avoid accidental injury.

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴水上贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。
- 谨防小孩吸吮塑料零件，或者将塑料袋套在头上，制作时应将套材远离小孩接触。

水贴纸的使用:

DECAL APPLICATION

1. 从水贴上剪下印花;
2. 将印花放入温水中浸10秒，然后放在干净布上。
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至水干，气泡消失。

1. Cut off decal from sheet.
2. Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.



cyanoacrylate glue
使用强力胶



weight
配重



make hole
钻孔



cut / remove
切除



option
选择



no cement
不涂胶水



decal
贴纸




bend
弯曲




file / sand
锉平

部品图 Parts


A

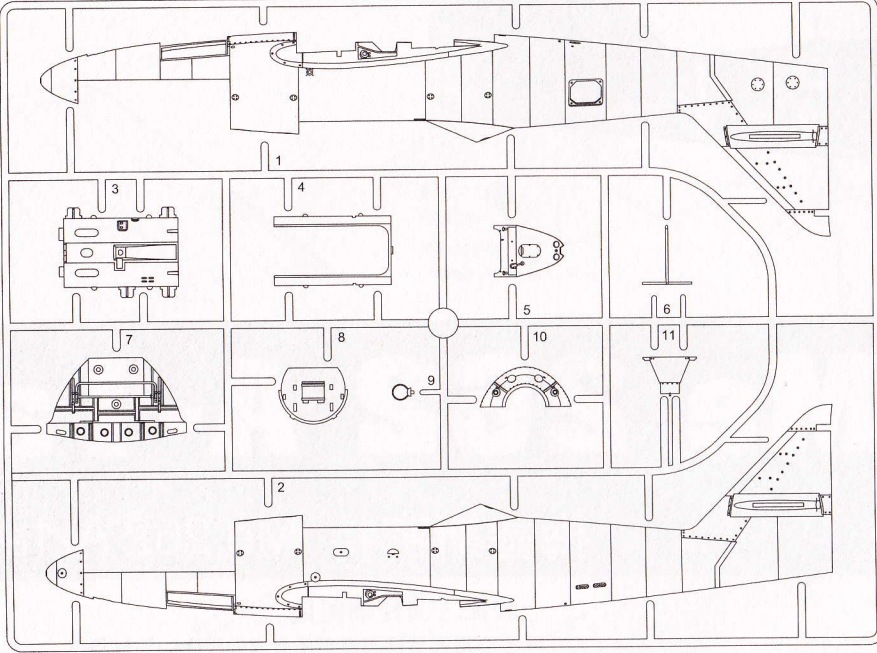


B

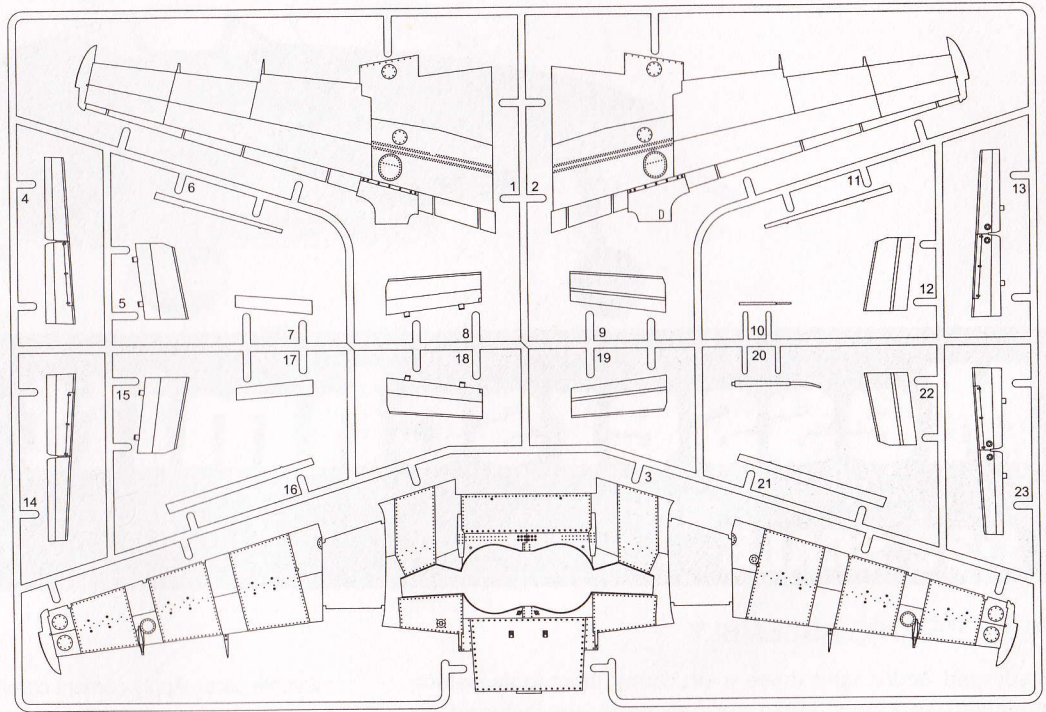


E x 2

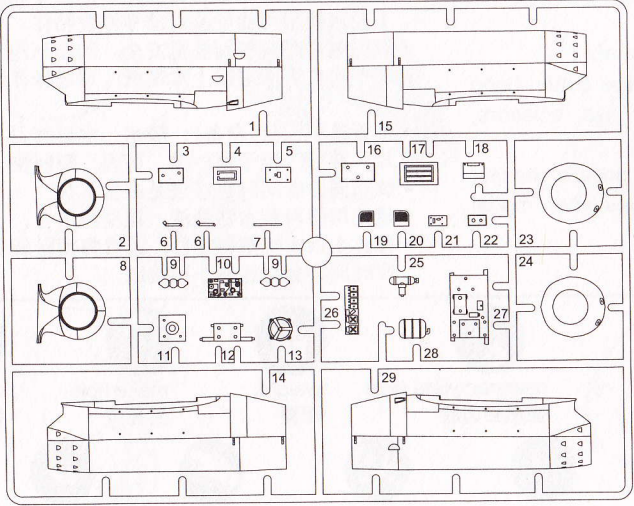


F x 2

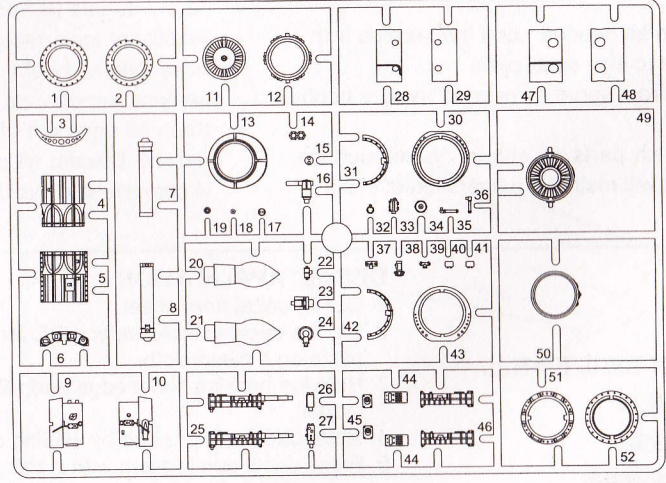

C

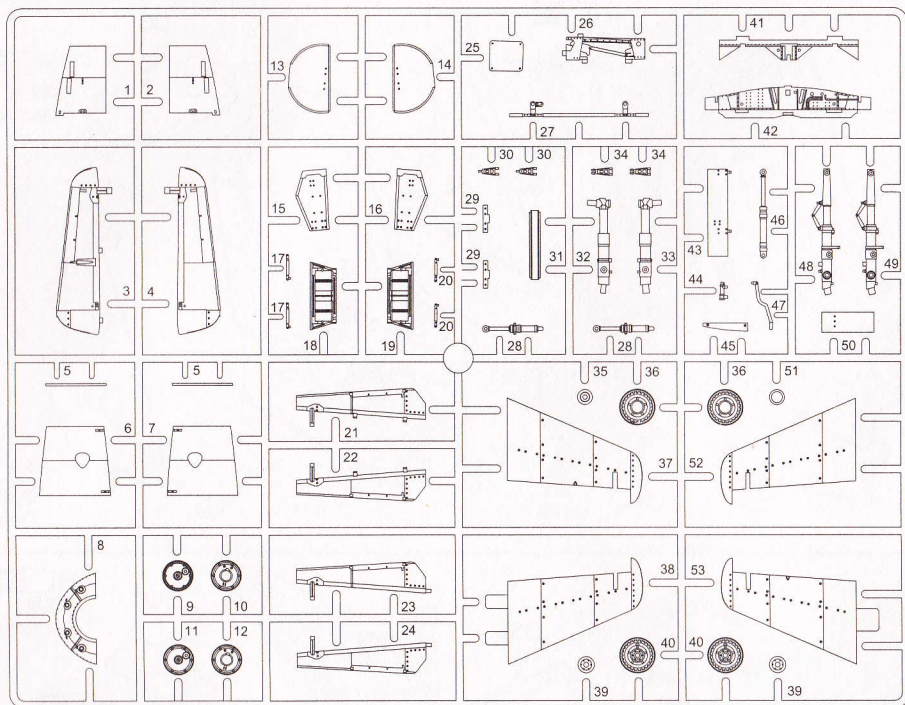

前轮胎 (窄)
Nose tire(narrow)




前轮胎 (宽)
Nose tire(wide)

金属件
Metal parts


《贴纸》
Decal




主轮胎
Main tire

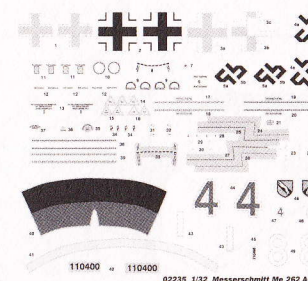


D

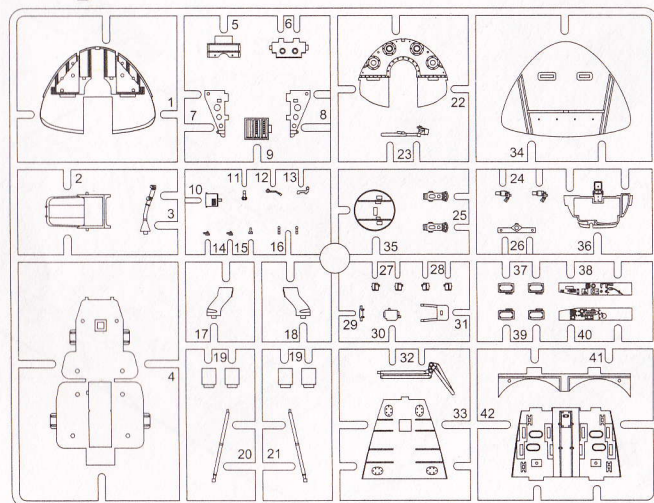


蚀刻片
Photo etched part

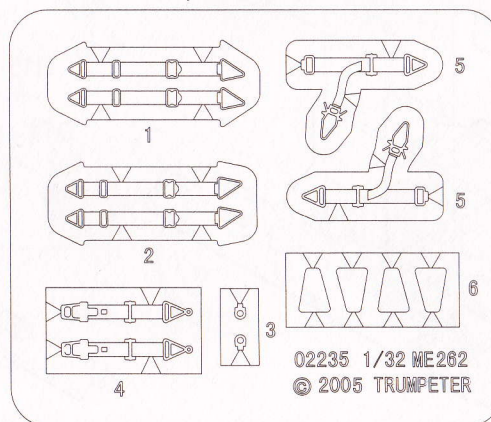

G

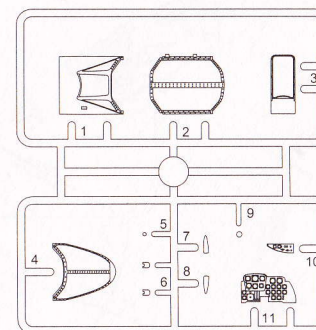


《菲林片》
Film

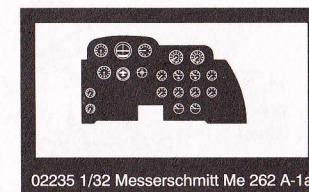


02235 1/32 Messerschmitt Me 262 A-1a


1 座椅的组装 Seat assembly

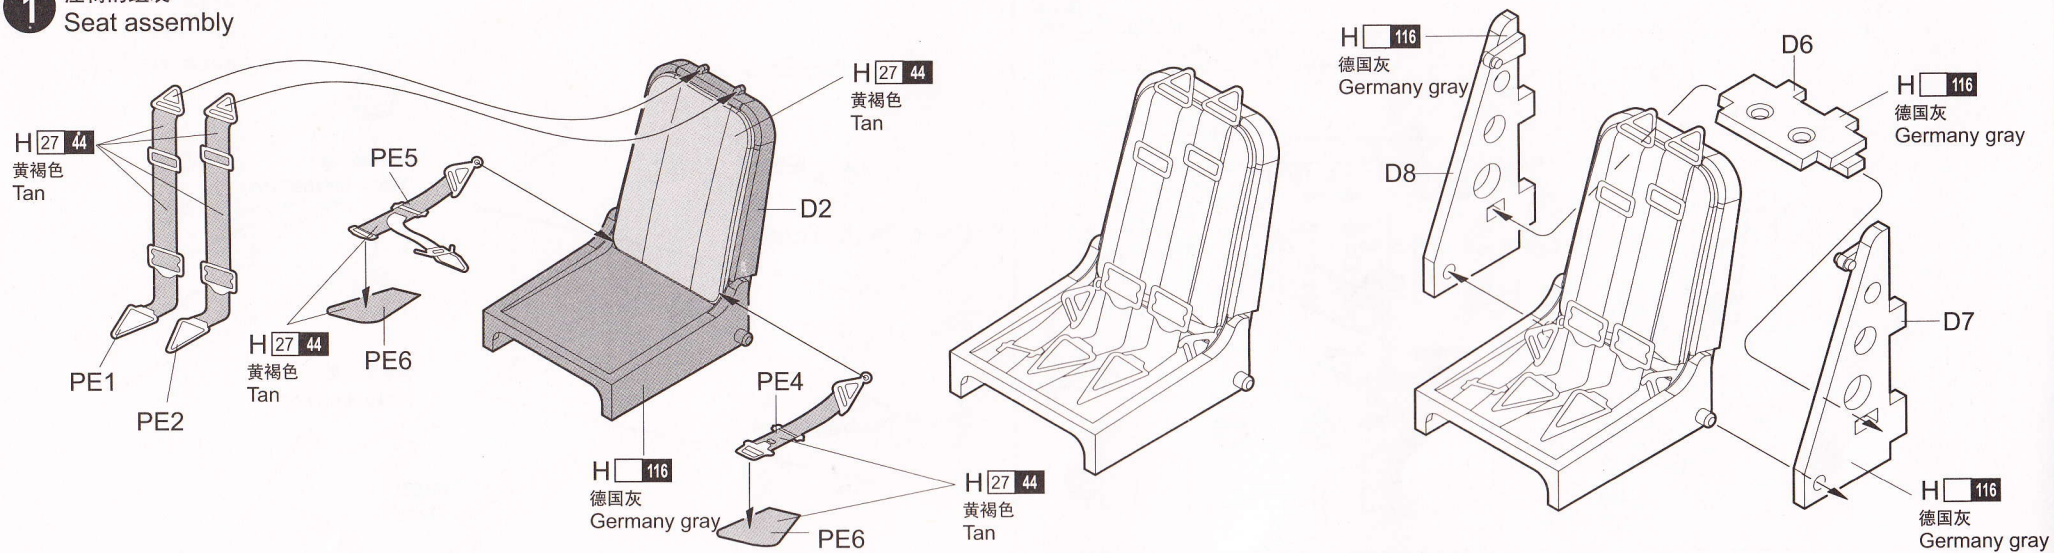


2 座舱的组装 Cockpit assembly

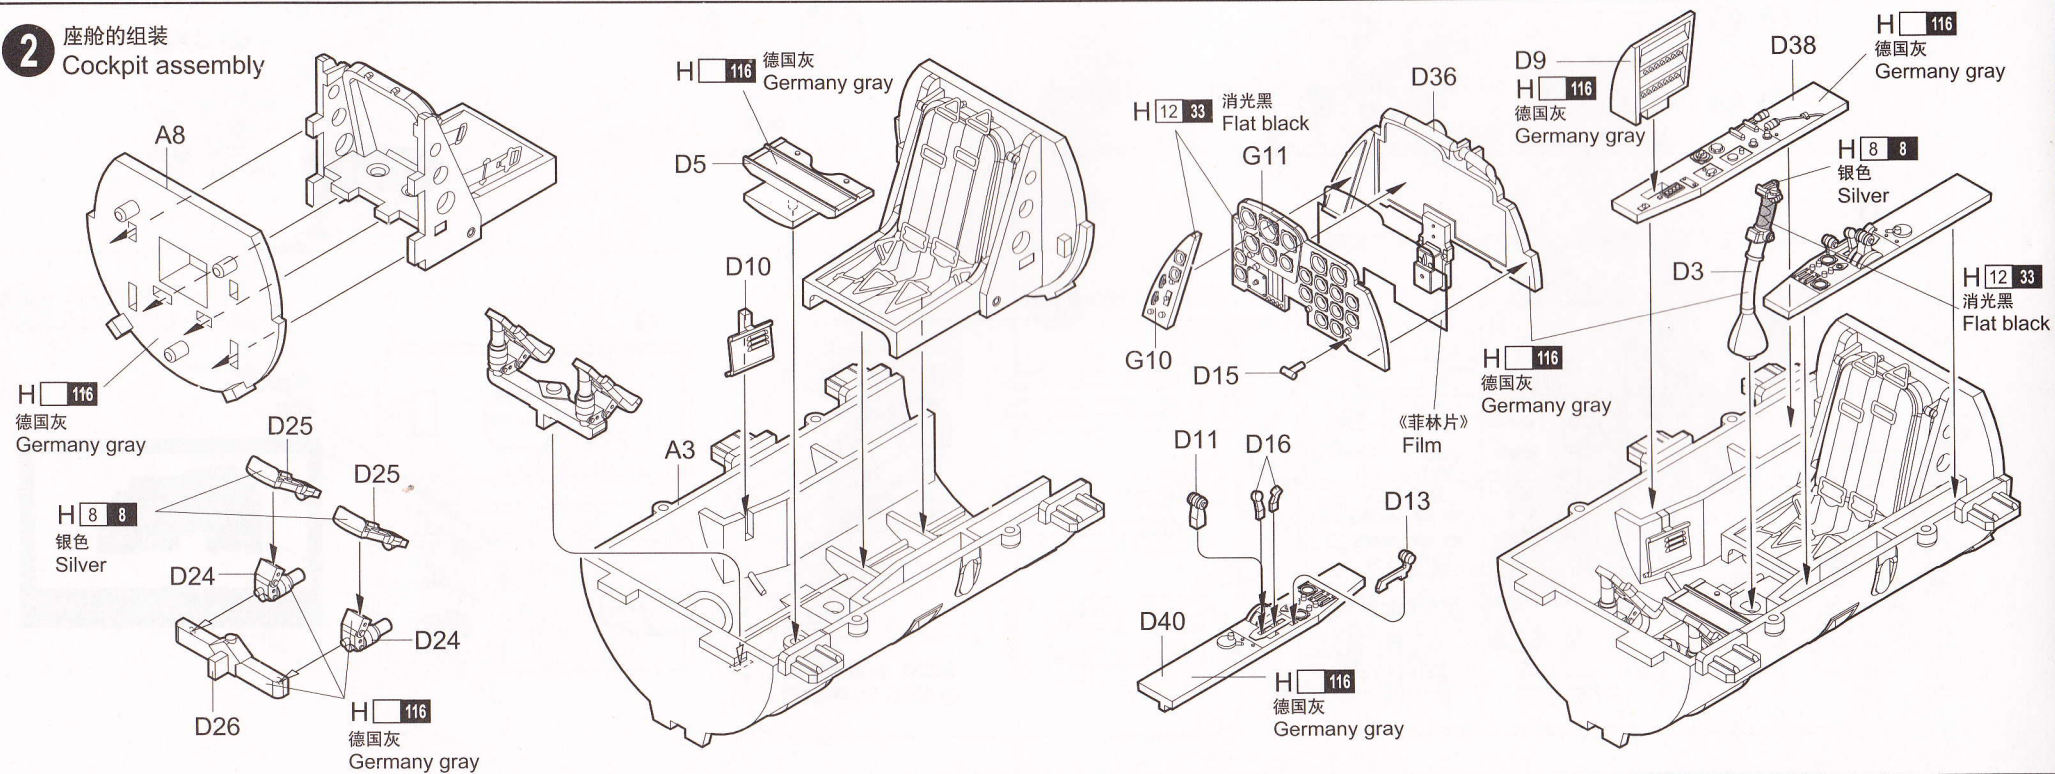


3 座舱的组装 Cockpit assembly

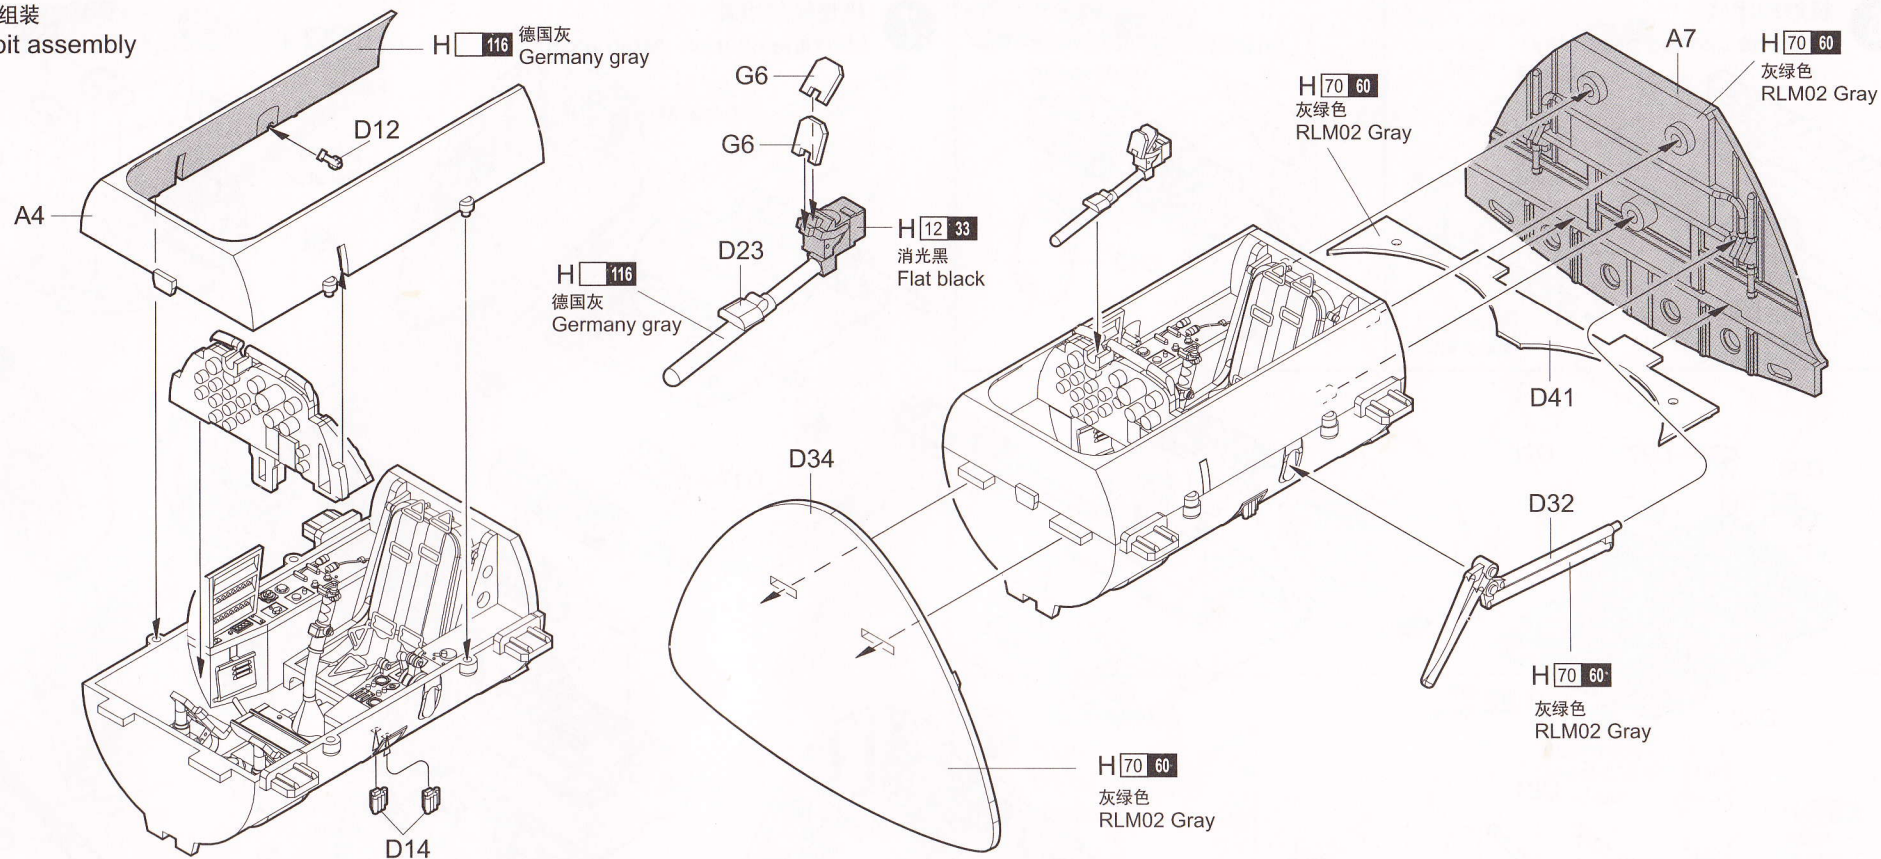







4 前起落架的组装(窄) Nose undercarriage assembly(Narrow)

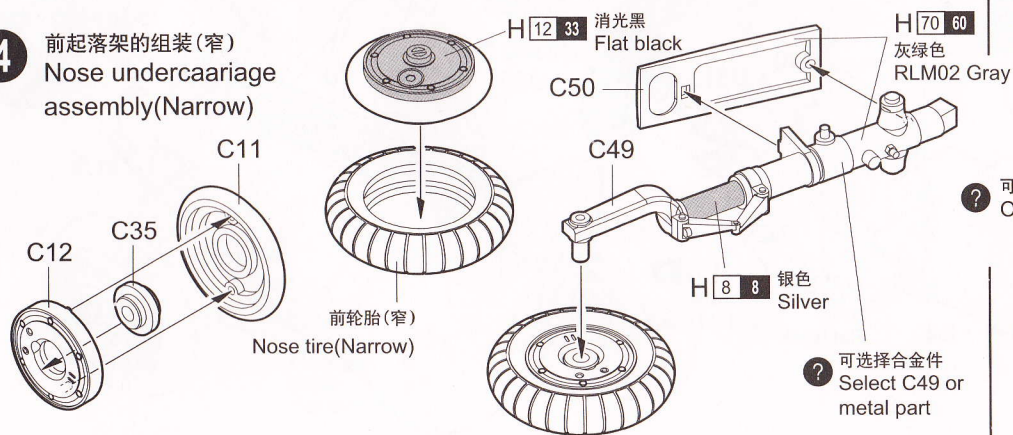







5 前起落架的组装(宽) Nose undercarriage assembly(Wide)




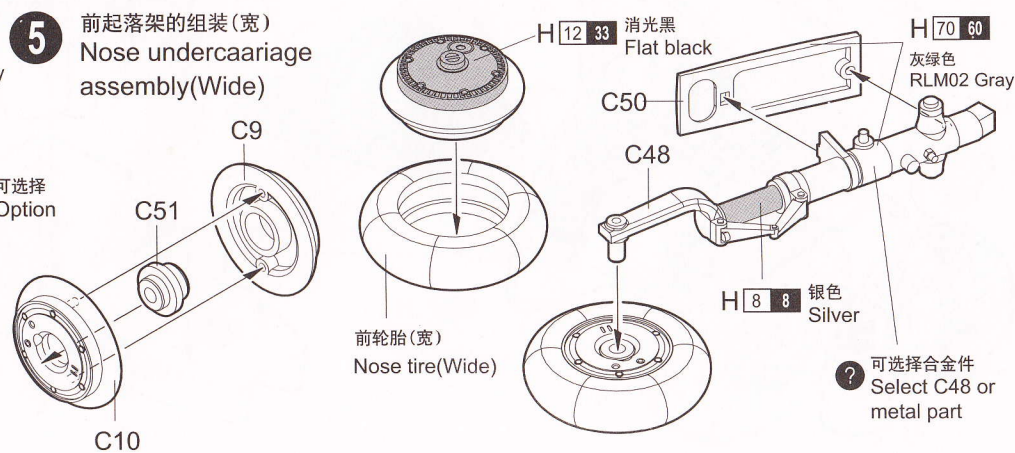


6 机炮的组装 Machine cannon assembly

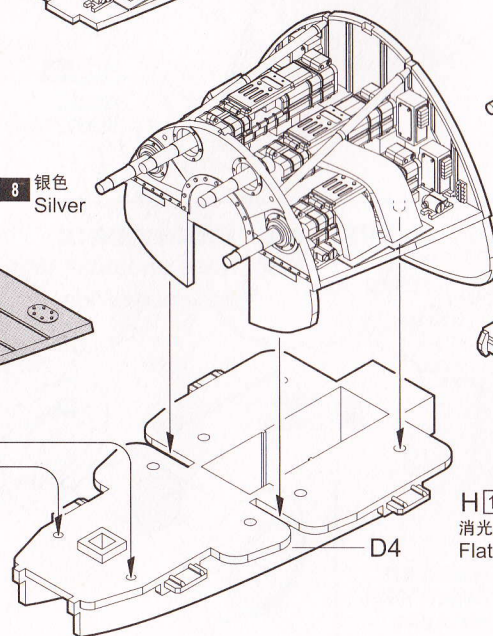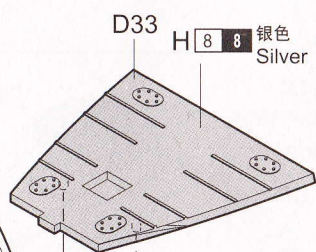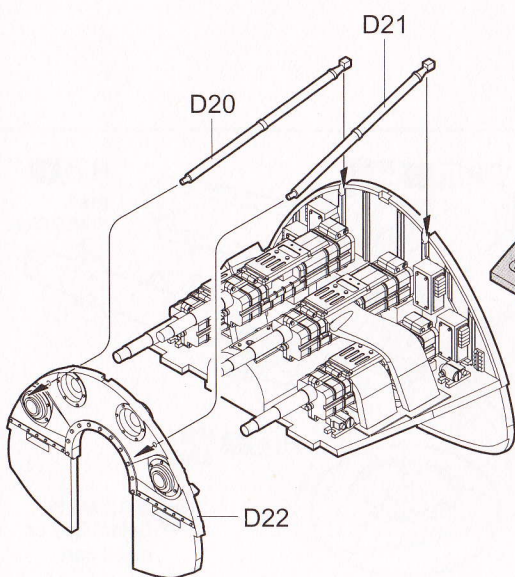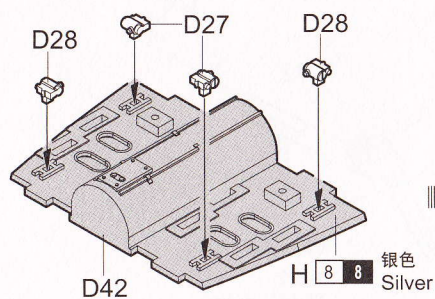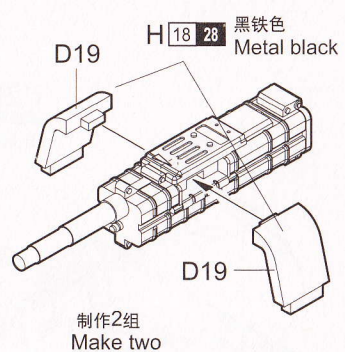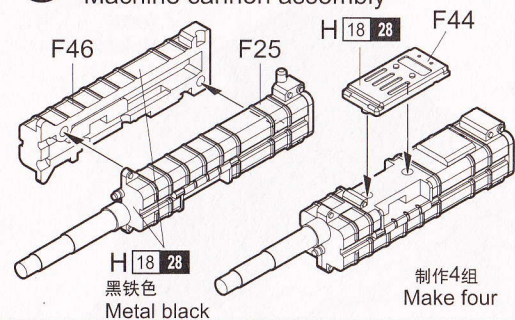


7 机炮舱的组装 Machine cannon cabin assembly

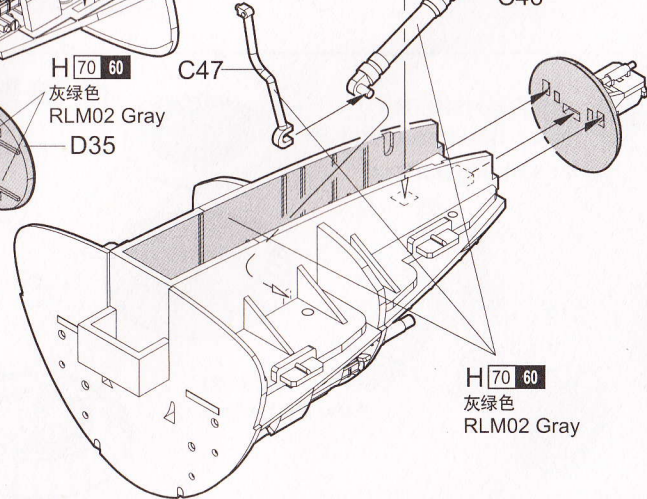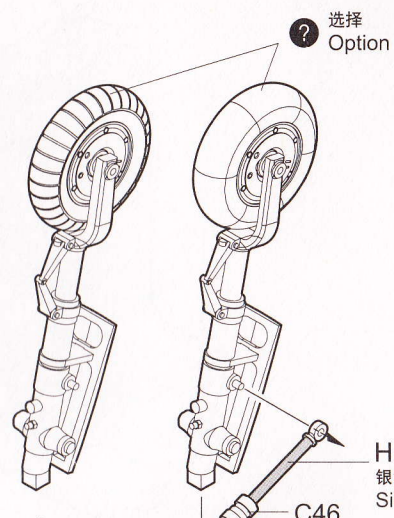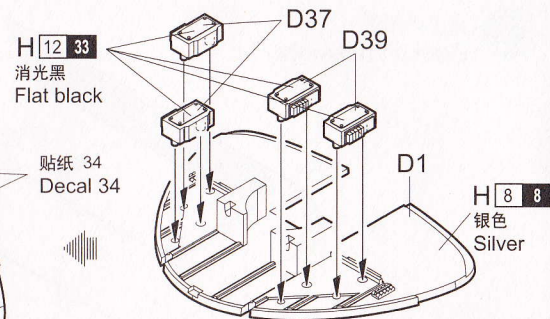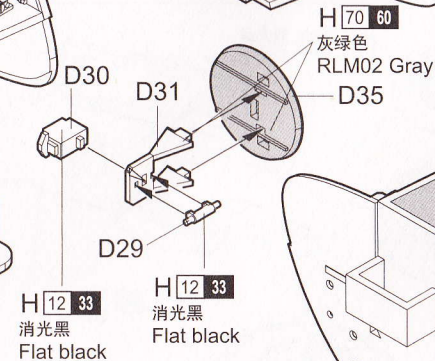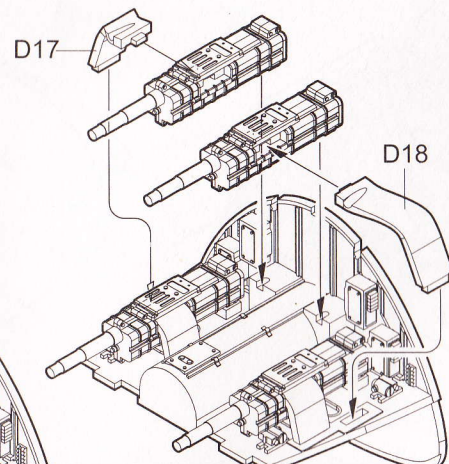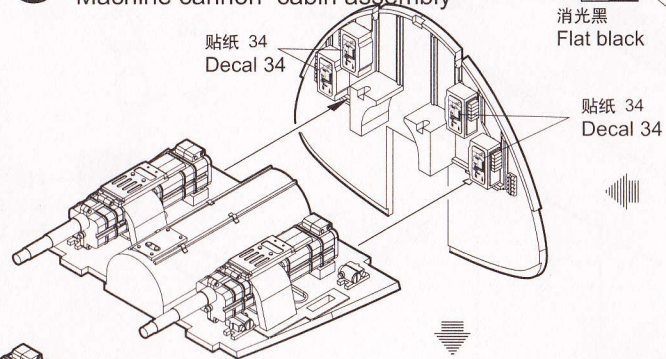


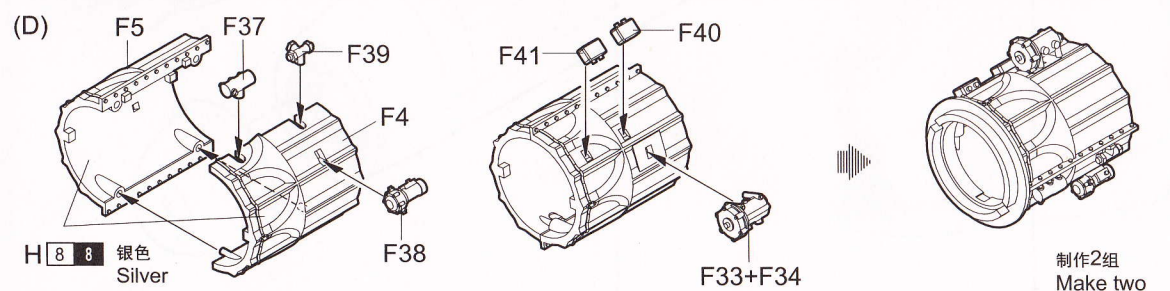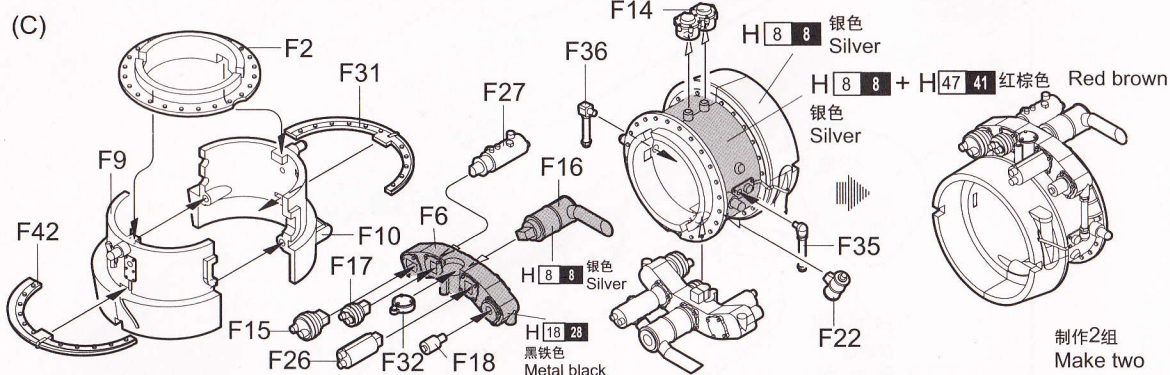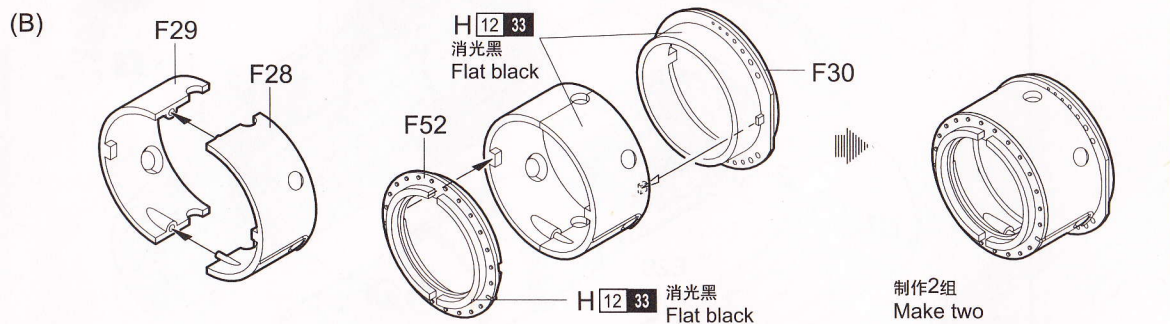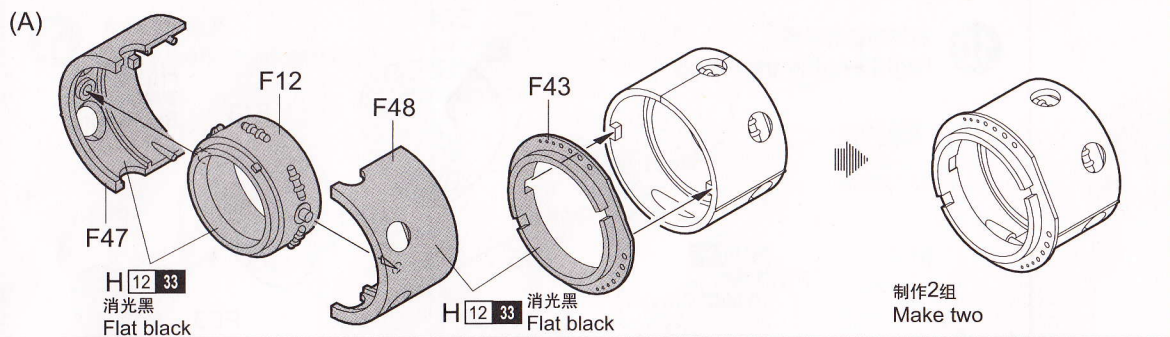


8 发动机的组装 Engine assembly

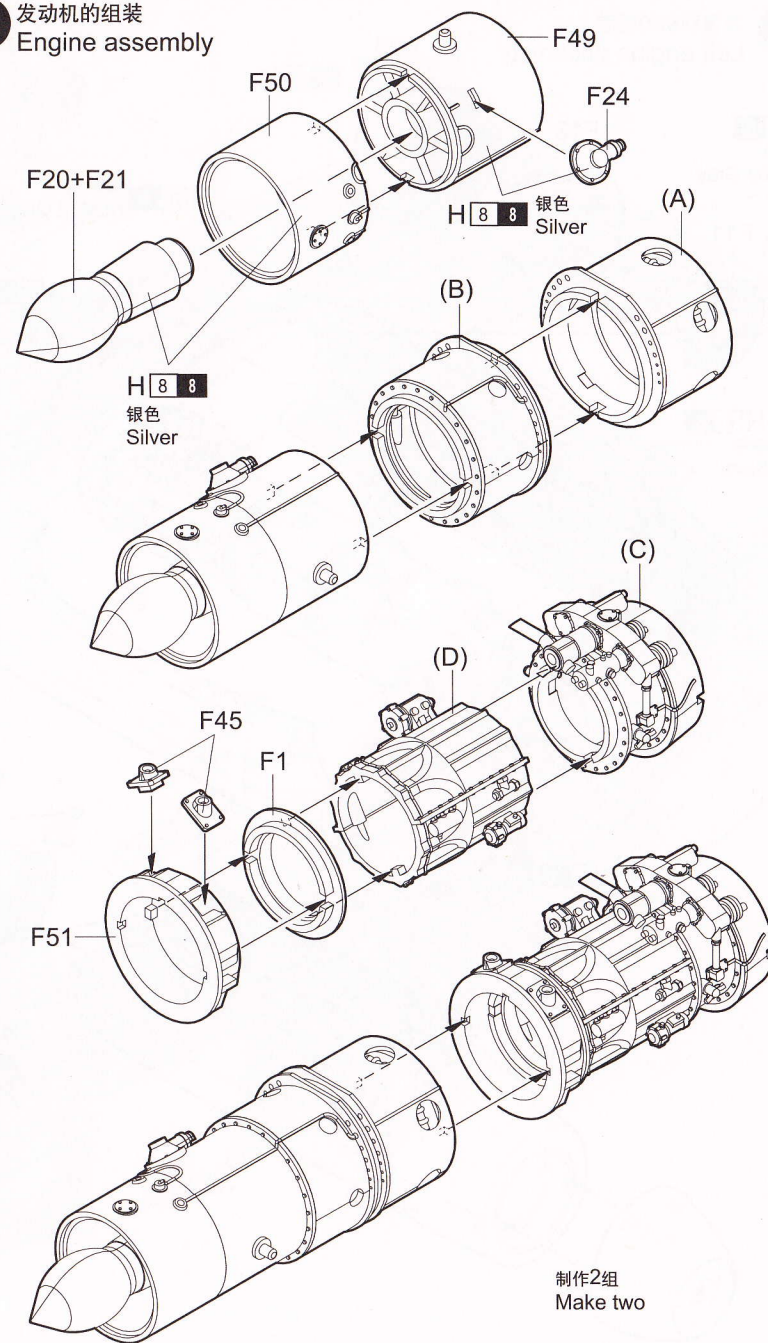


9 左发动机的组装 Left engine assembly

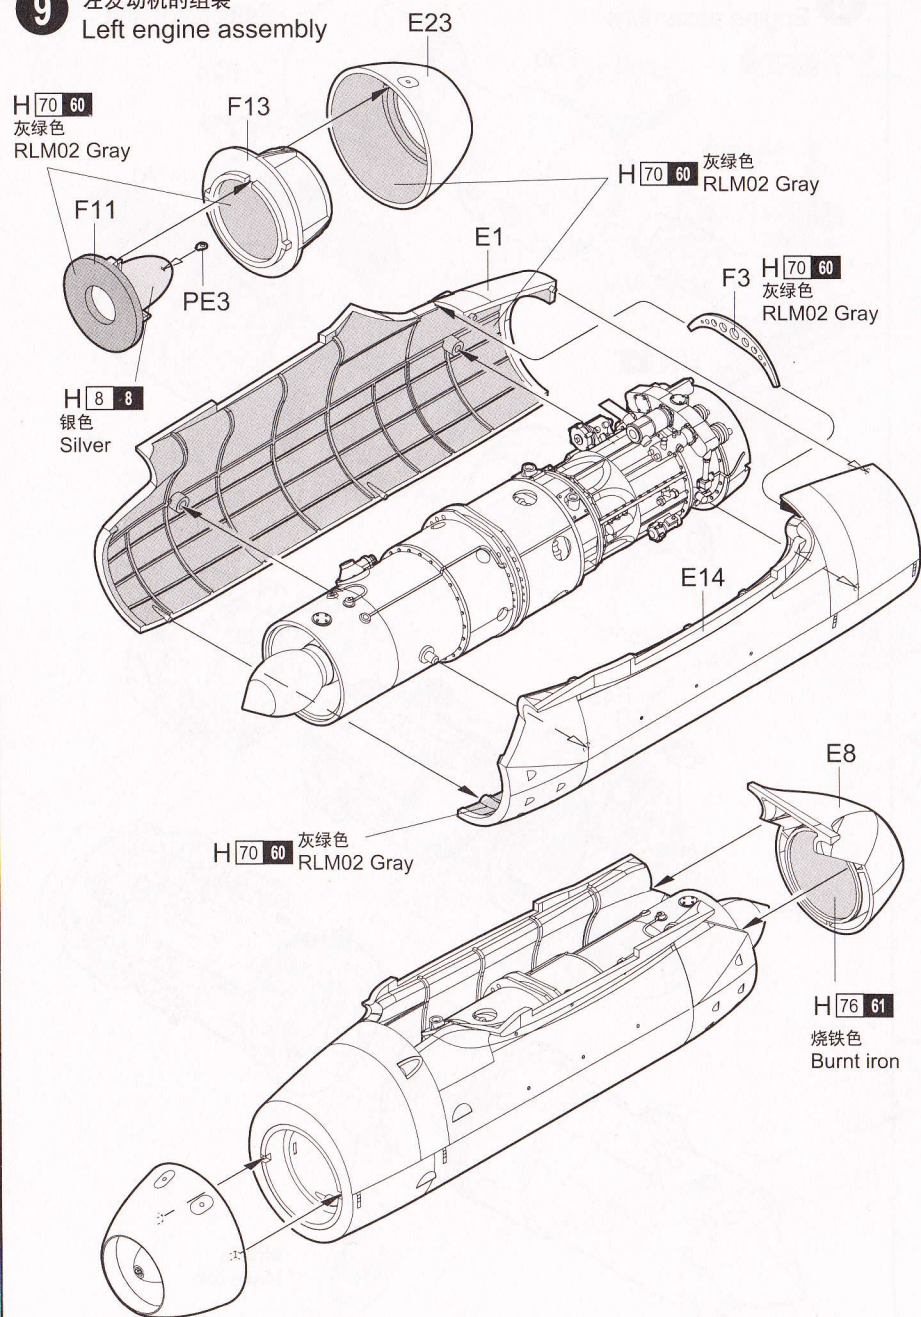


10 右发动机的组装 Right engine assembly

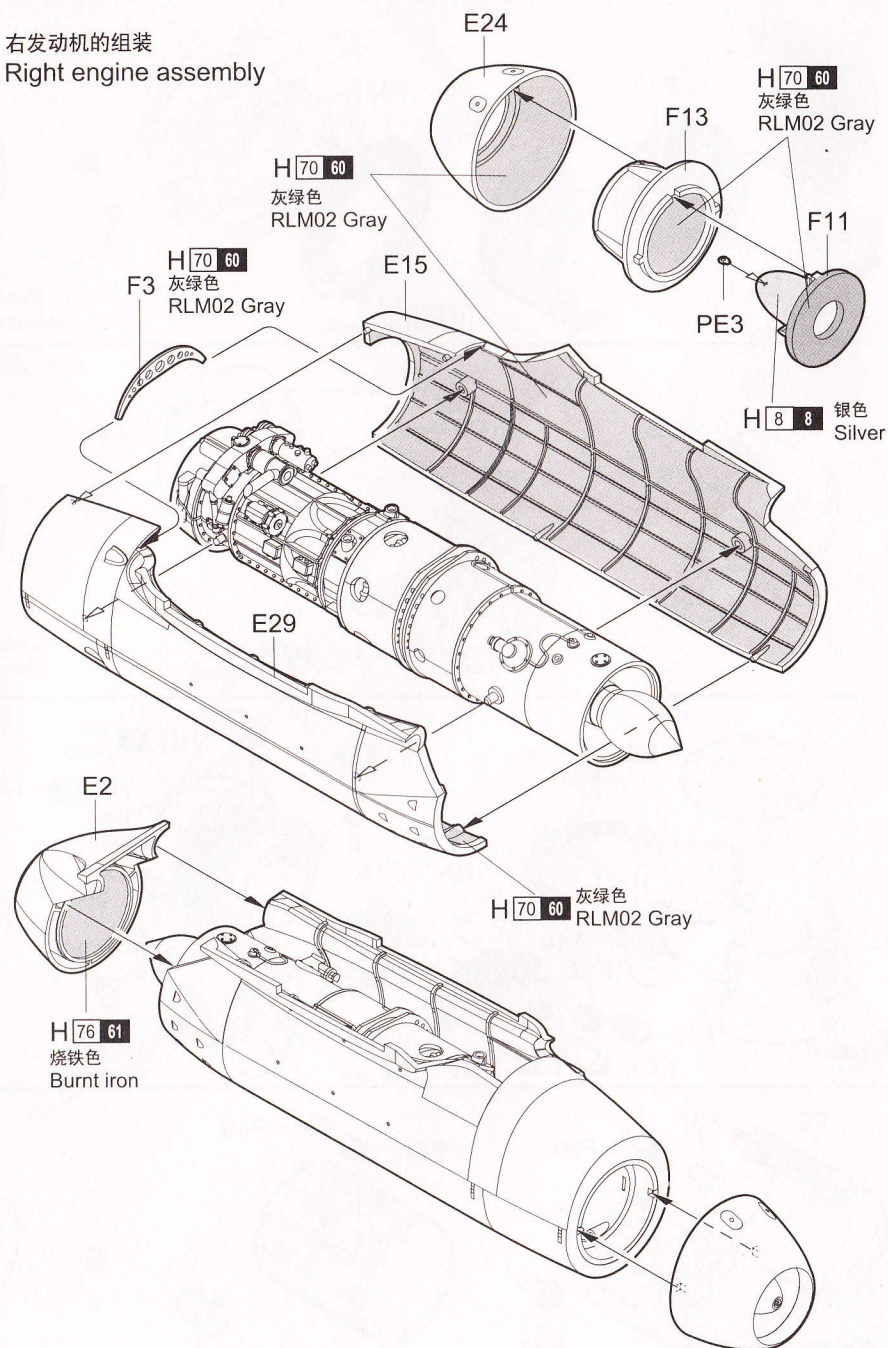


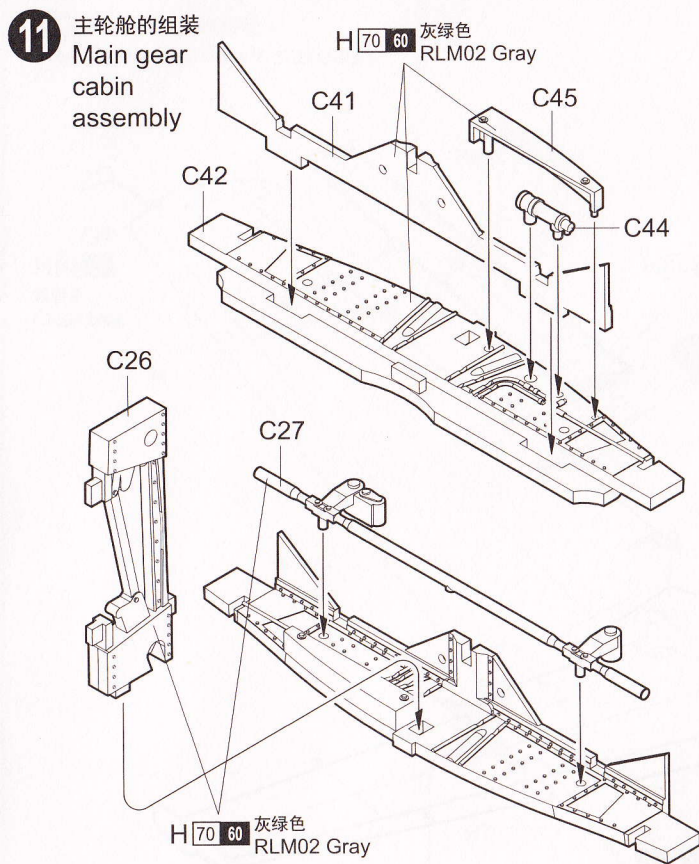


13 左侧襟翼的组装 (A)
Left flap assembly(A)

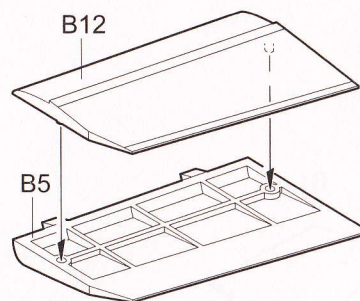


14 右侧襟翼的组装 (A)
Right flap assembly(A)

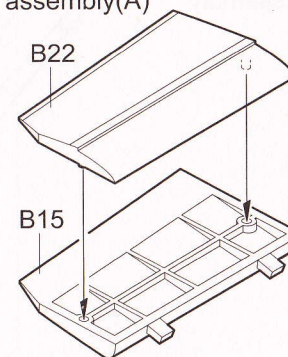


15 左侧襟翼的组装 (B)
Left flap assembly(B)

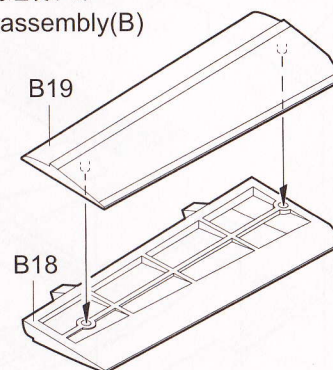


16 右侧襟翼的组装 (B)
Right flap assembly(B)

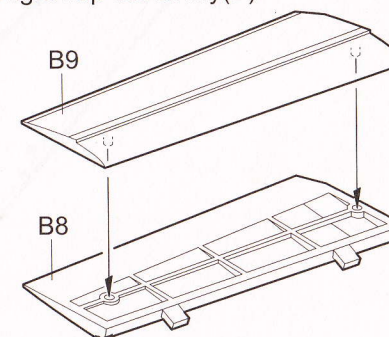


12 火箭助推器的组装
Ratog assembly

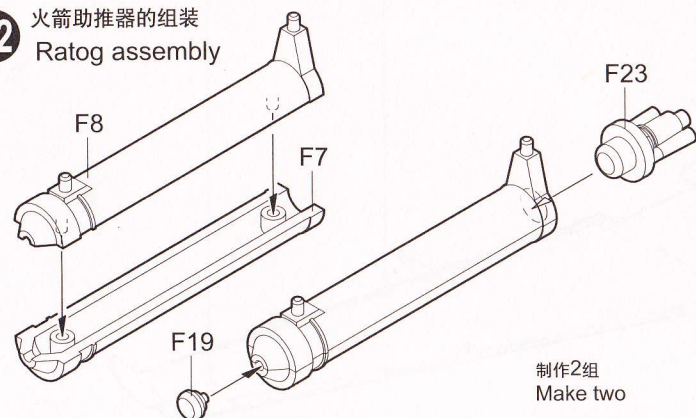


17 左侧副翼的组装
Left aileron assembly

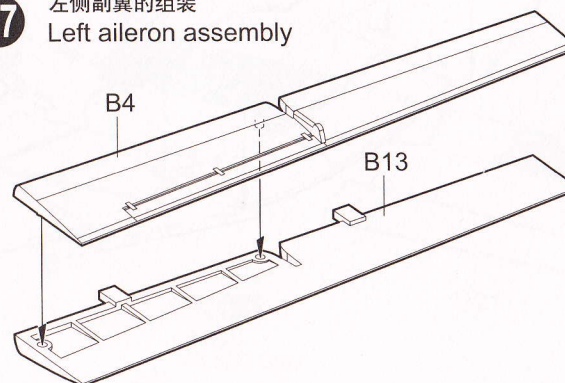


18 右侧副翼的组装
Right aileron assembly

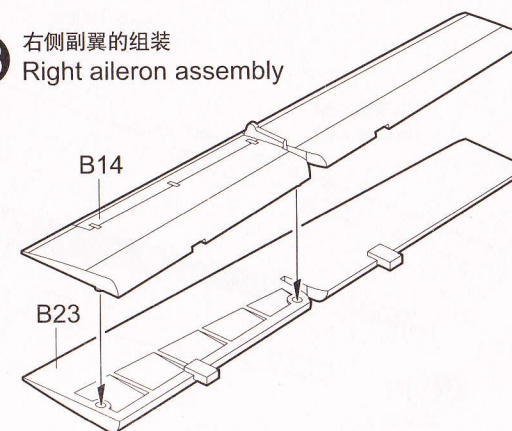


19 机翼的组装
Wing assembly

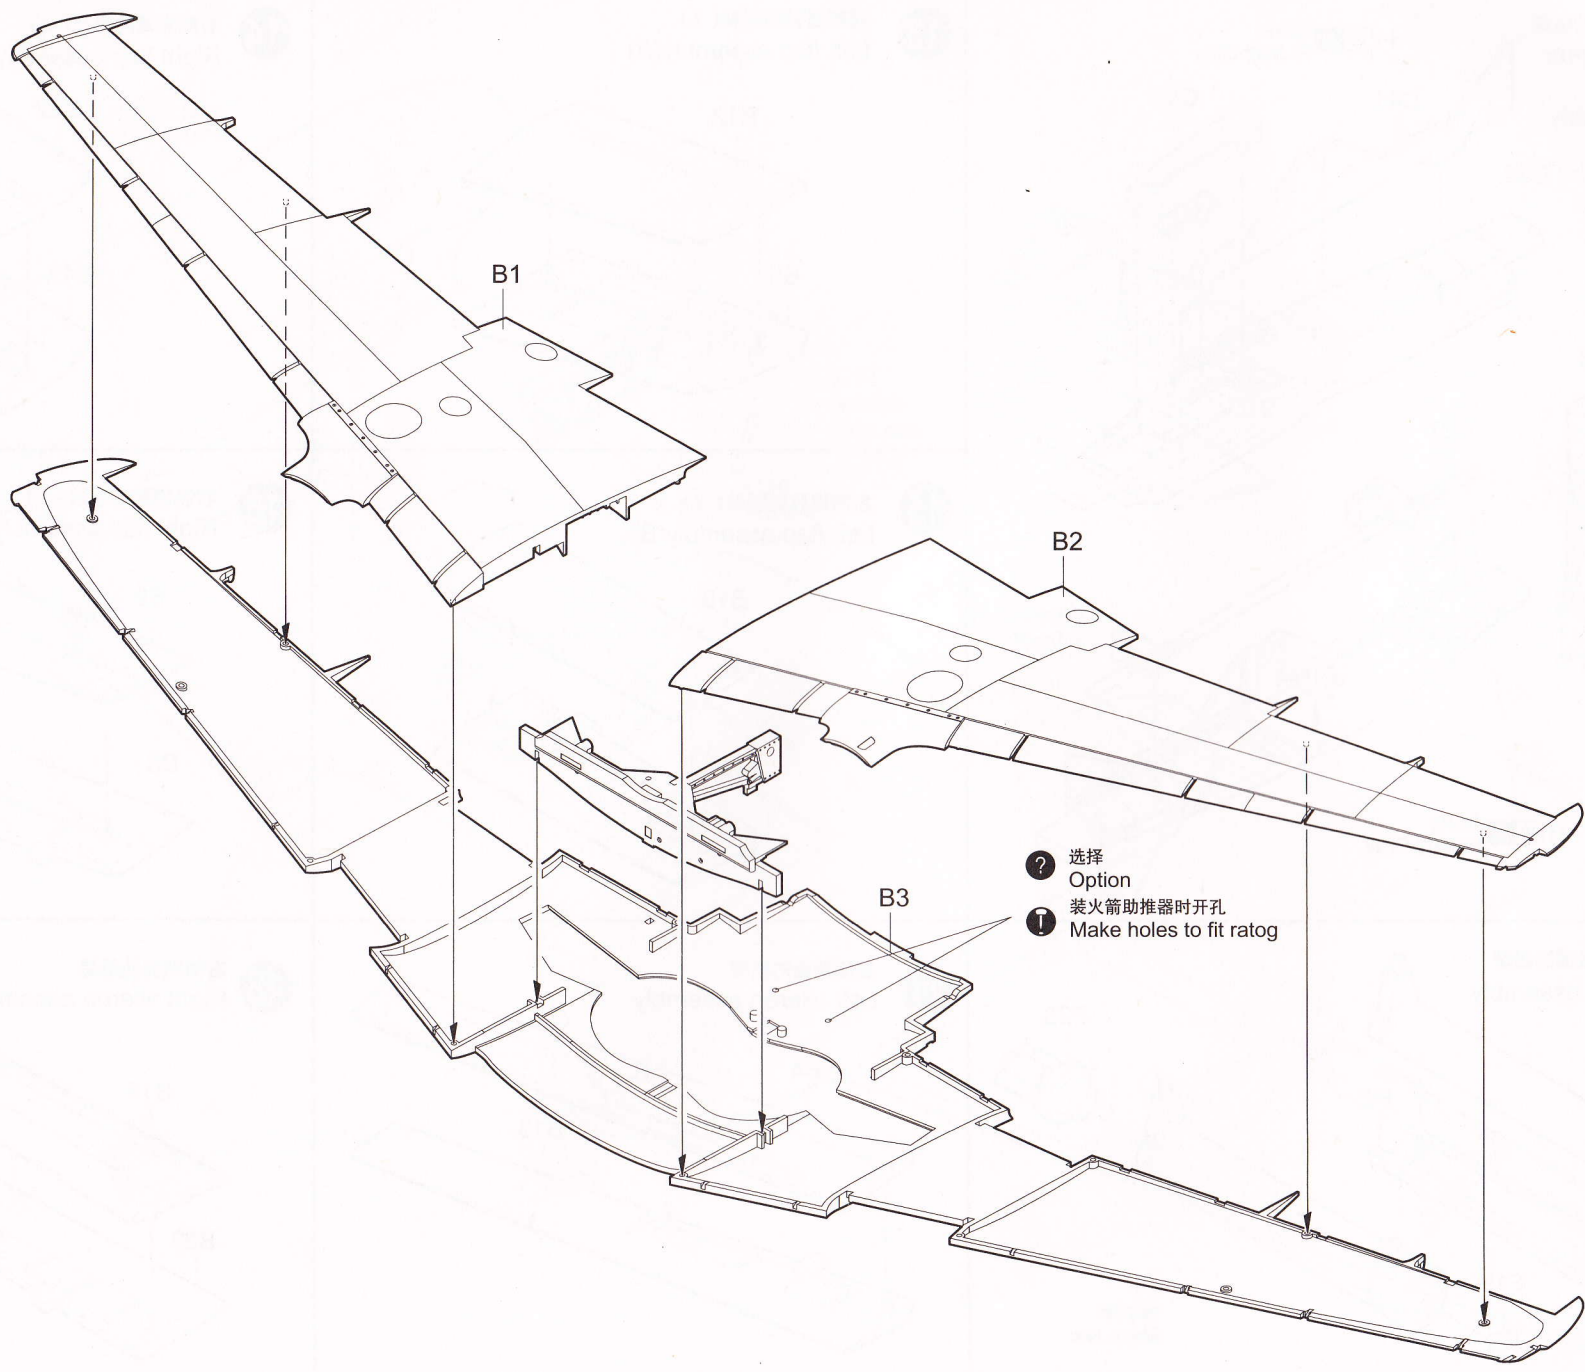

20 副翼和襟翼的安装 Aileron & flap installation

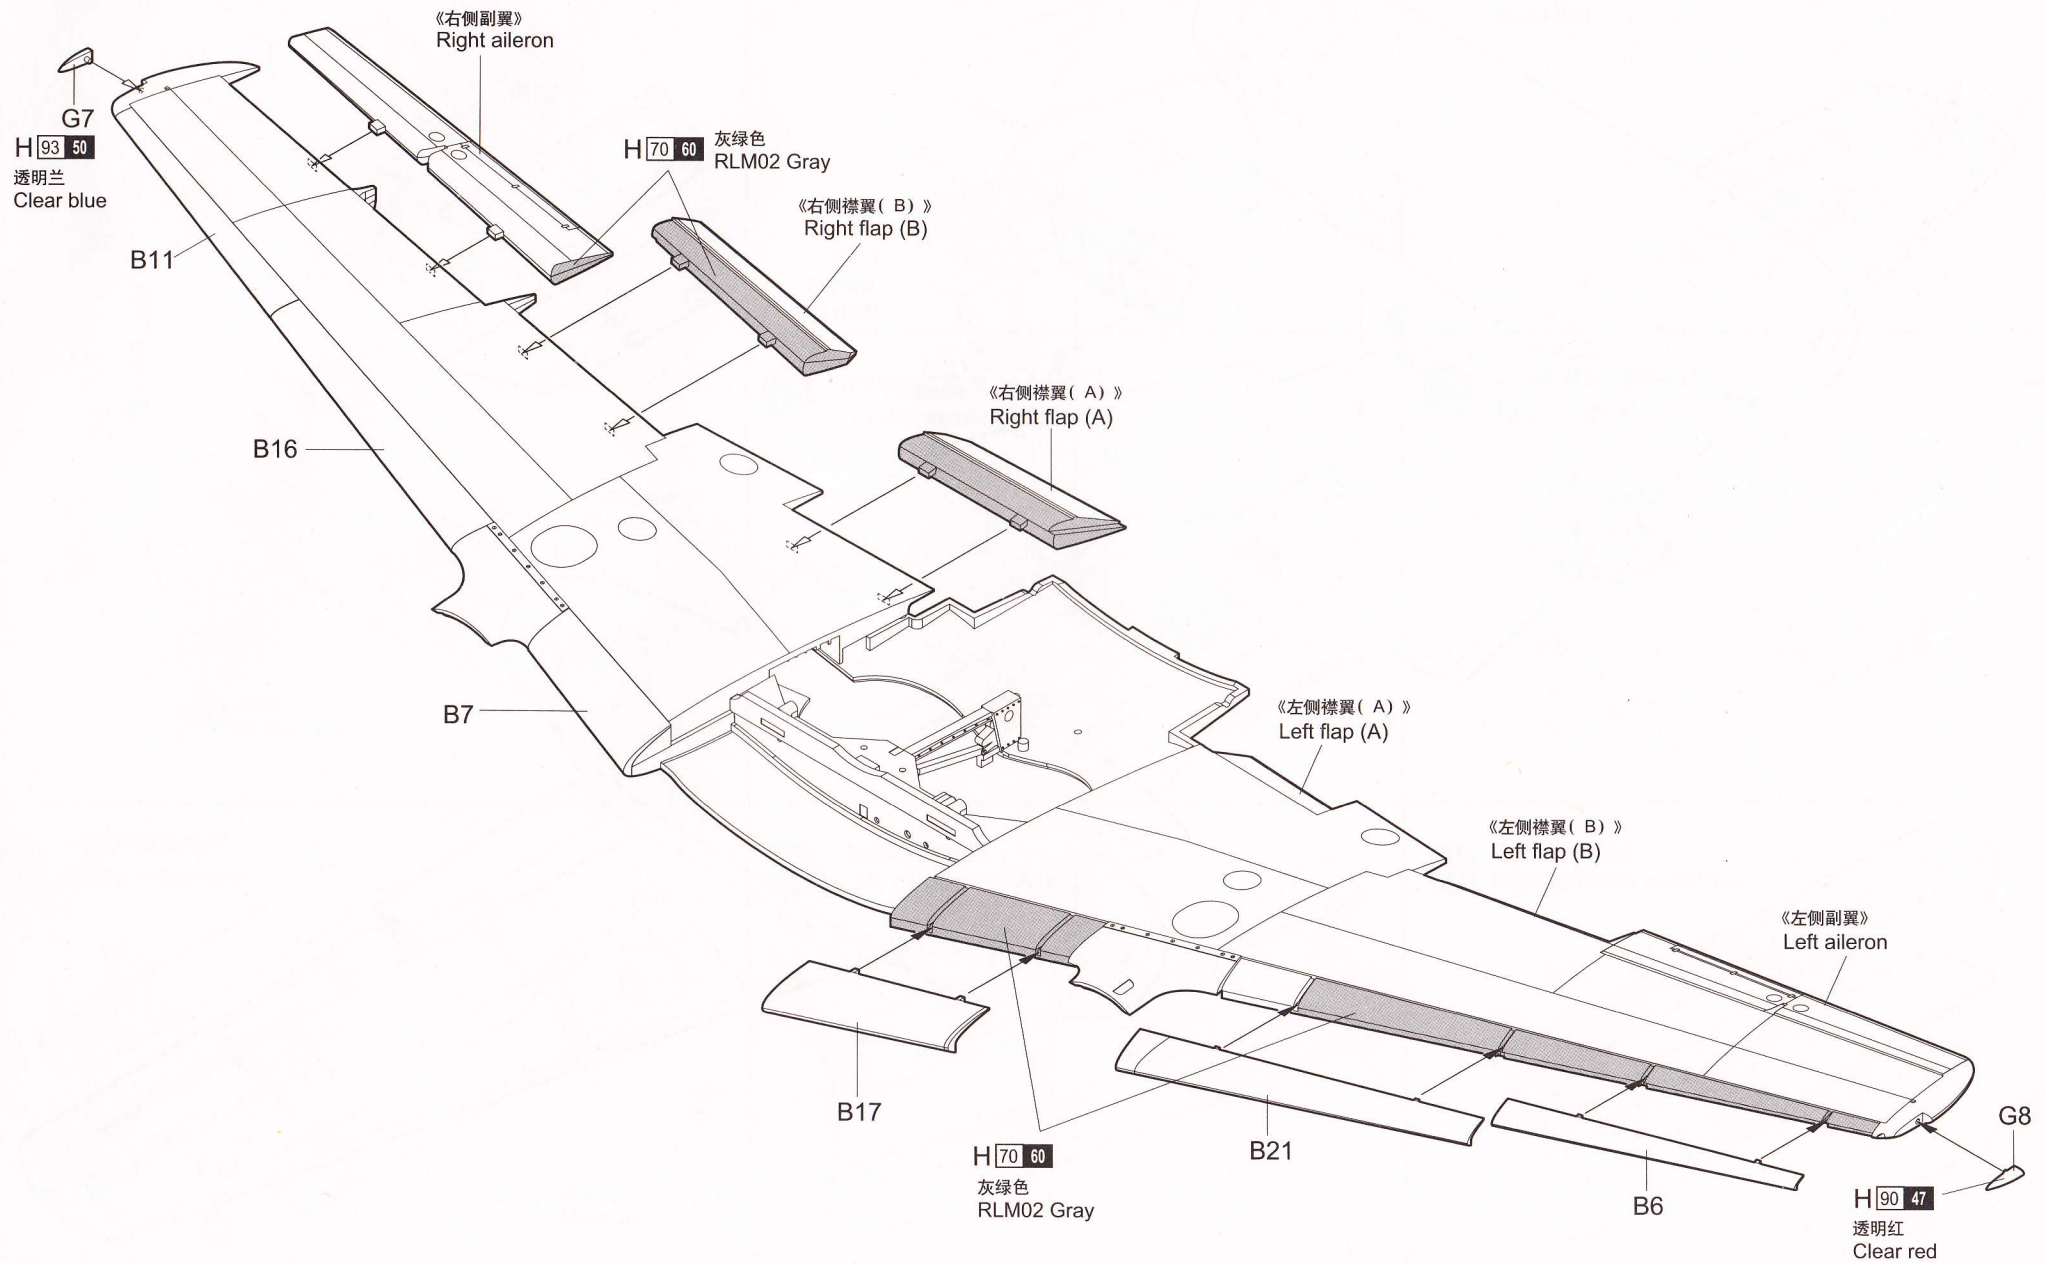

21



C18

C17
对侧相同
Both side

—C20
对侧相同
Both side


C19

《右侧发动机》
Right engine

22

左机身的组装

Left fuselage assembly

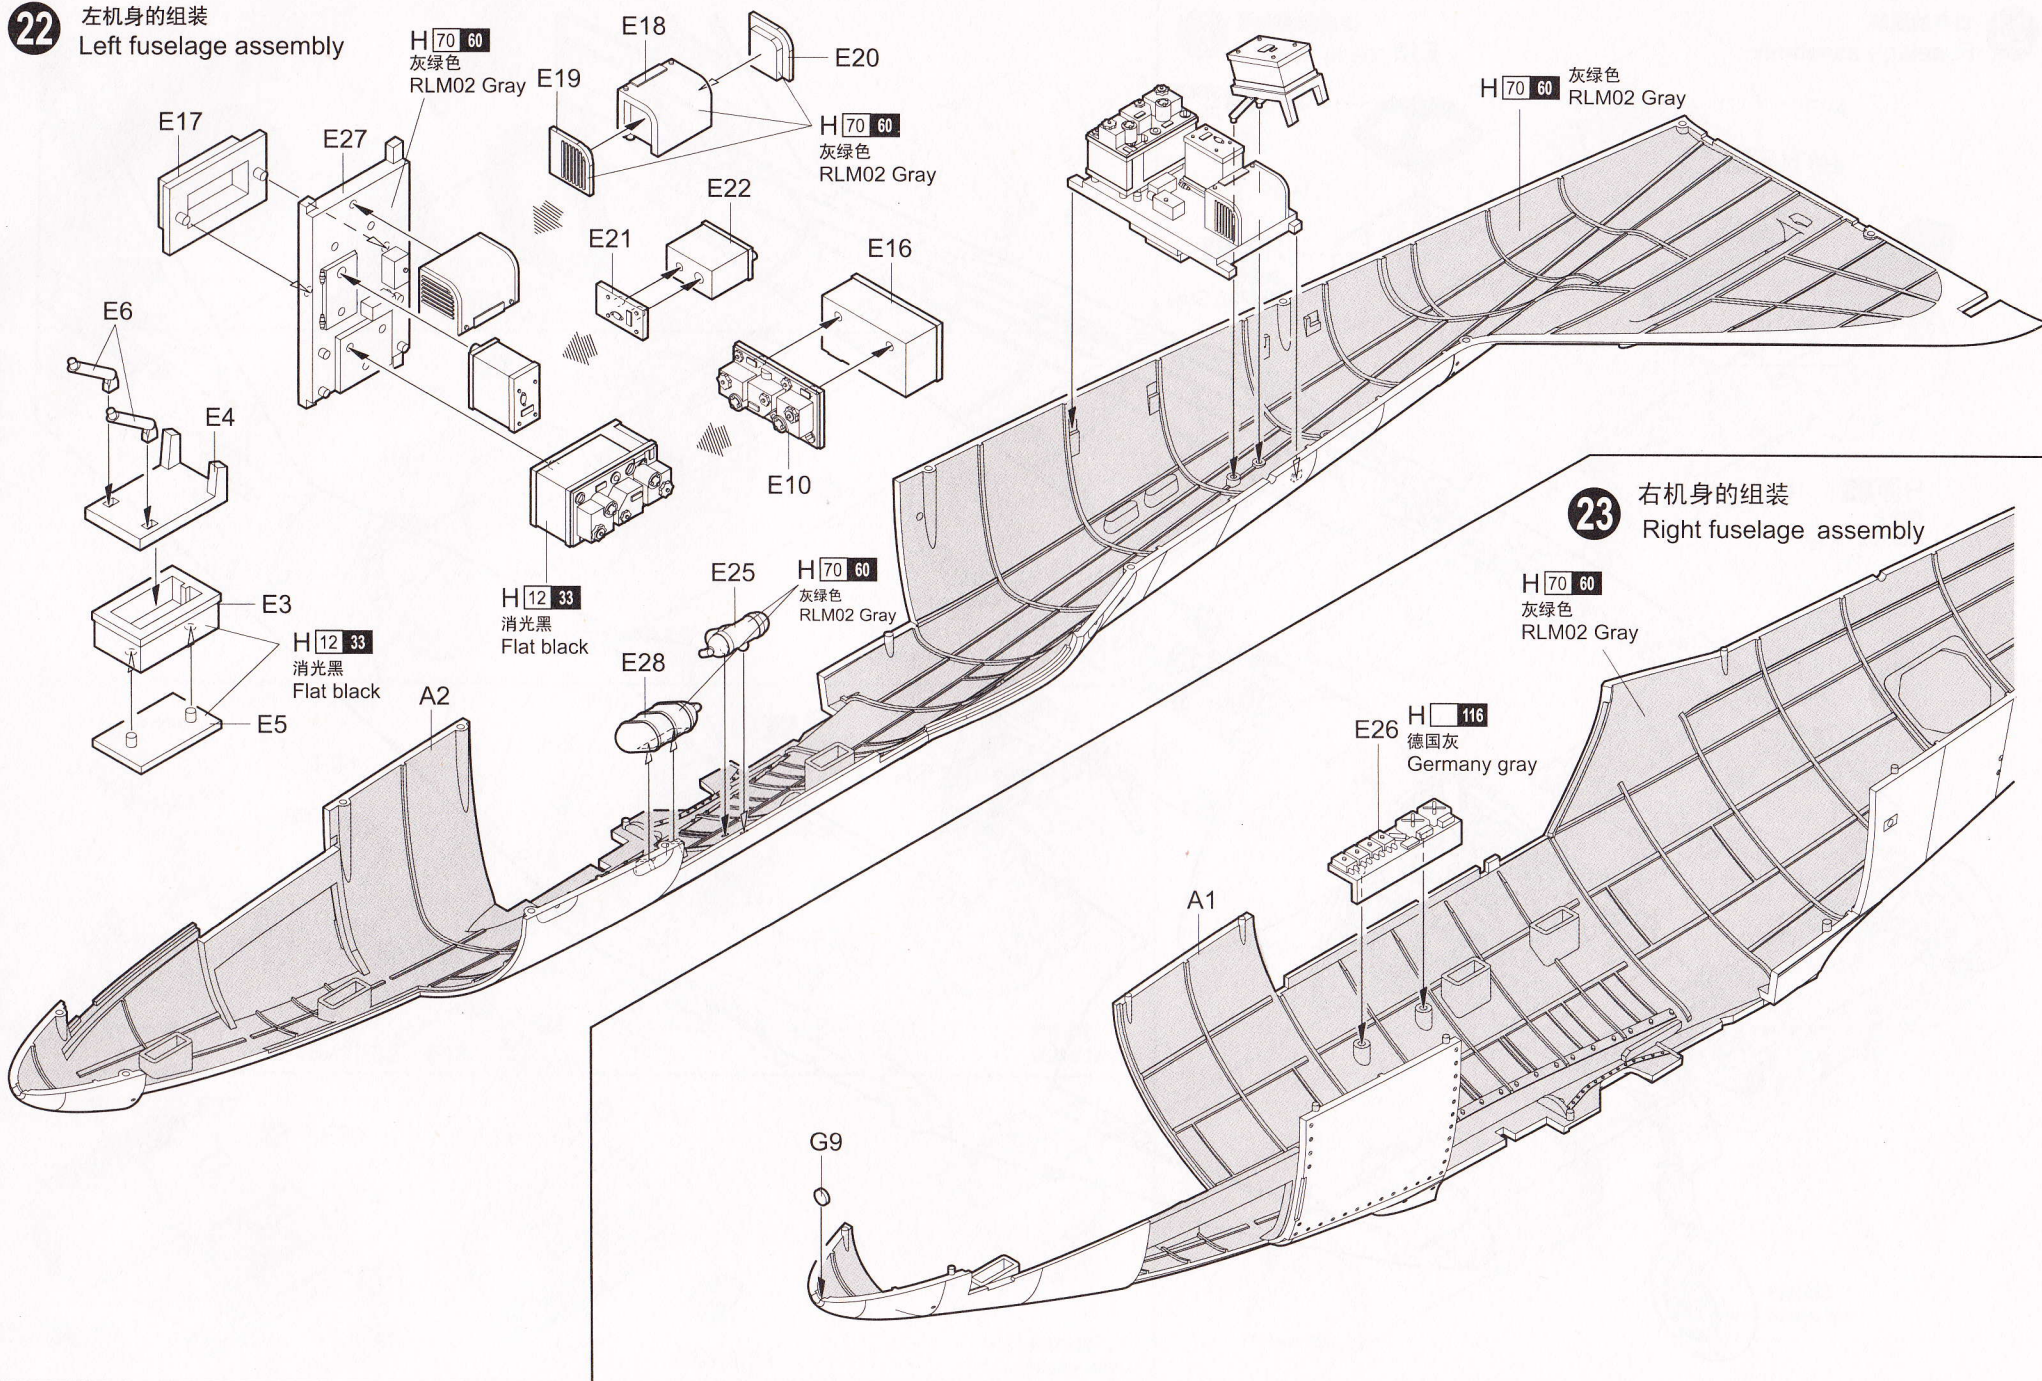


23

右机身的组装

Right fuselage assembly

24 机身的组装 Fuselage assembly

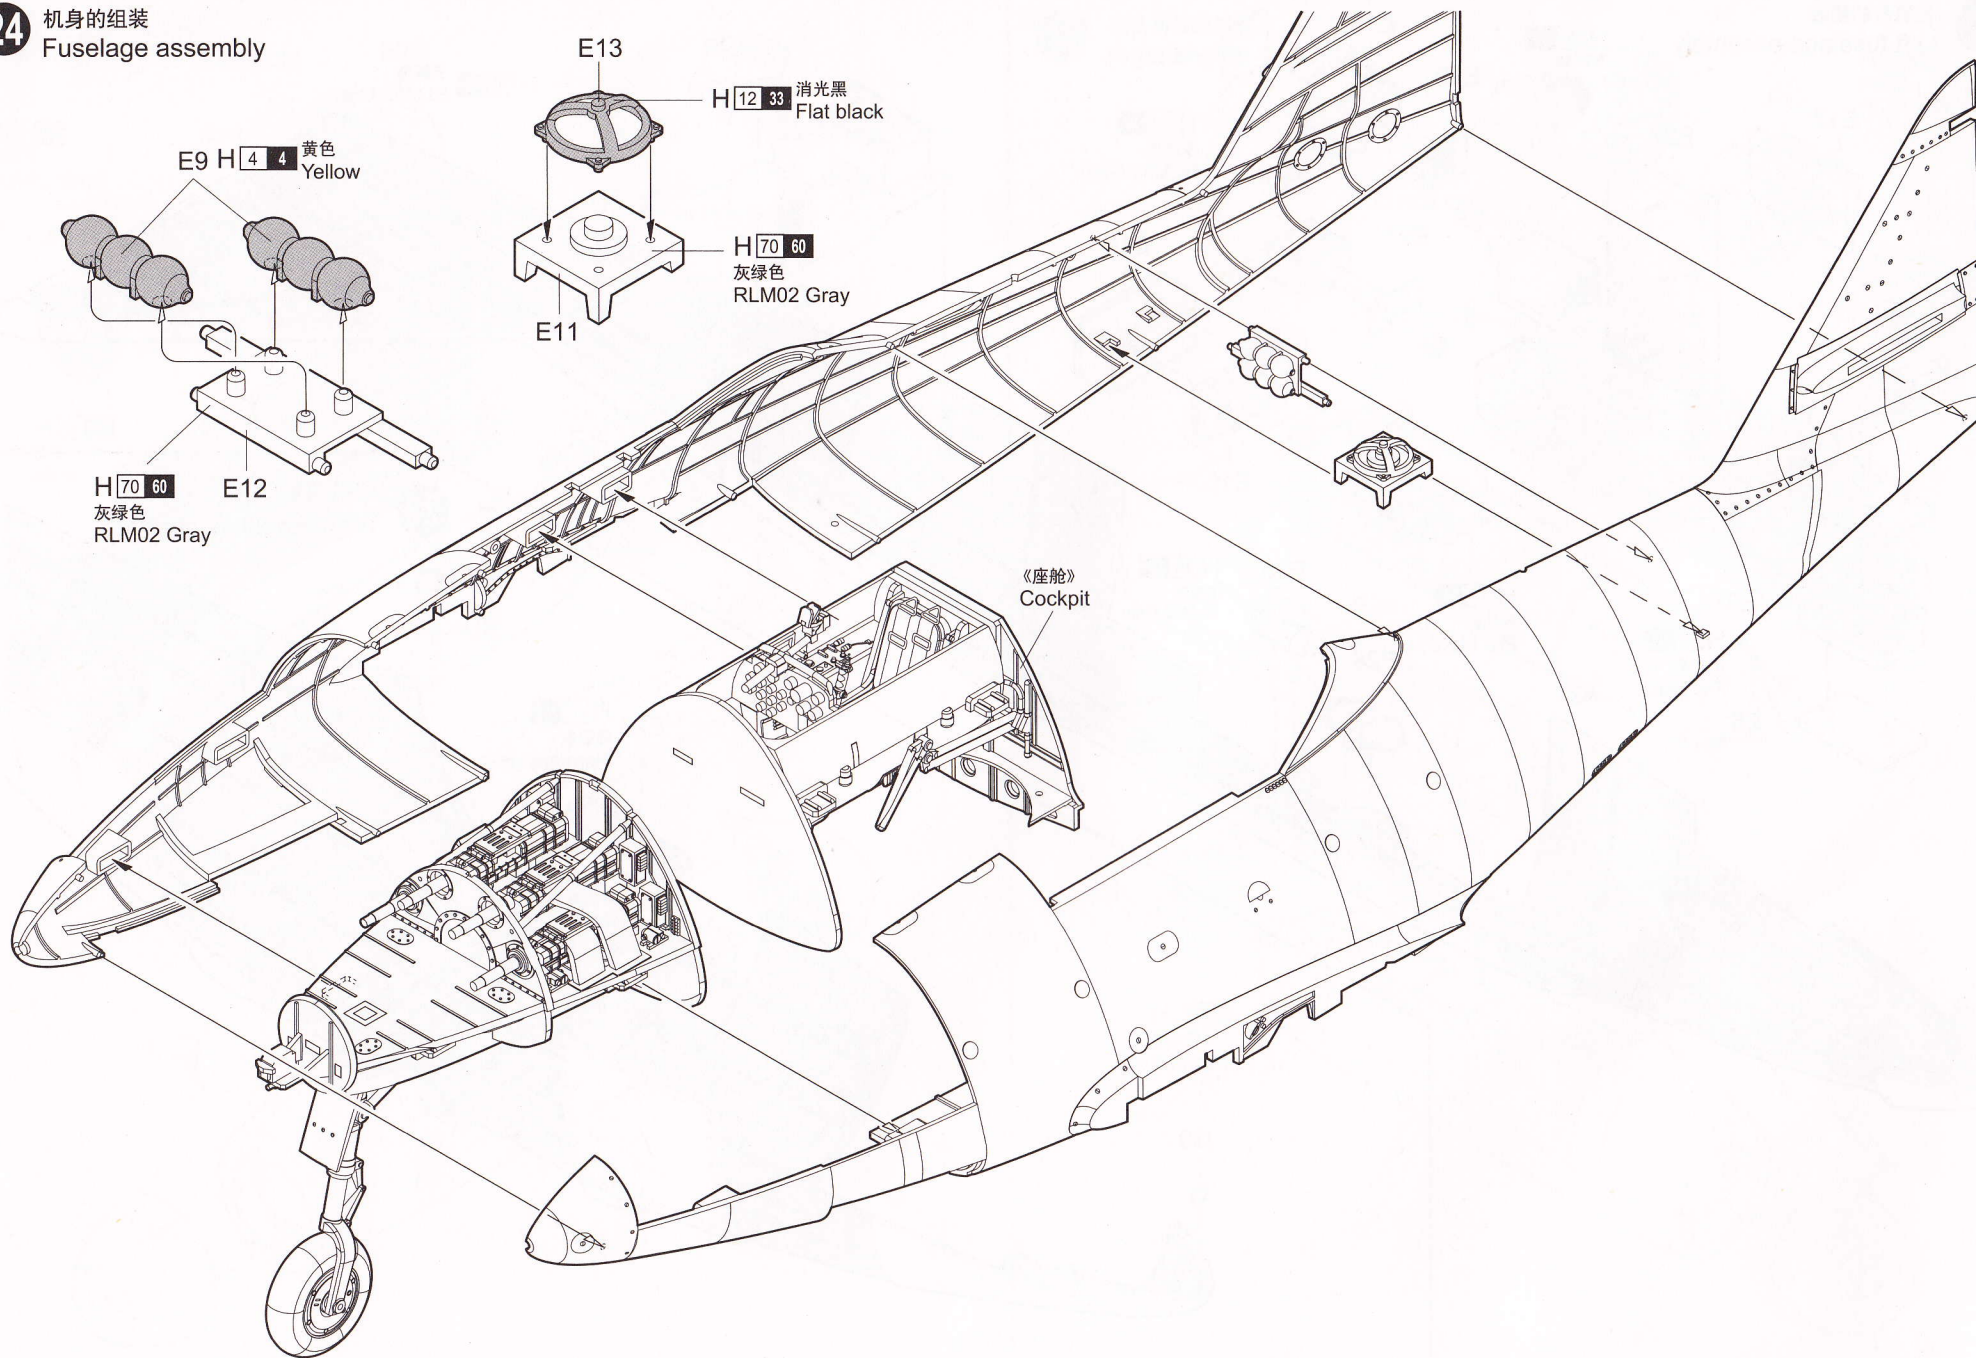

25



26



主轮胎
Main tire

27



H 70 60 —
灰绿色
RLM02 Gray

28




可选择合金件
Select C32
metal part


H 70 60
灰绿色
RLM02 Gray

H 8 8
银色
Silver

H 70 60
灰绿色
RLM02 Gray

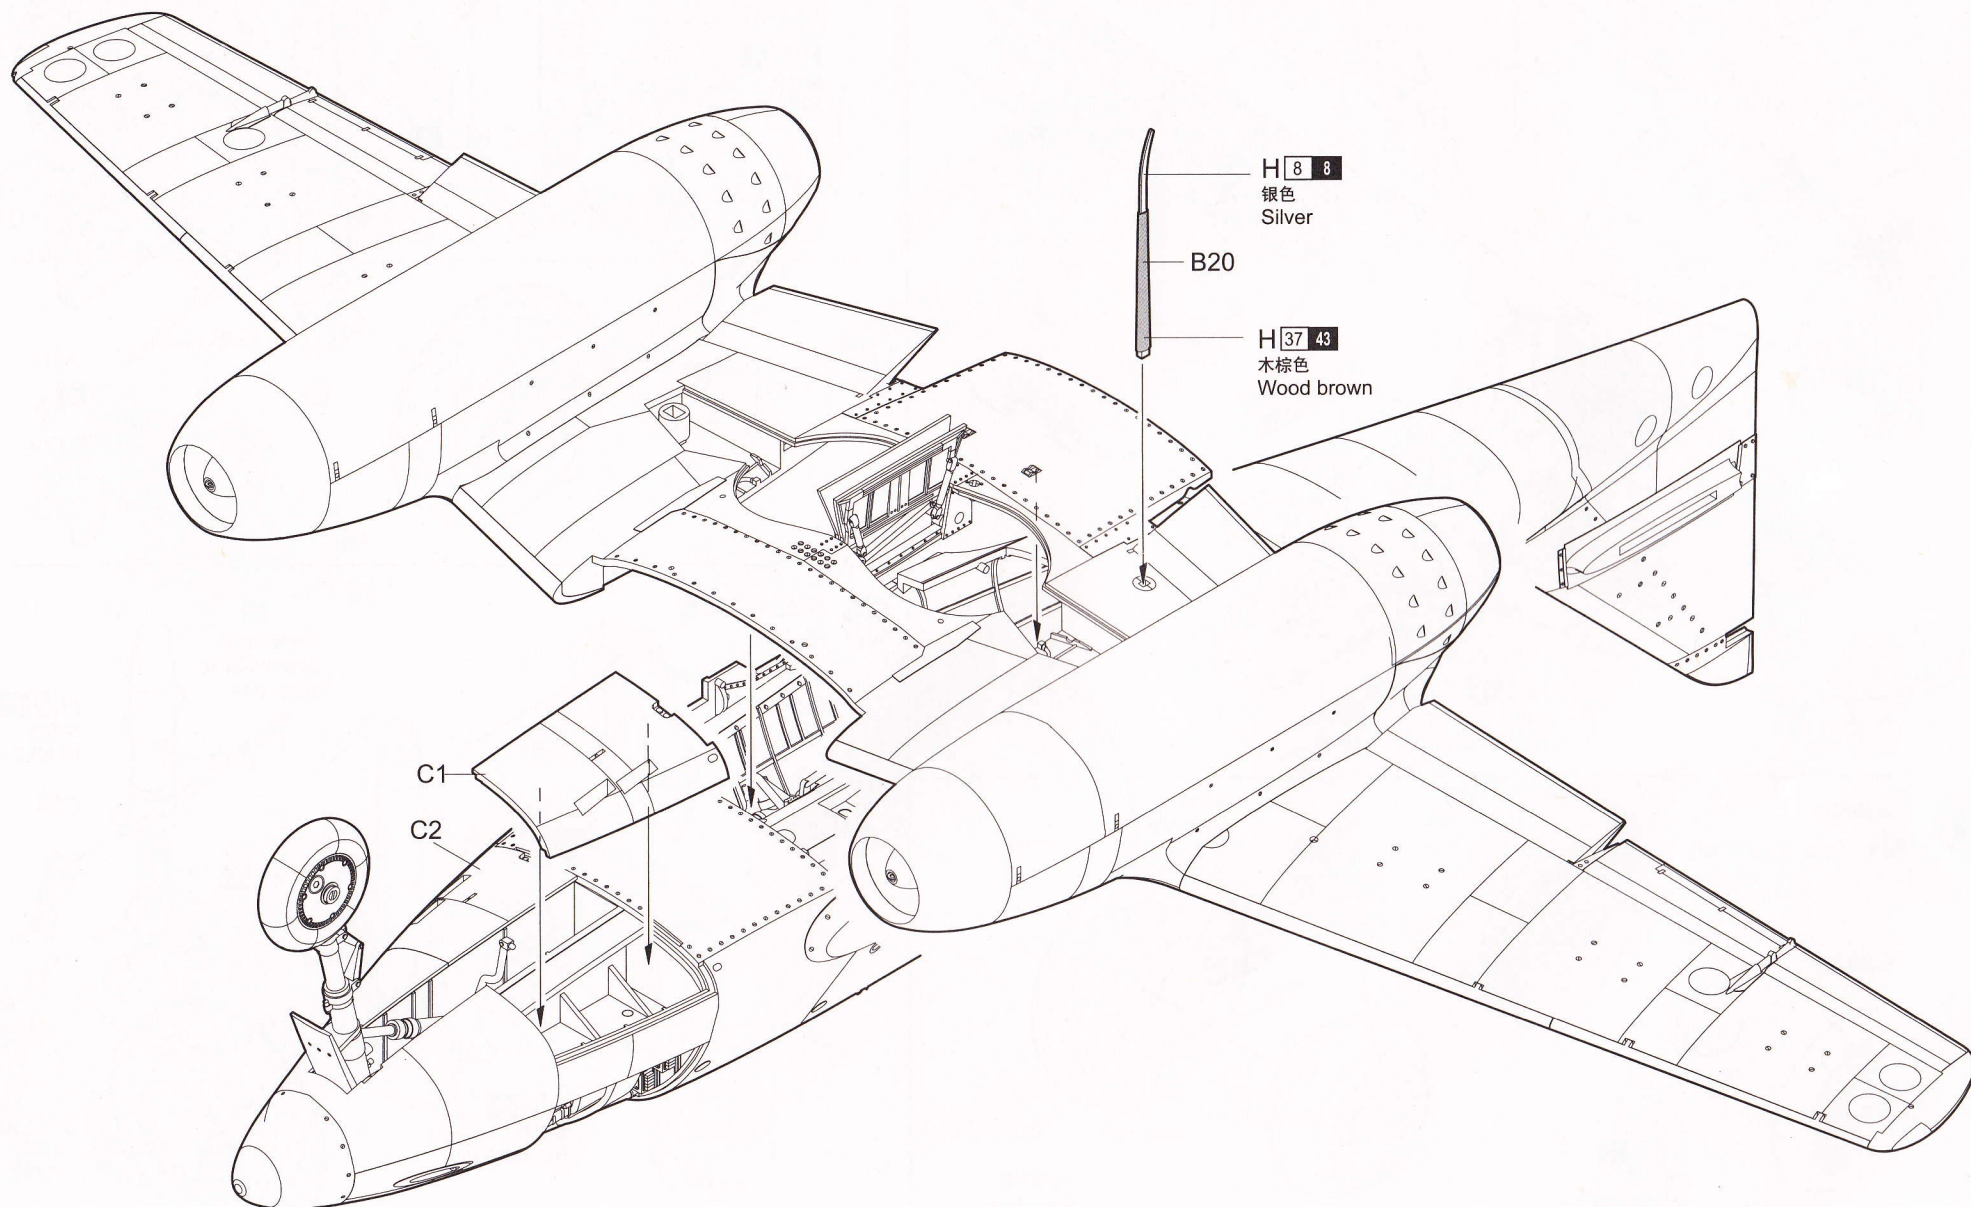


30 起落架的安装
Undercarriage installation

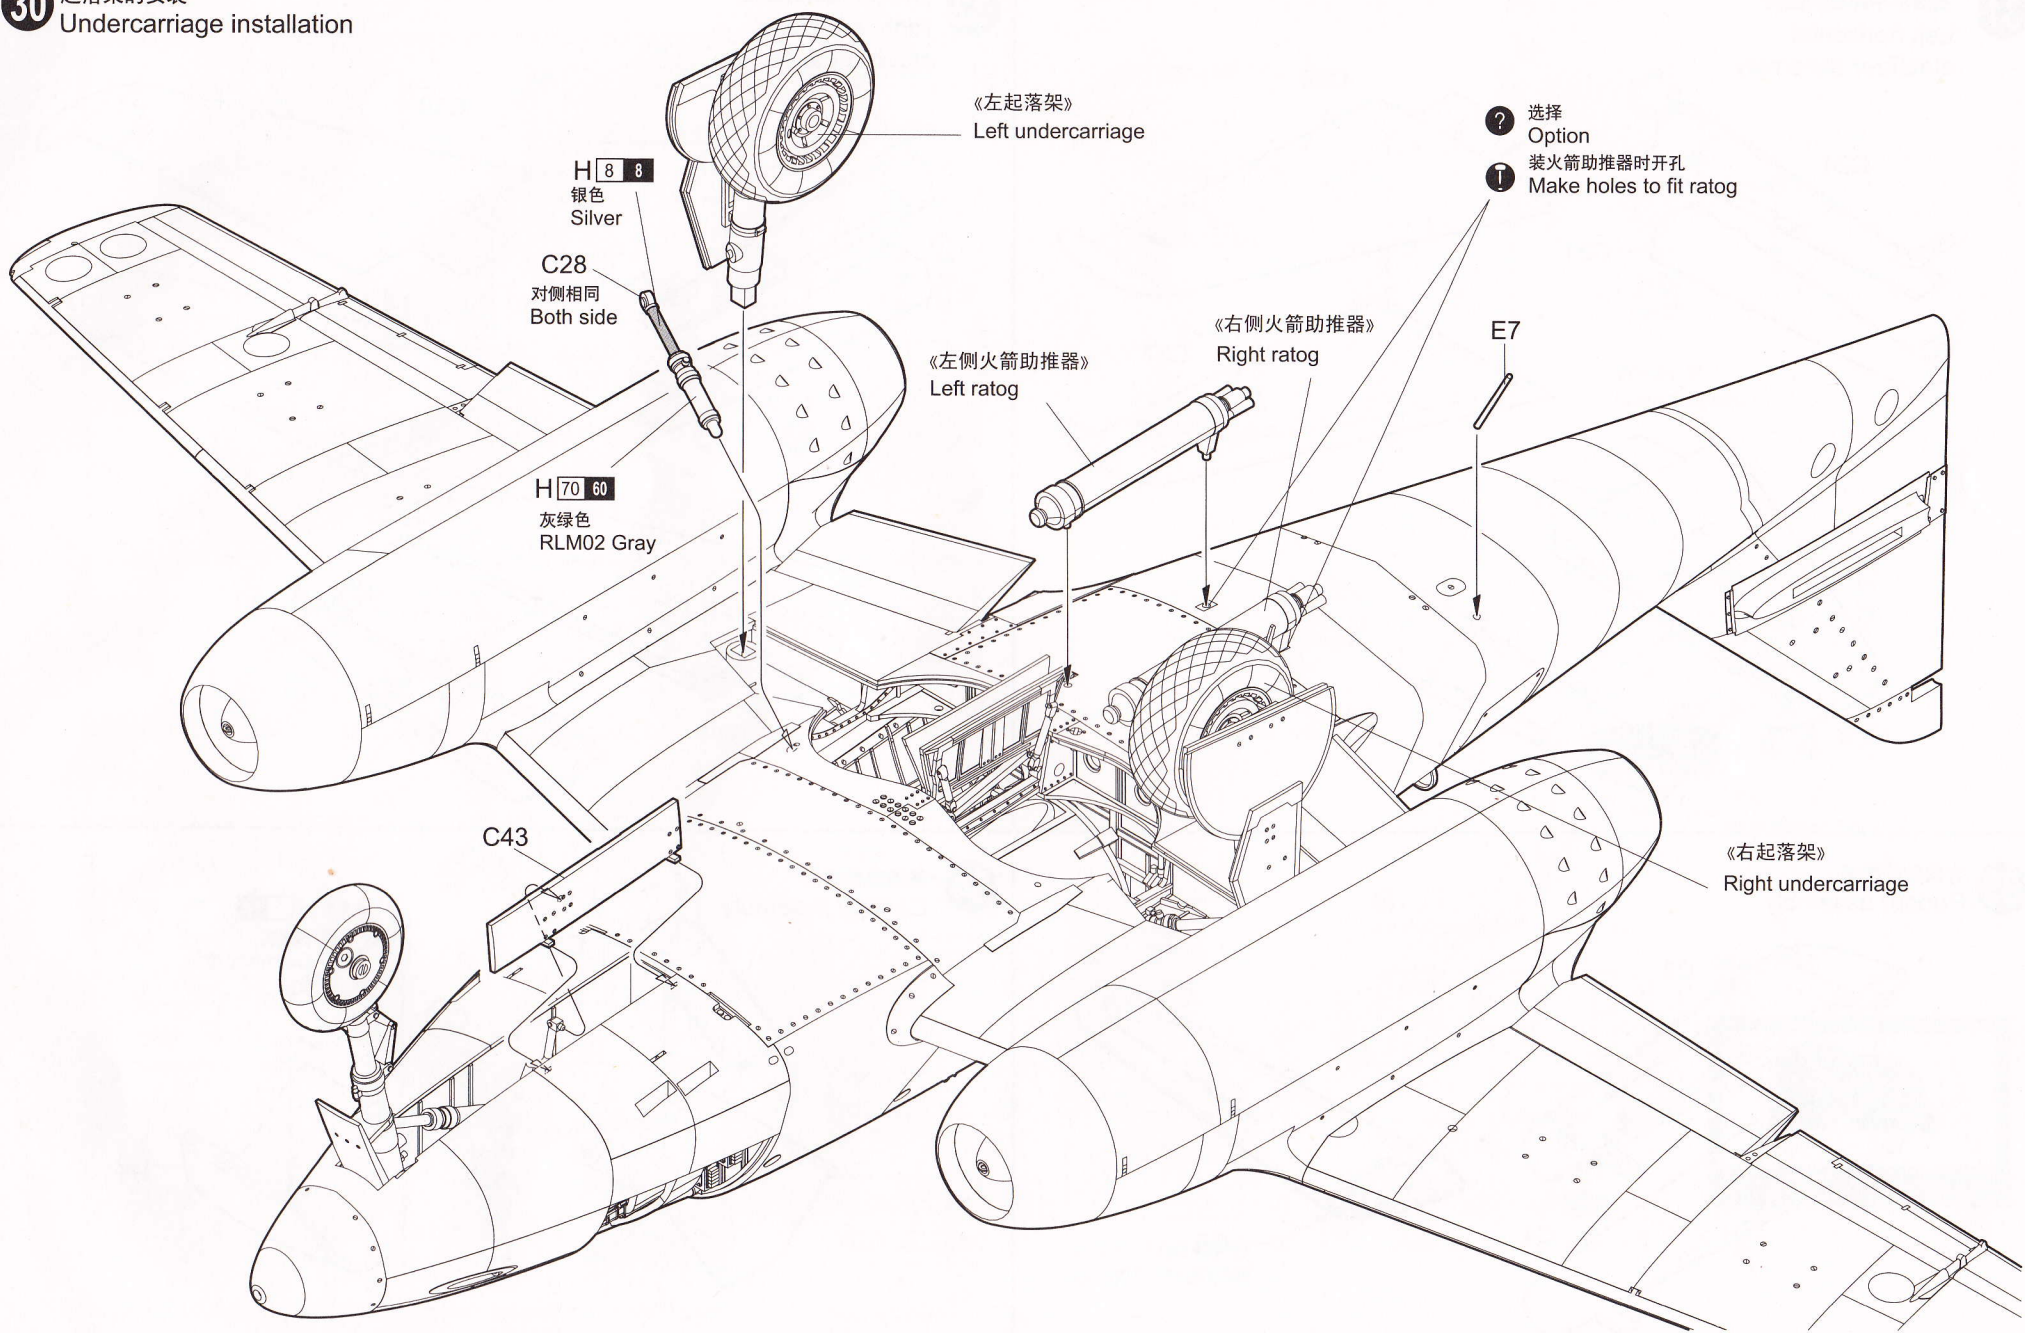


31

左侧水平尾翼的组装 Left horizontal stabilizer assembly

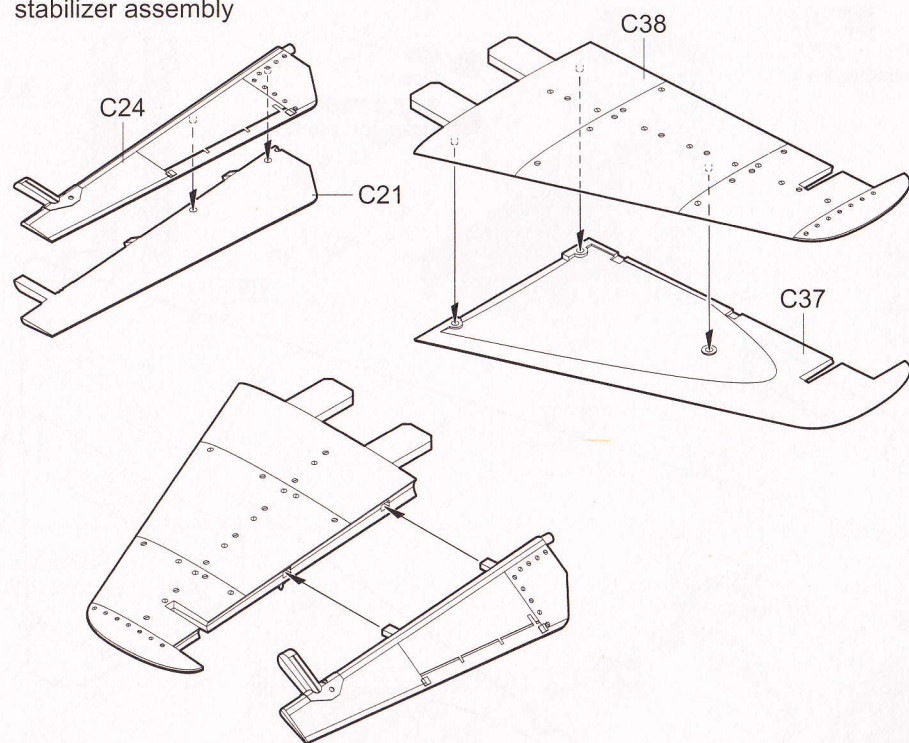


32

右侧水平尾翼的组装 Right horizontal stabilizer assembly

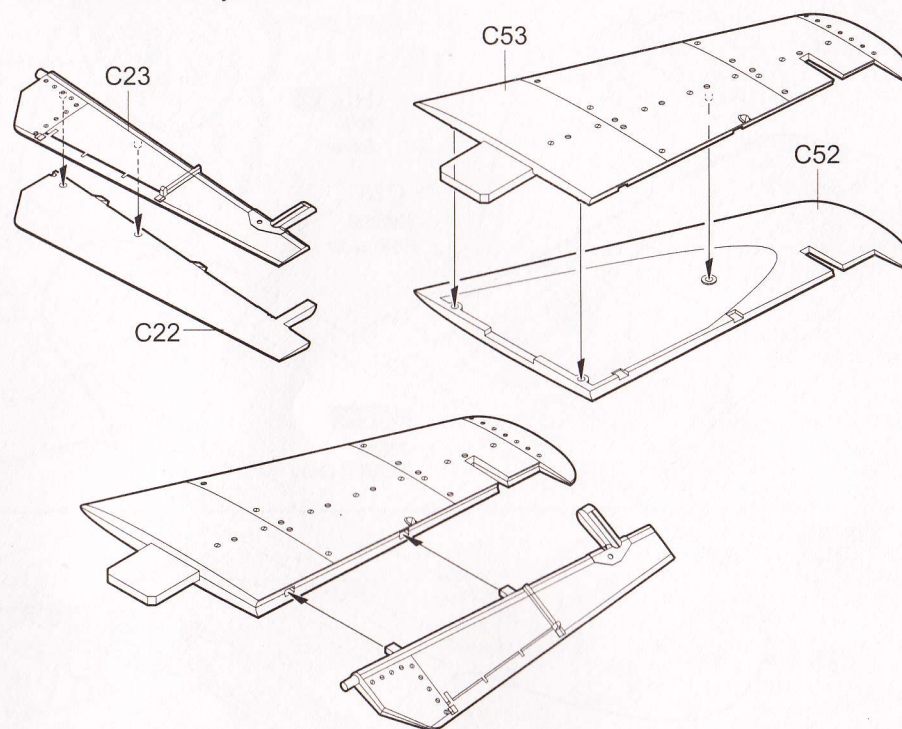


33


方向舵的组装 Rudder assembly

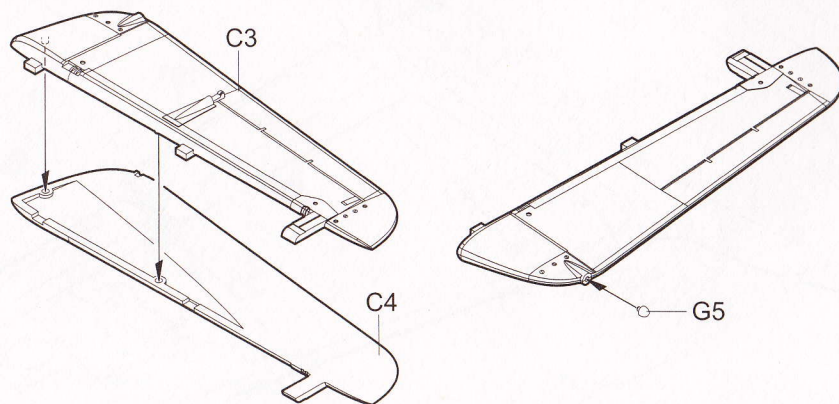


34

座舱盖的组装 Canopy assembly

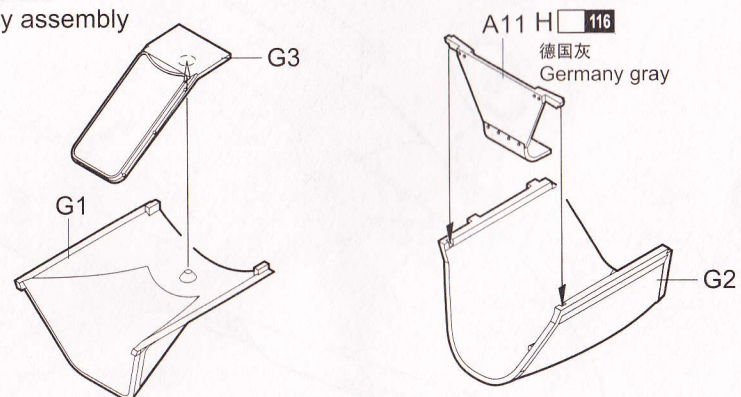

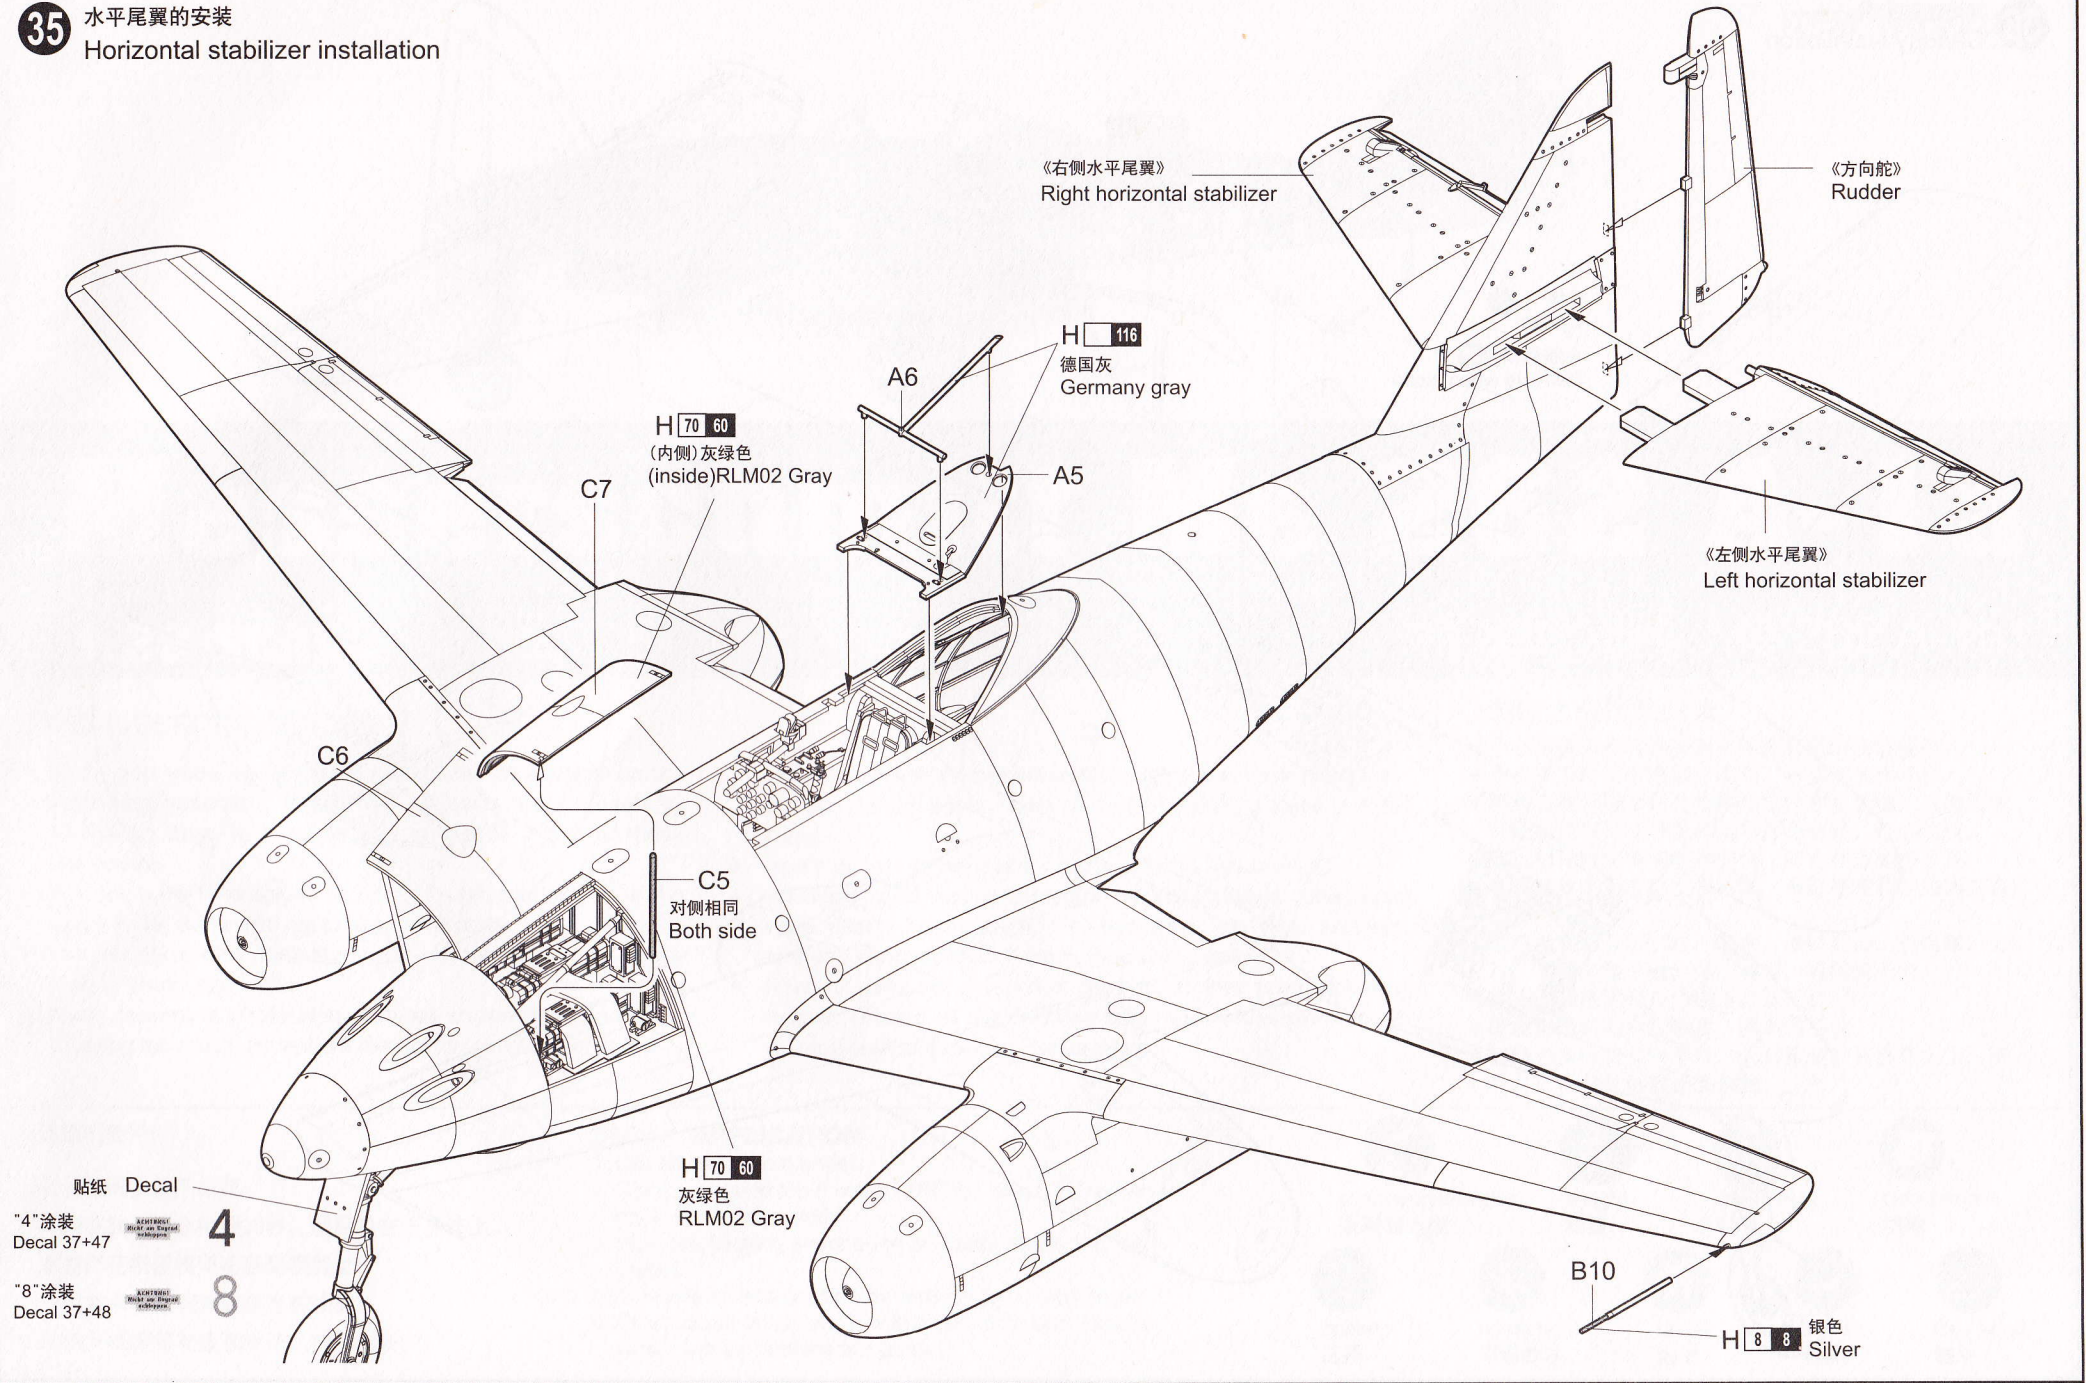


36 座舱盖的安装
Canopy installation

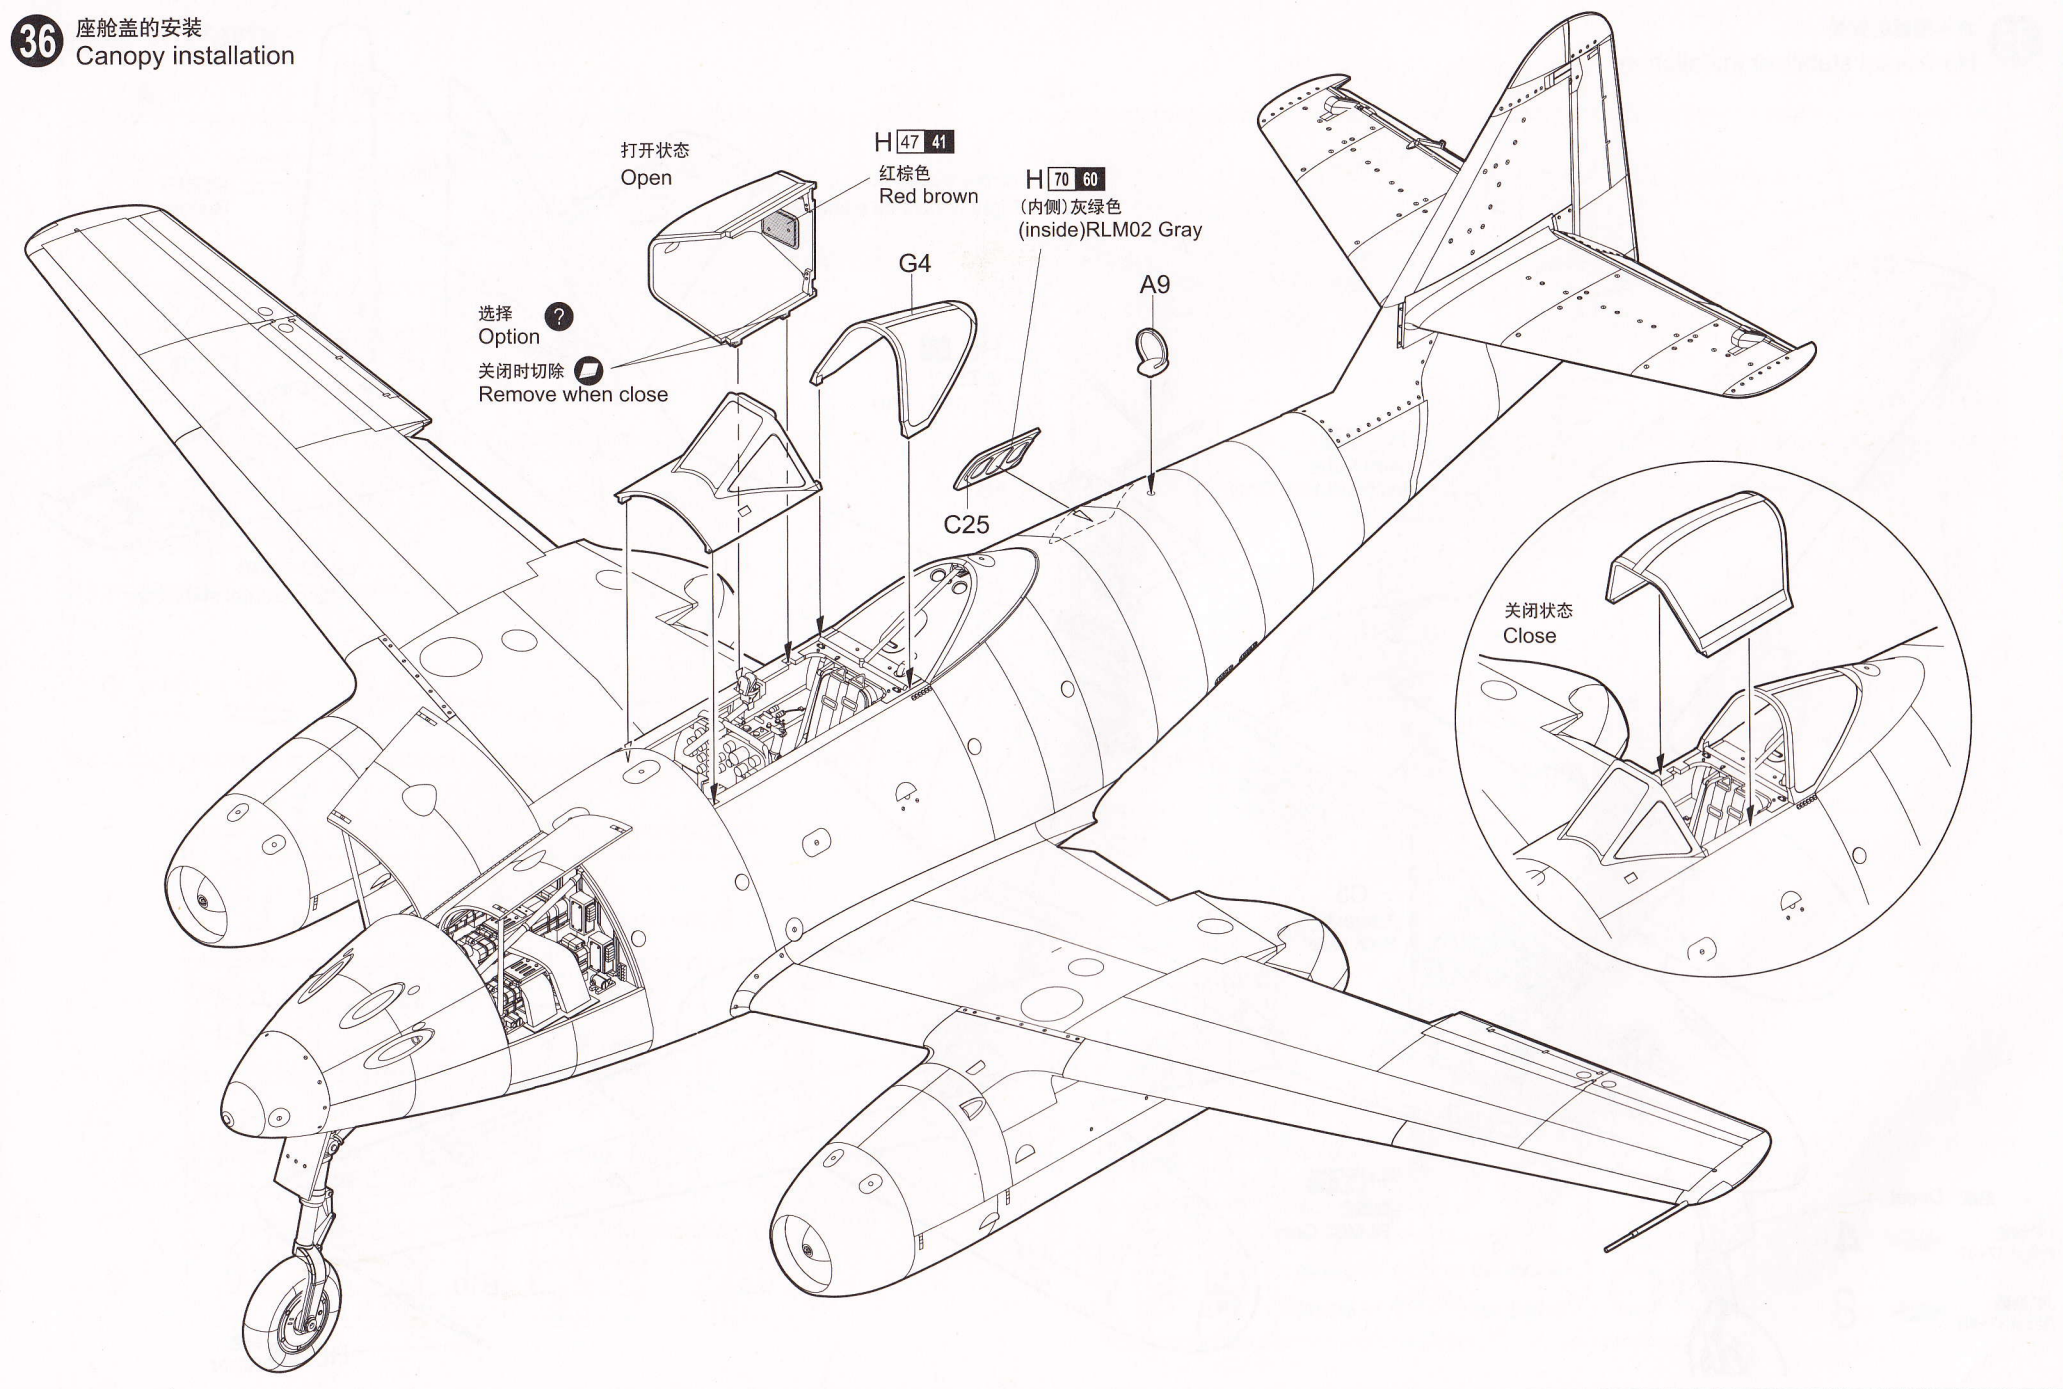


涂装同标贴指示 Painting & Marking guide

A


10/JG7. Pilot Franz Schall April 1945

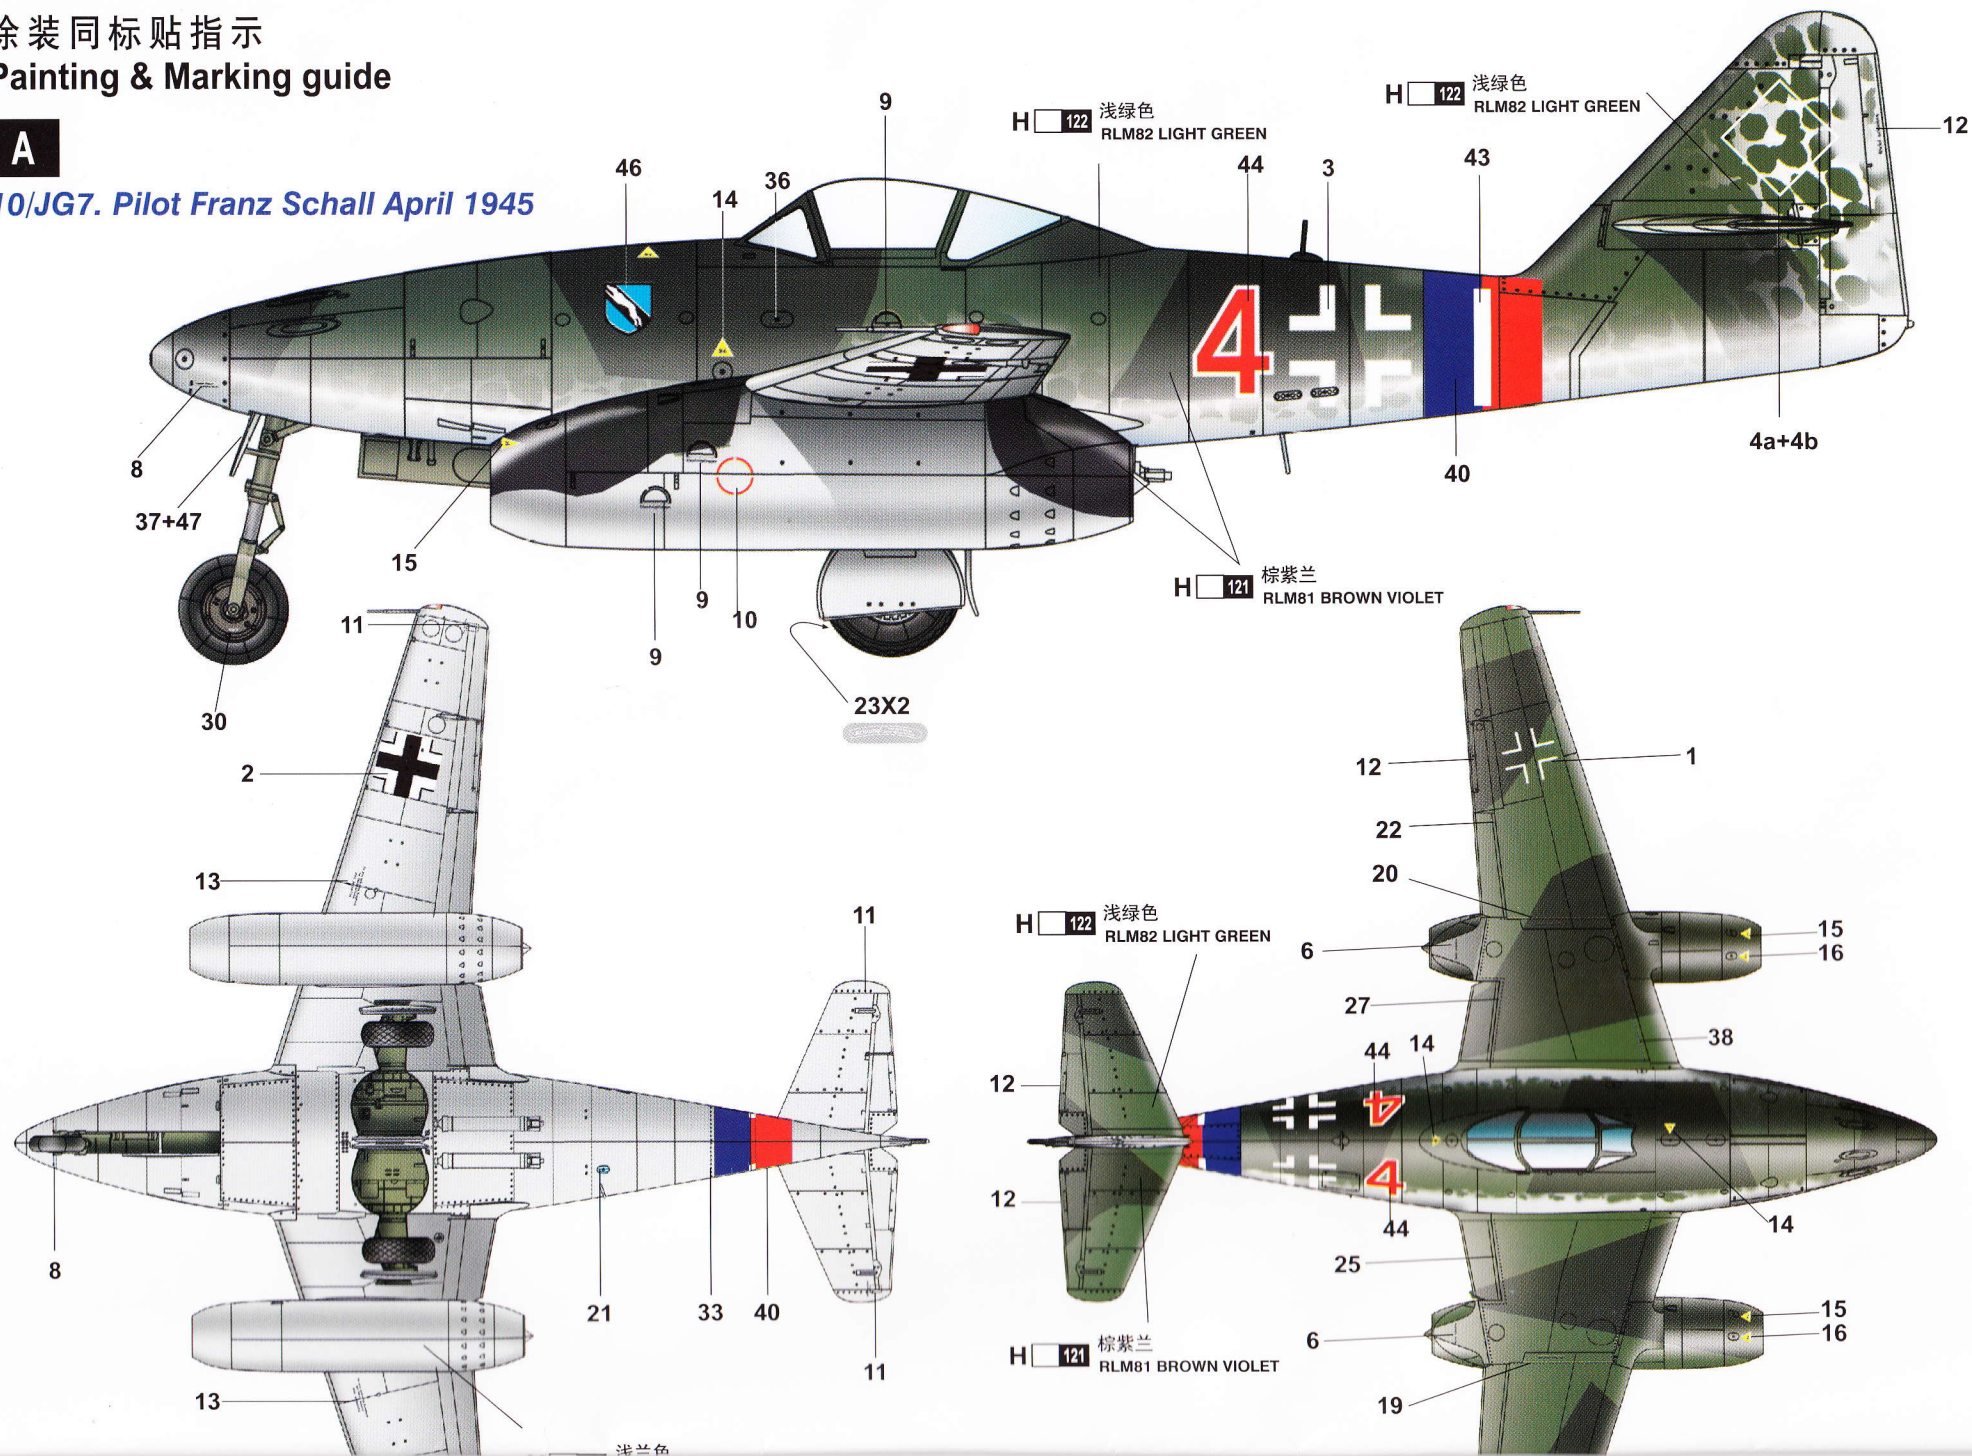

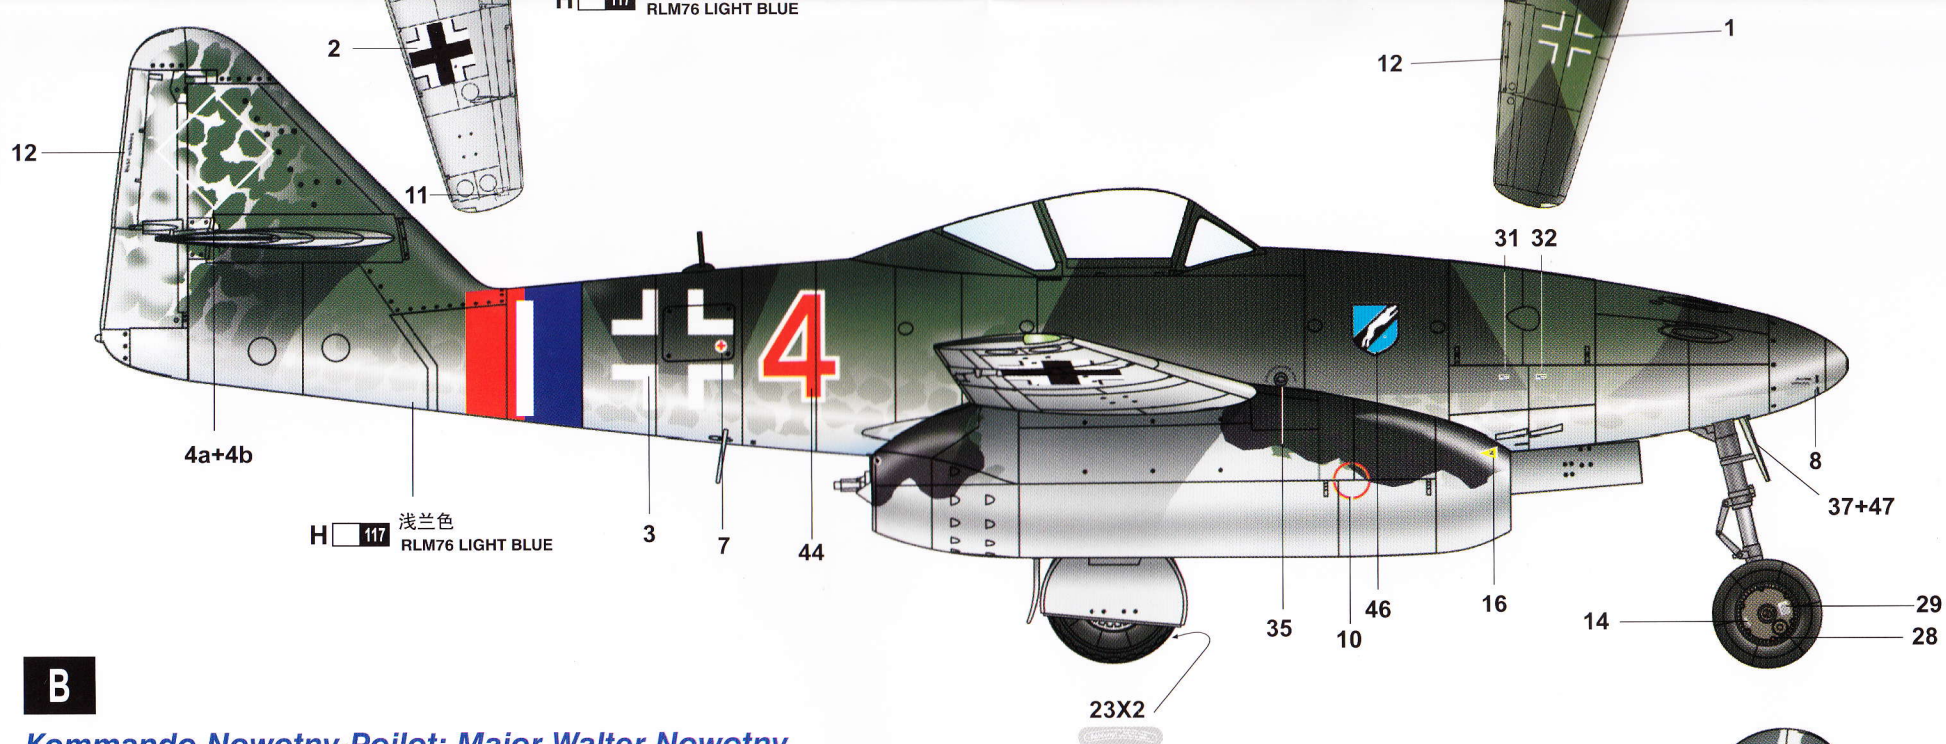

B

*Kommando Nowotny-Poilot: Major Walter Nowotny.
Achmer, listopad 1944 r.*

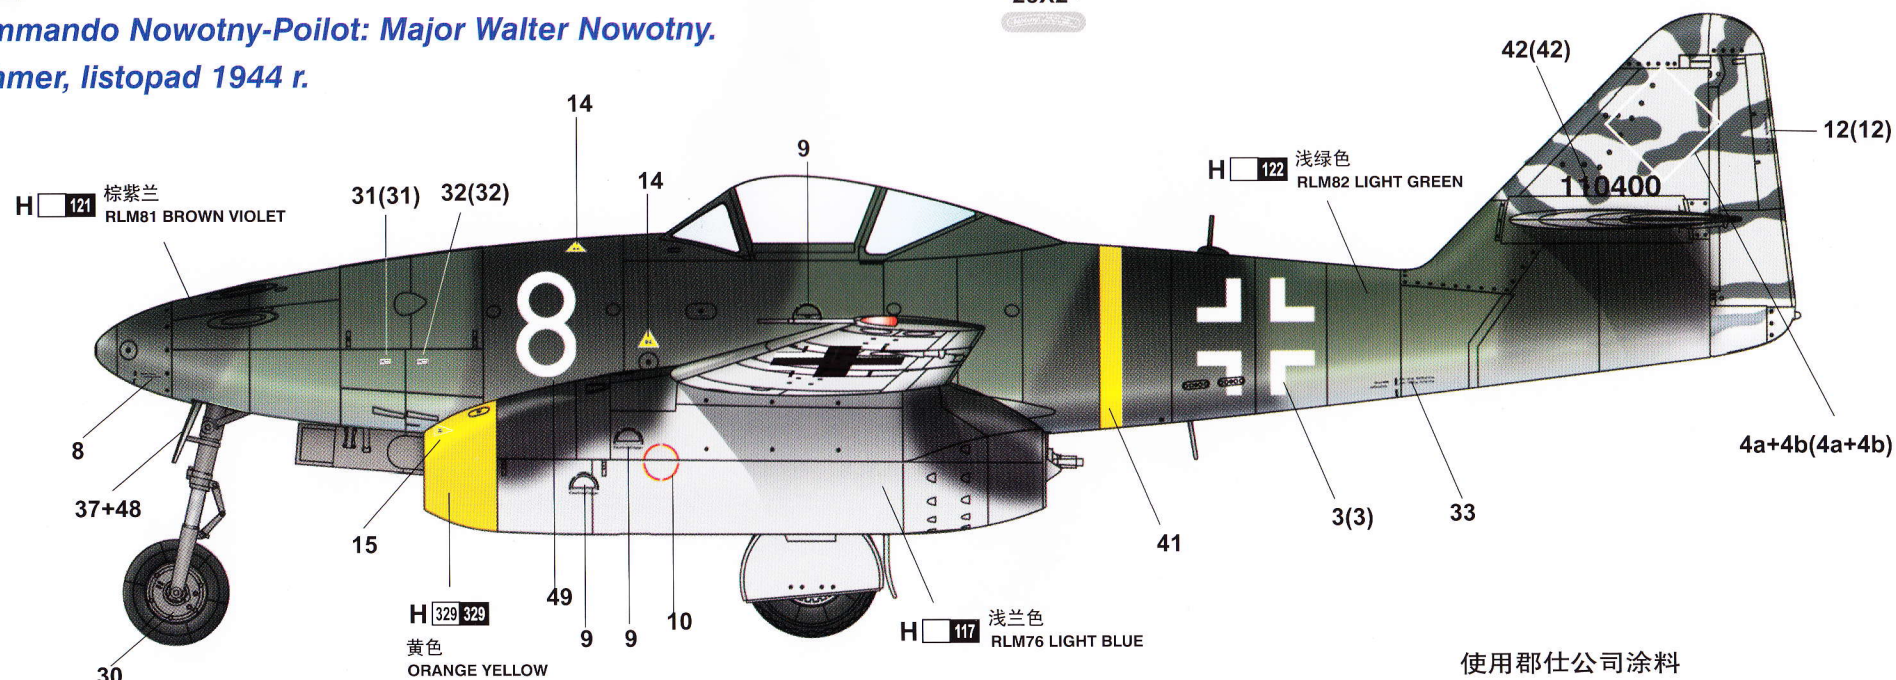

使用郡仕公司涂料
GUNZE SANGYO Mr. Color used