


1:72 SCALE AIRCRAFT
THE PLAAF B-5
中国轰-5轰炸机

ITEM NO.01603

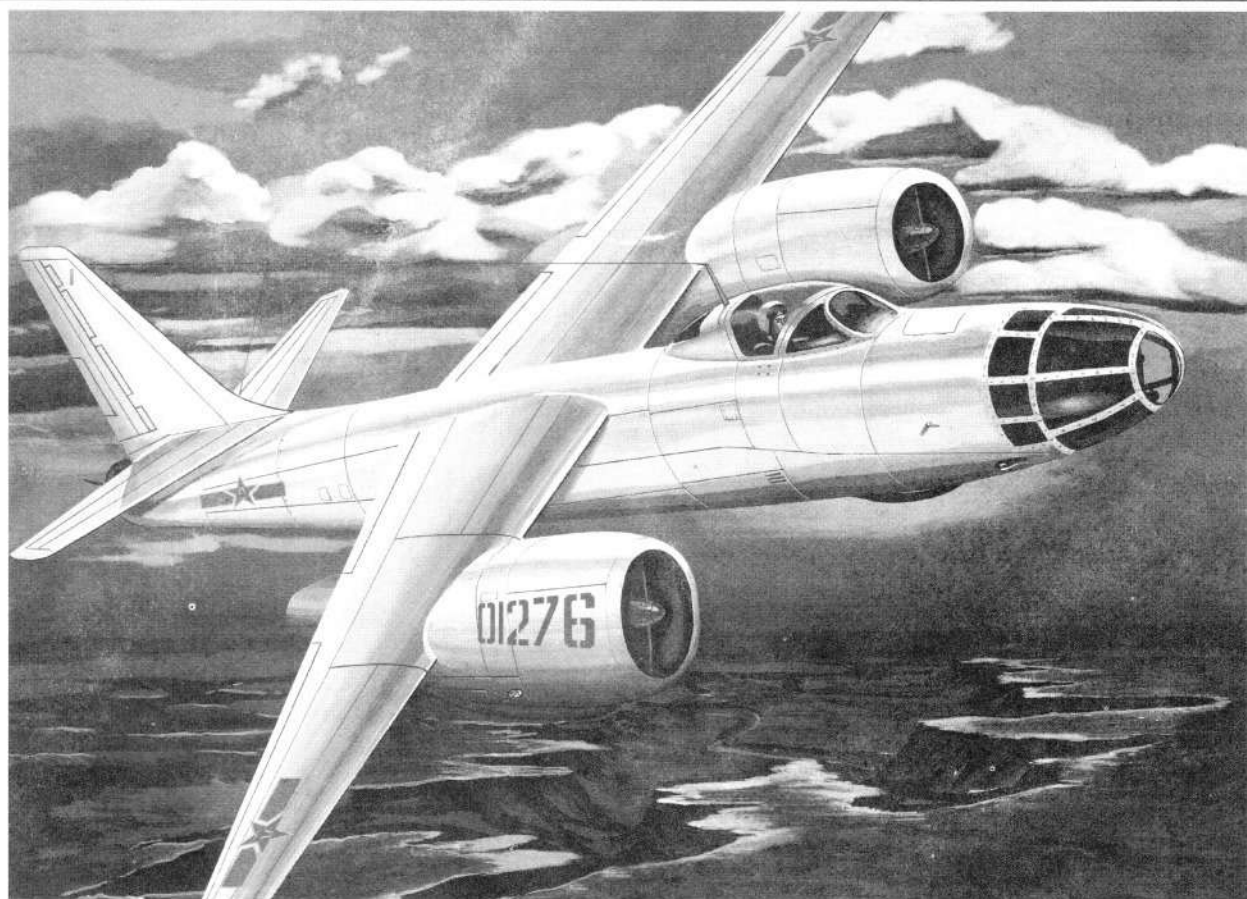

● 颜色指示 **COLORS**

XF-65 原野灰 Field Grey
 XF-56 金属灰色 Metallic Grey
 XF-49 黄褐色 Khaki
 XF-1 哑黑色 Flat Black
 XF-2 哑白色 Flat White
 X-11 铬银色 Chrome Silver
 X-26 净桔色 Clear Orange
 XF-10 哑棕色 Flat Brown

XF-5 哑绿色 Flat Green
 XF-62 橄榄褐 Olive Drab
 XF-54 暗海灰 Dark Sea Grey
 X-28 暗绿色 Dark Green
 X-25 透明绿 Clear Green
 X-27 透明红 Clear Red
 X-10 金属枪色 Gun Metal
 XF-12 明灰白色 J.N.Grey
 XF-23 青蓝色 Light Blue

必备工具 Required



水口剪
Side Cutters



刀片
Knife



钻头
Pin Vise



剪刀
Scissors



一字螺丝批
(-)Screwdriver



十字螺丝批
(+)Screwdriver



镊子
Tweezers



锉刀
Tile

符号表示 Mark



涂胶水
Cement



不涂胶水
No Cement




水贴纸
Decal




颜色指示
Paint Colors


A

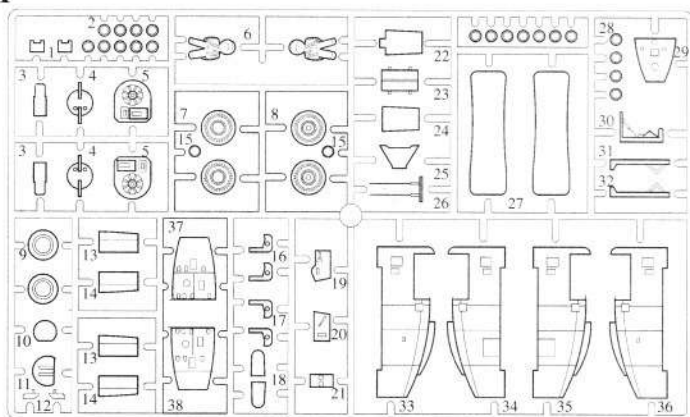


B

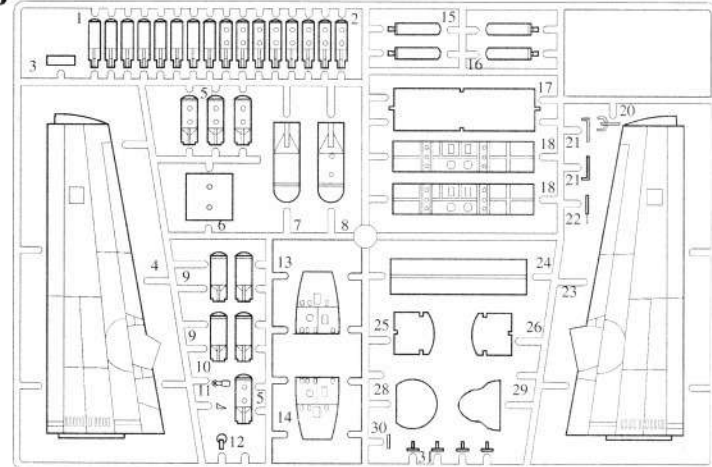

C

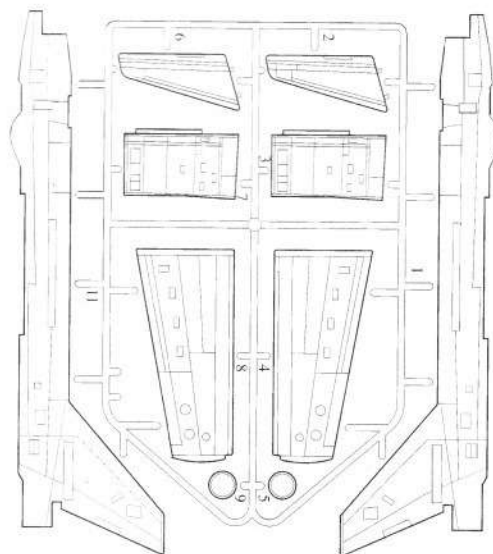

D

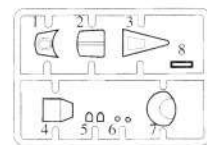



水贴纸的使用:

1. 从水贴上剪下印花;
2. 将印花放入温水中浸10秒,
然后放在干净布上。
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至水干, 气泡消失。






DECAL APPLICATION

1. Cut off decal from sheet.
2. Dip the decal in tepid water for about 10 sec. and place on a clean cloth.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.



1 飞机座舱装配 Cockpit assembly

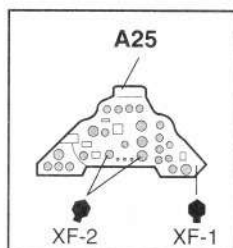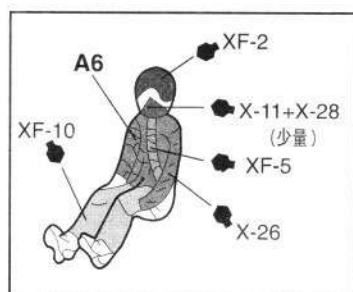



制作2套 Make two

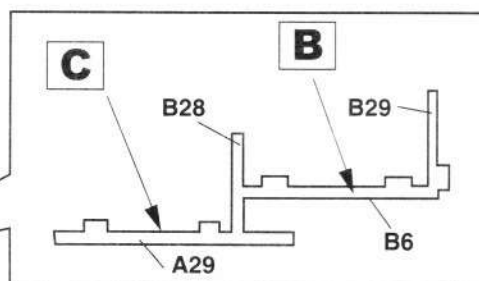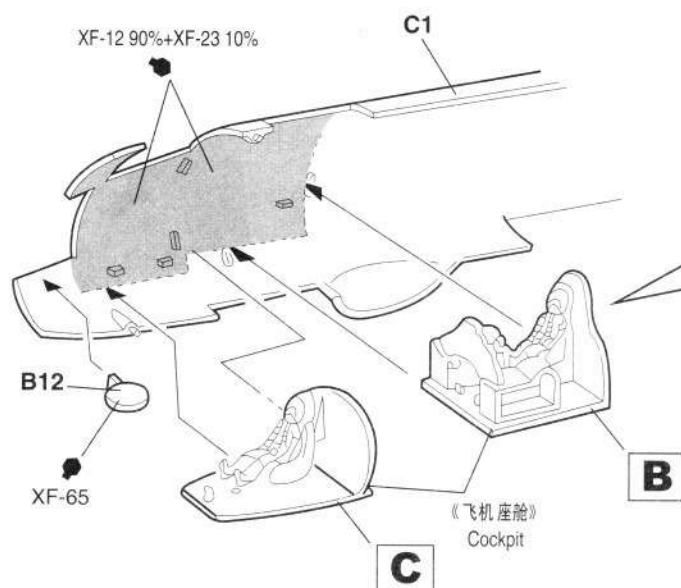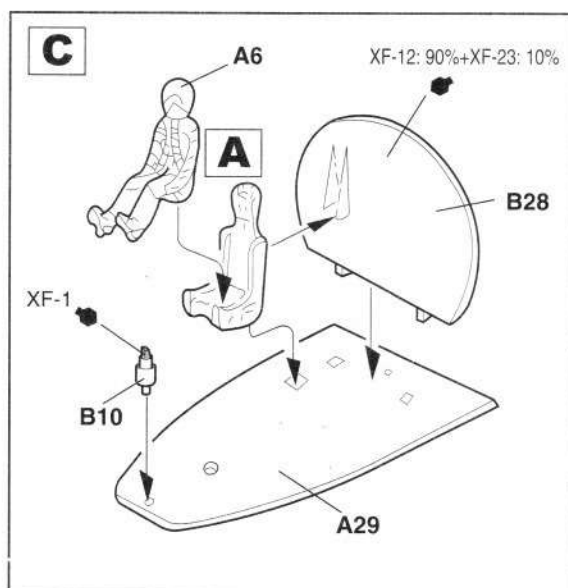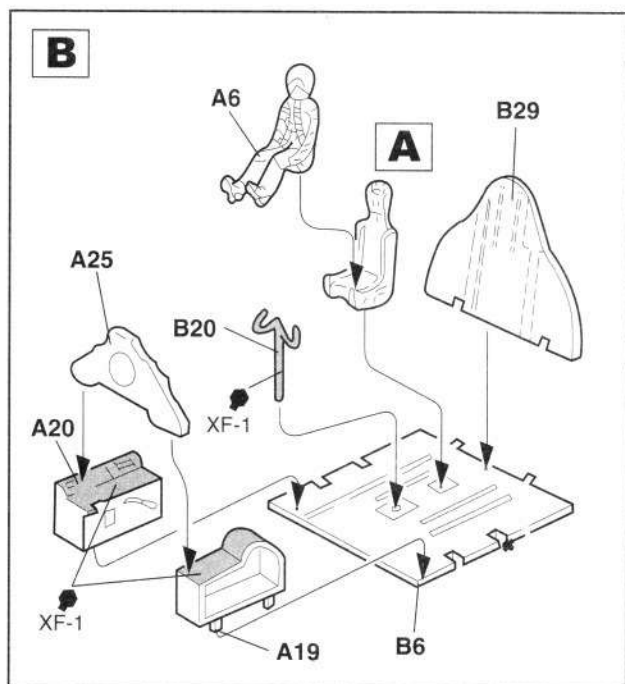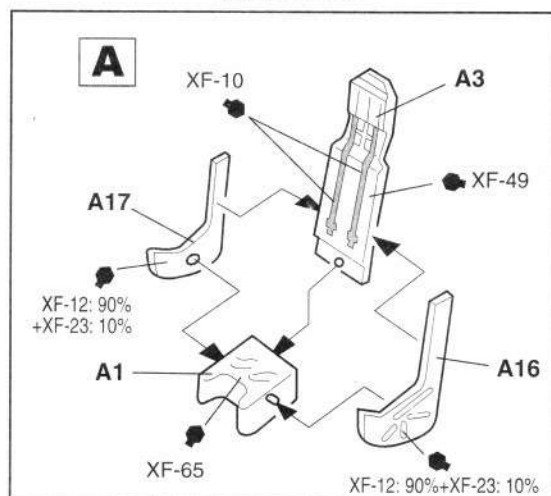

2 弹舱装配 Cartridge cabin

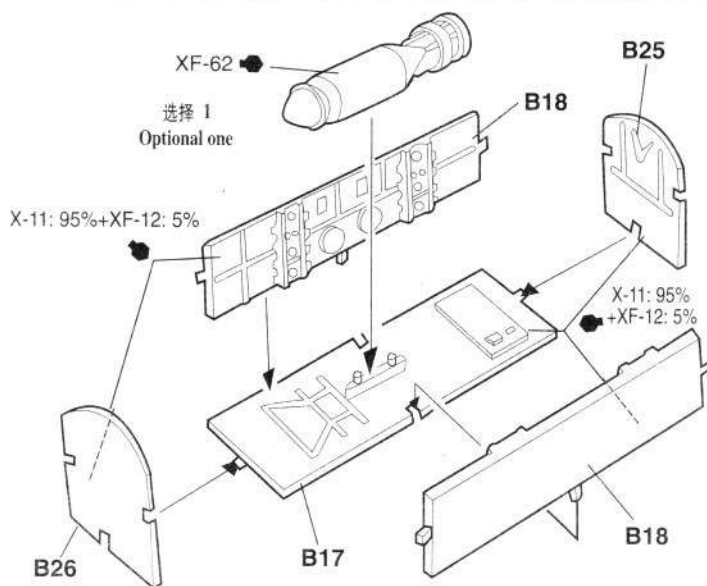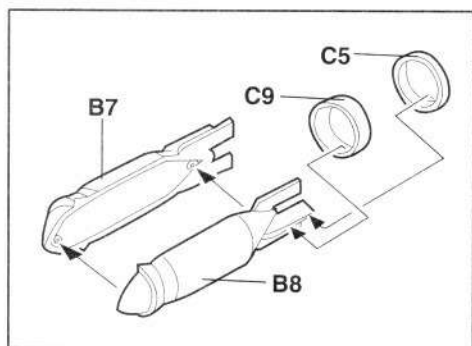


选择 2 Optional two

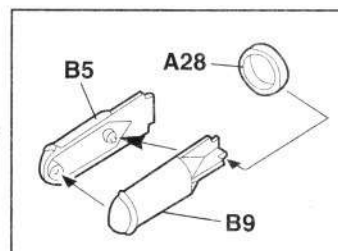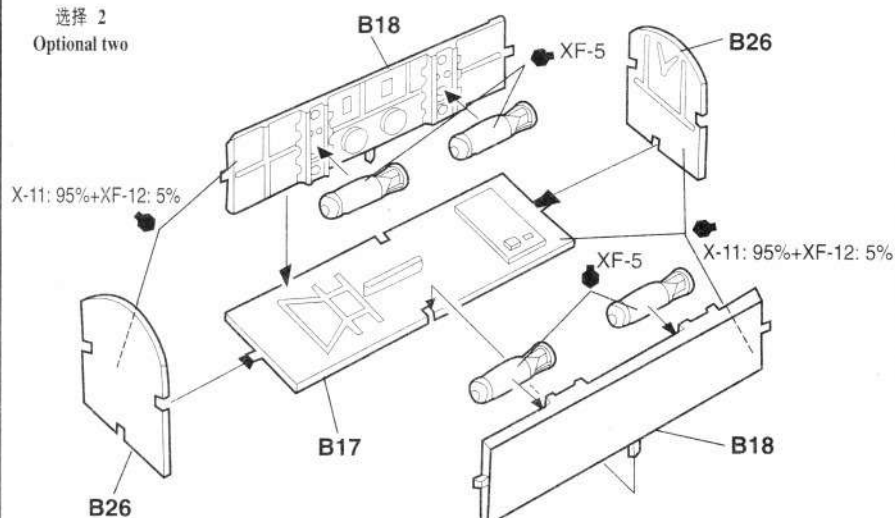


制作4套
Make four

选择 3 Optional three

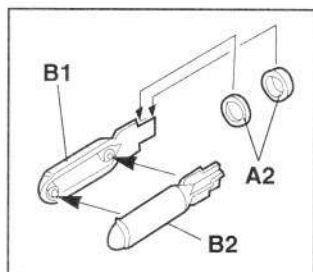


制作8套
Make eight

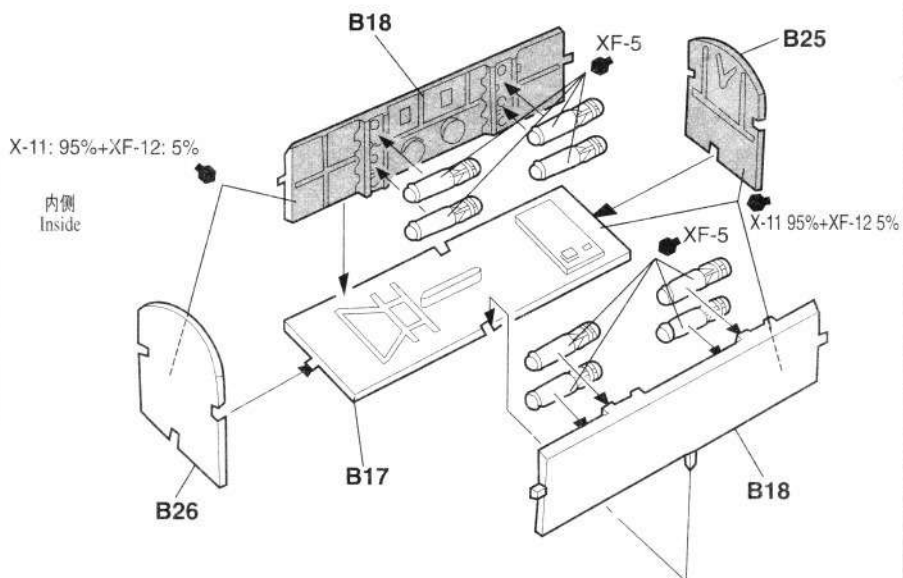


3

机身装配 Fuselage assembly

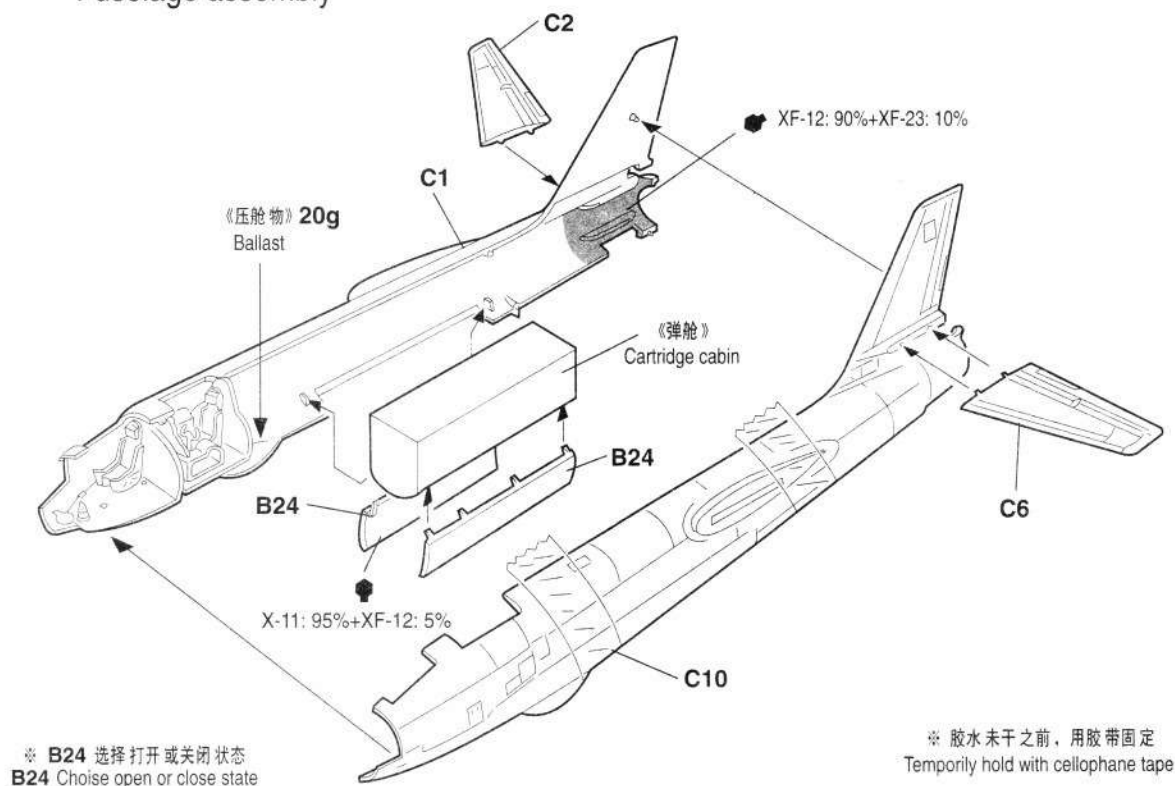


4

右发动机装配 Right engine assembly

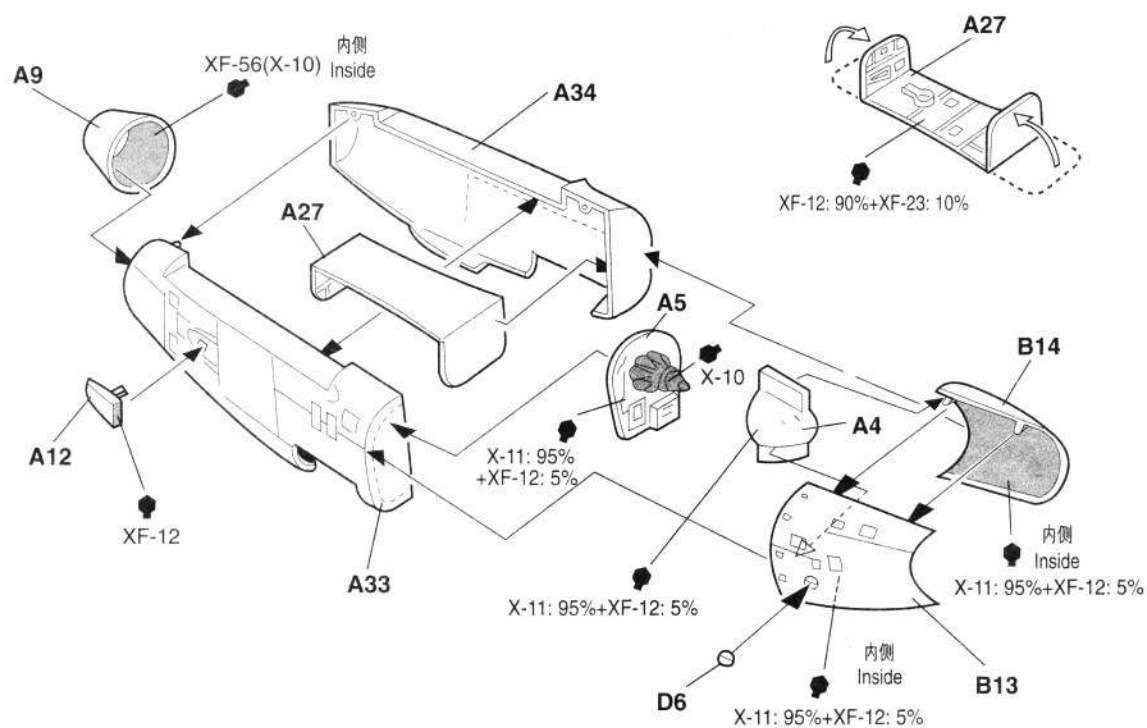


5

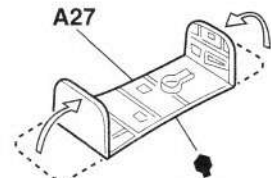


6



7 机翼装配 Wing assembly

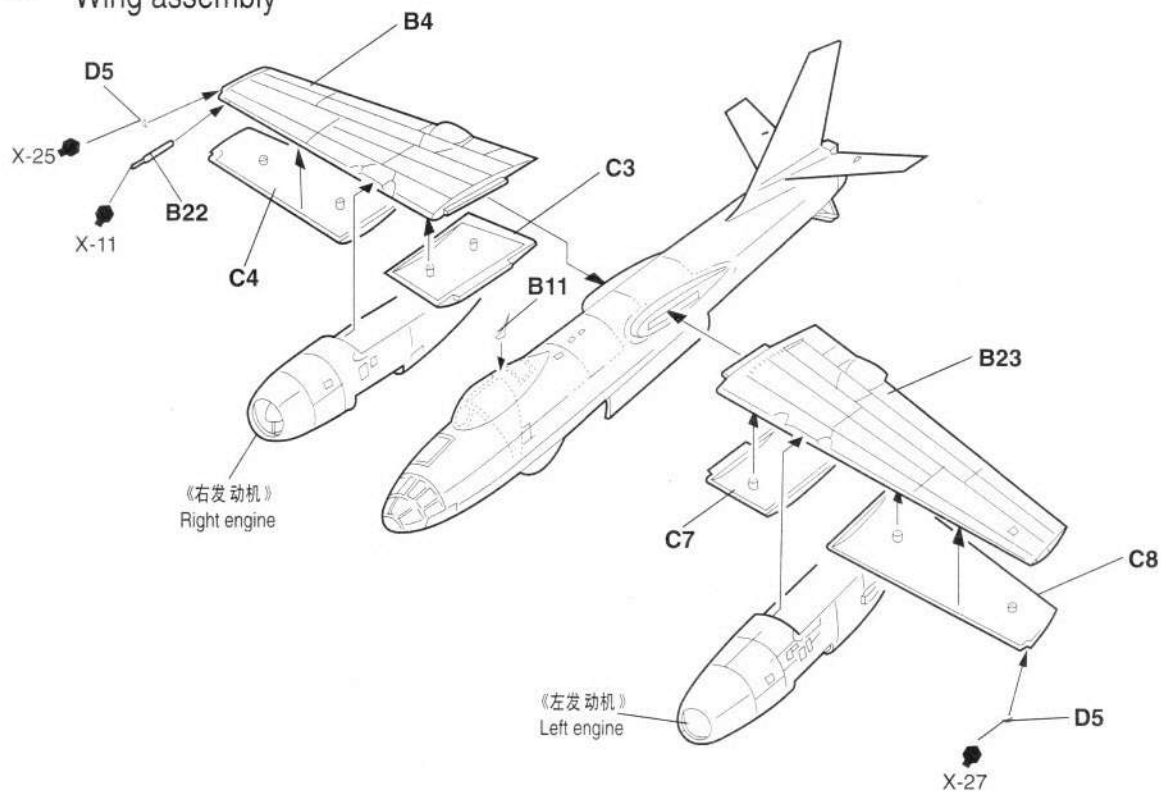

8 着陆架装配 Landing gear assembly

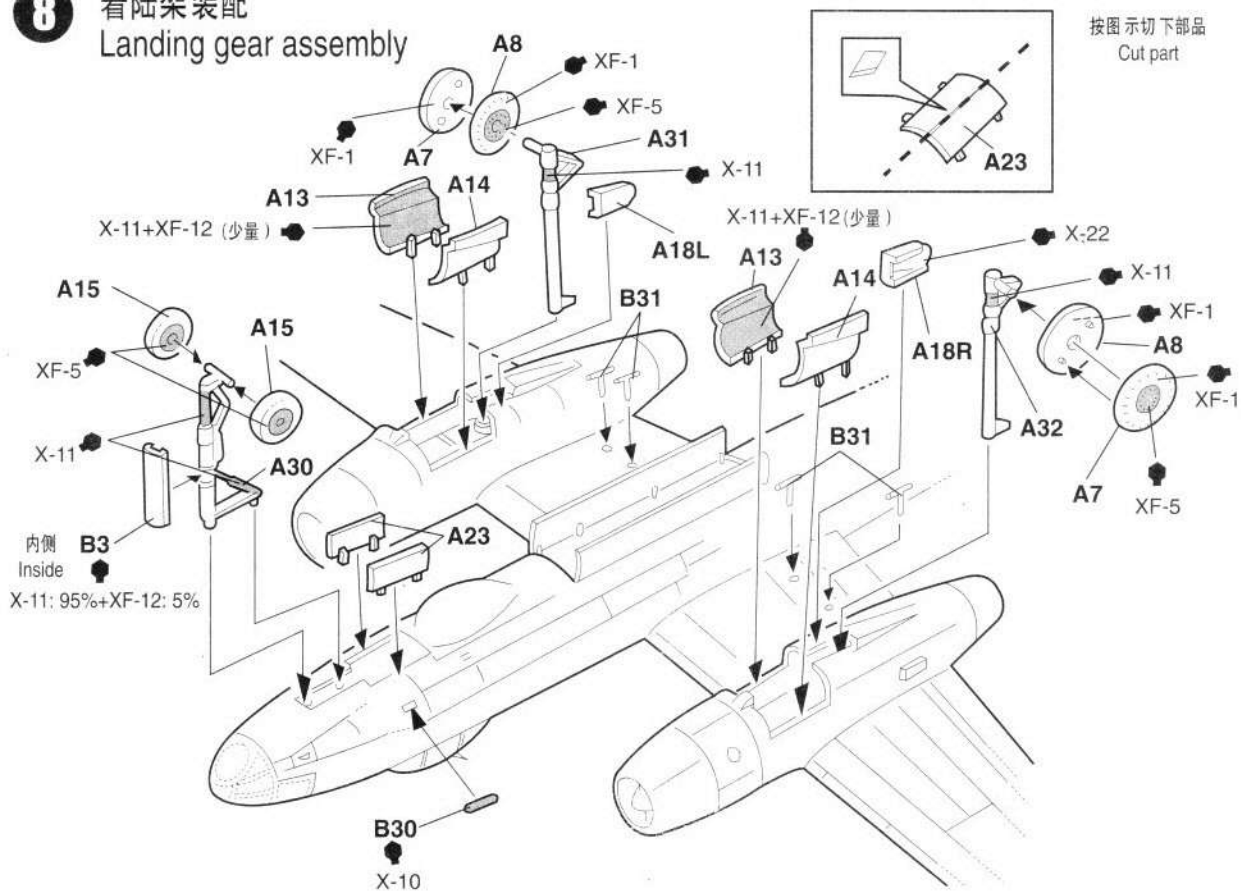

贴纸及涂装 Decal & Painting





1



1



1



2

1234567890 01276

2

1234567890 01276

3

3

1:72 CHINESE B-5/BR-5

海军航空兵轰五/轰侦五

WX-01603