

MONOGRAM

KIT 5716

85571600200

B-52B with X-15 EXPERIMENTAL AIRCRAFT

Much has been written about the military uses of the mammoth B-52 Stratofortress jet bomber, but one of the most important applications for the huge plane came during the X-15 rocket plane program. A B-52 was converted to the role of drop-plane and along with an X-15 rocket powered craft with an extra pair of giant fuel tanks, history was made on October 3, 1967, the unofficial absolute speed record of 4,520 mph, which is more than six times the speed of sound was set. Your Monogram model features a highly detailed X-15 that can be wing mounted on the B-52, an optional landing gear up or down position and authentic military decals for both aircraft are also included.



* REPEAT SEVERAL TIMES

* A REPETER PLUSIEURS FOIS



* REPEAT PROCEDURE

* RÉPÉTEZ LE PROCÉDÉ



* OPTIONAL PARTS

* PIÈCES EN OPTION



* DECAL

* DECAL COMANIE



* ASSEMBLY CAUTION

* ATTENTION D'ASSEMBLÉE



* CEMENT TOGETHER

* A COLLER



* REMOVE AND THROW AWAY

* A RETIRER ET JETER



* DO NOT CEMENT

* NE PAS COLLER

READ THIS BEFORE YOU BEGIN

- * Study the assembly drawings.
- * Each plastic part is identified by a number.
- * In the assembly drawings, some parts will be marked by a star (★) to indicate chrome plated plastic.
- * For better paint and decal adhesion, wash the plastic parts in a mild detergent solution. Rinse and let air dry.
- * Check the fit of each piece before cementing in place.
- * Use only cement for polystyrene plastic.
- * Scrape plating and paint from areas to be cemented.
- * Allow paint to dry thoroughly before handling parts.
- * Any unused parts may be discarded.

DECAL APPLICATION INSTRUCTIONS

1. Cut desired decal from sheet.
2. Dip decal in water for a few seconds.
3. Place wet decal on paper towel.
4. Wait until decal is movable on paper backing.
5. Place decal in position on model, face up and slide backing away.
6. Press out air bubbles with a soft damp cloth.
7. Milkiness that may appear is for better decal adhesion and will dry clear. Wipe away any excess adhesive.
8. Do not touch decal until fully dry.
9. Allow the decals 48 hours to dry before applying clear coat.

NOTE: Decals are compatible with setting solutions or solvents.

LIRE CE QUI SUIT AVANT DE COMMENCER

- * Etudier les schémas de montage.
- * Chaque pièce en plastique est identifiée par un numéro.
- * Sur les schémas de montage, certaines pièces sont marquées d'une étoile (★) pour indiquer qu'elles sont en plastique chromé.
- * Pour une meilleure prise de la peinture et des autocollants, laver les pièces en plastique avec une solution détergente peu concentrée. Les rincer et les laisser sécher à l'air.
- * Vérifier que chaque pièce s'ajuste bien avant de la coller en place.
- * N'utiliser que de la colle pour polystyrène.
- * Gratter les parties à coller pour enlever le chrome et la peinture.
- * Laisser la peinture bien sécher avant de manipuler les pièces.
- * Toute pièce inutilisée peut être jetée.

DIRECTIVES D'APPLICATION DES AUTOCOLLANTS

1. Découper l'autocollant désiré de la feuille.
2. Tremper l'autocollant dans de l'eau pendant quelques secondes.
3. Placer l'autocollant mouillé sur une serviette en papier.
4. Attendez que l'autocollant puisse être déplacé sur son support en papier.
5. Mettre l'autocollant en position sur le modèle face sur le dessus et faire glisser le support pour l'enlever.
6. Appuyer avec un chiffon doux humide pour éliminer les bulles d'air.
7. La substance laiteuse qui peut apparaître est destinée à améliorer l'adhésion de l'autocollant et devient incolore au séchage. Essuyer pour enlever tout excédent d'adhésif.
8. Ne pas toucher l'autocollant tant qu'il n'est pas bien sec.
9. Laisser l'autocollant sécher pendant 48 heures avant d'appliquer une couche transparente.

REMARQUE: Les autocollants sont compatibles avec les solutions de fixage ou les solvants.

This paint guide is provided to complete this kit as shown on the box.

Ce guide de peintures est fourni pour reproduire le modèle réduit qui apparaît sur la boîte.

Aluminum	Aluminium
Dark Aluminum	Aluminium foncé
Semi Gloss Black	Noir satiné
Flat Black	Noir mat
Gloss Red	Rouge brillant
Flat White	Blanc mat
Silver	Argent
Gunmetal	Bronze
Light Gray	Gris clair
Zinc Chromate	Cromate de zinc
Orange	Orange

**If you have any questions or comments, call our hotline at: (800) 833-3570
or, please write to:**





Revell Inc Consumer Service Department, 1850 Howard Street Unit A, Elk Grove Village, Illinois 60007

Be sure to include the plan number (85571600200), part number, description, your return address and phone number.

Visit our website: www.revell.com




SEE STEP 4, IF YOU CHOOSE TO DISPLAY THE B52B WITH WHEELS UP

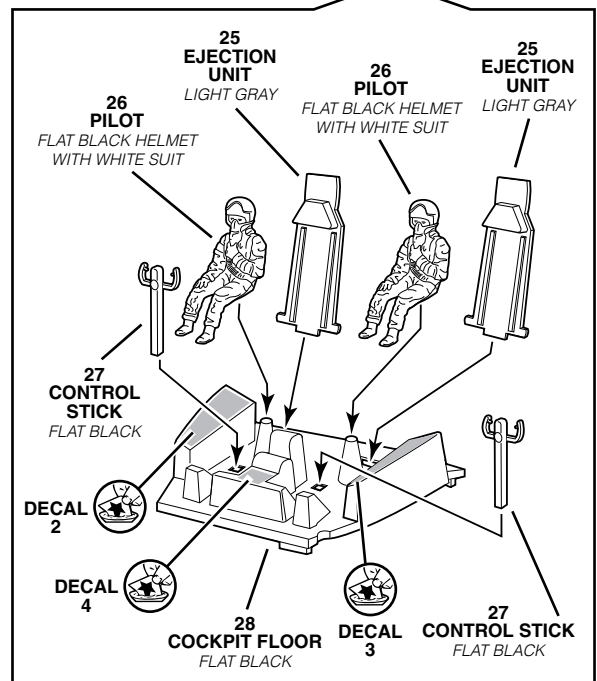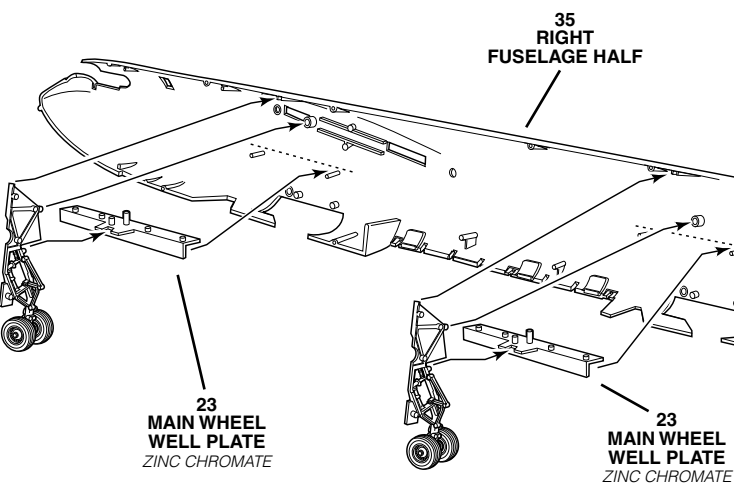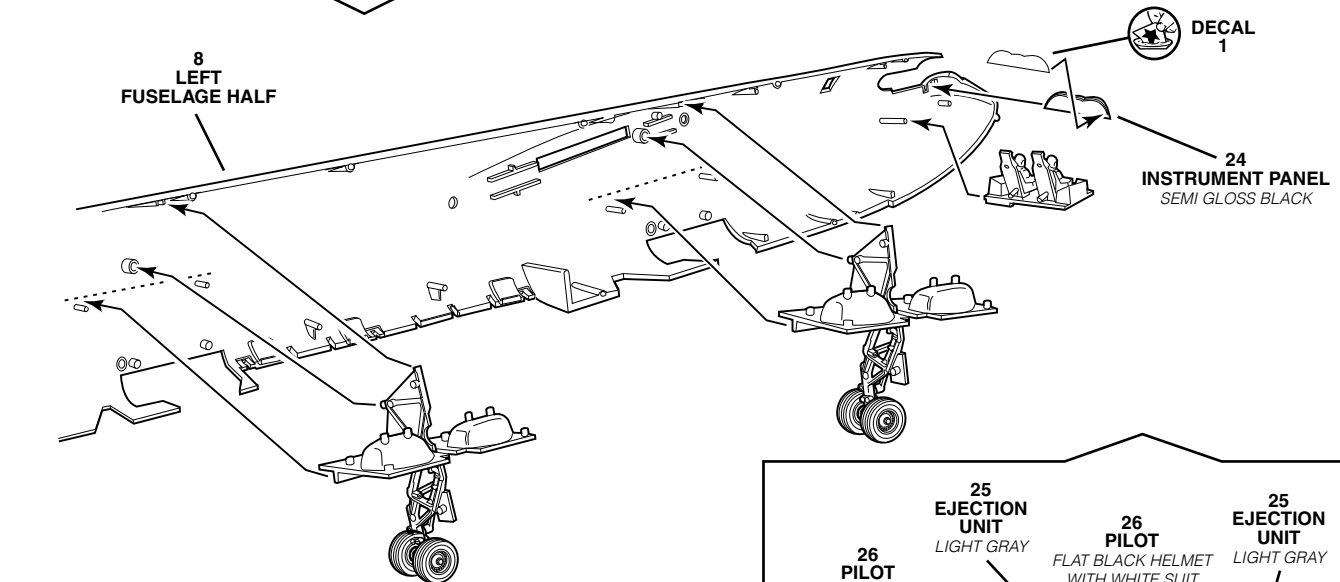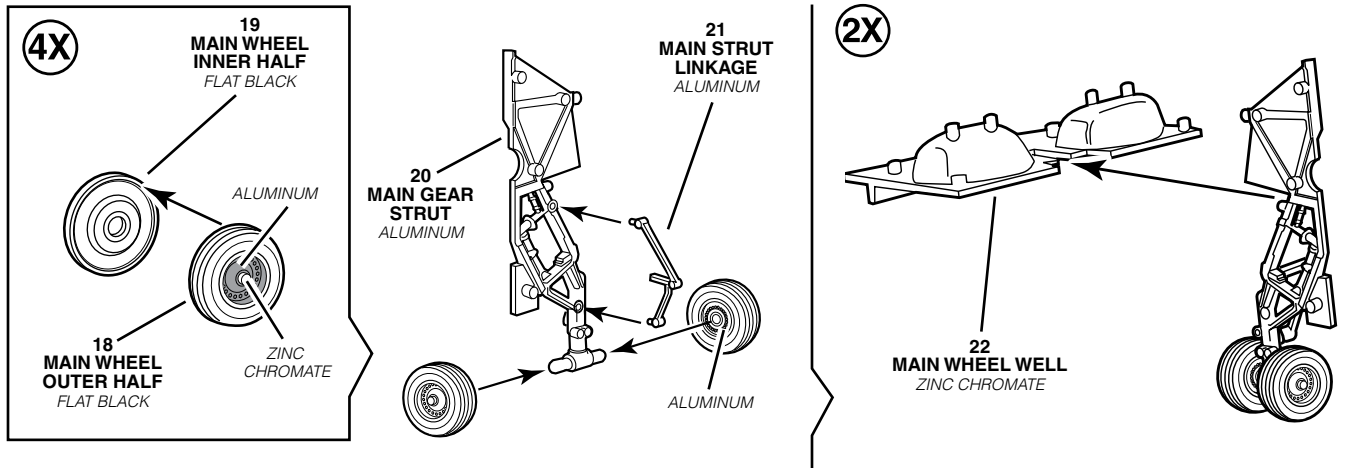


2

DOOR / WINDOW ASSEMBLY

RIGHT


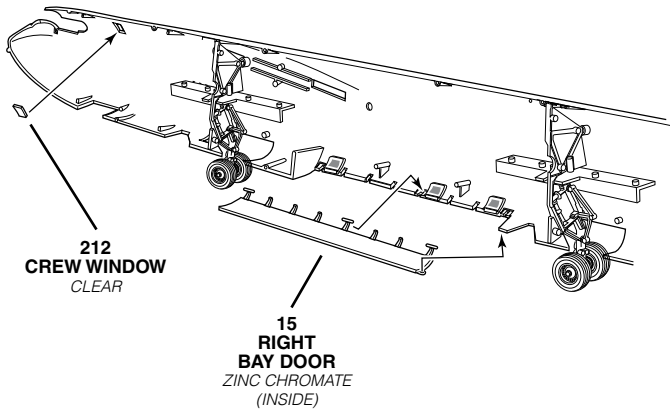


LEFT

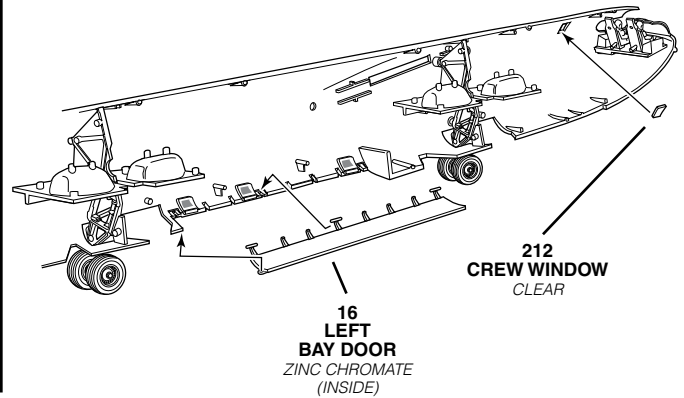




3

FUSELAGE ASSEMBLY

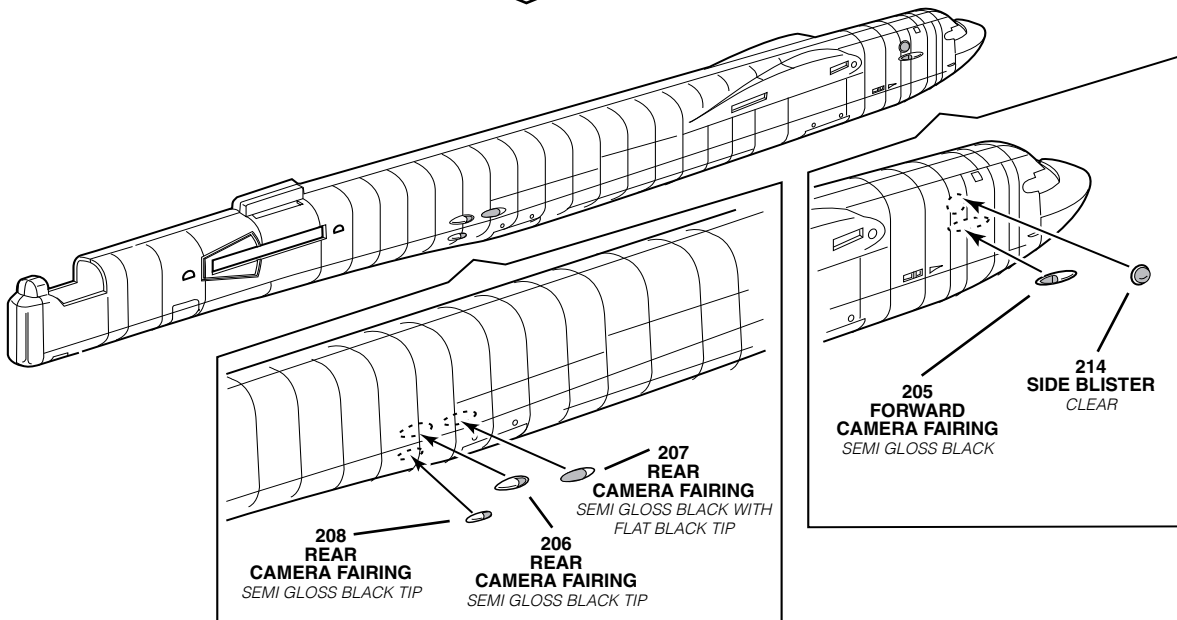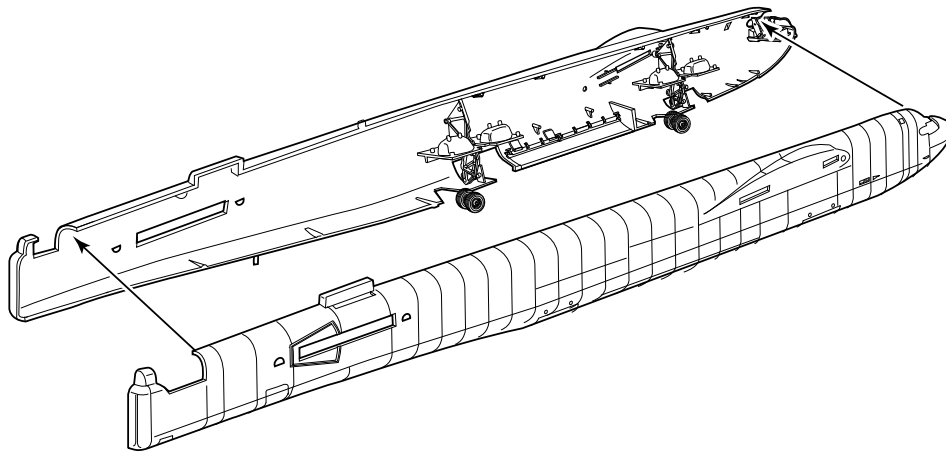

4


MAIN DOOR ASSEMBLY

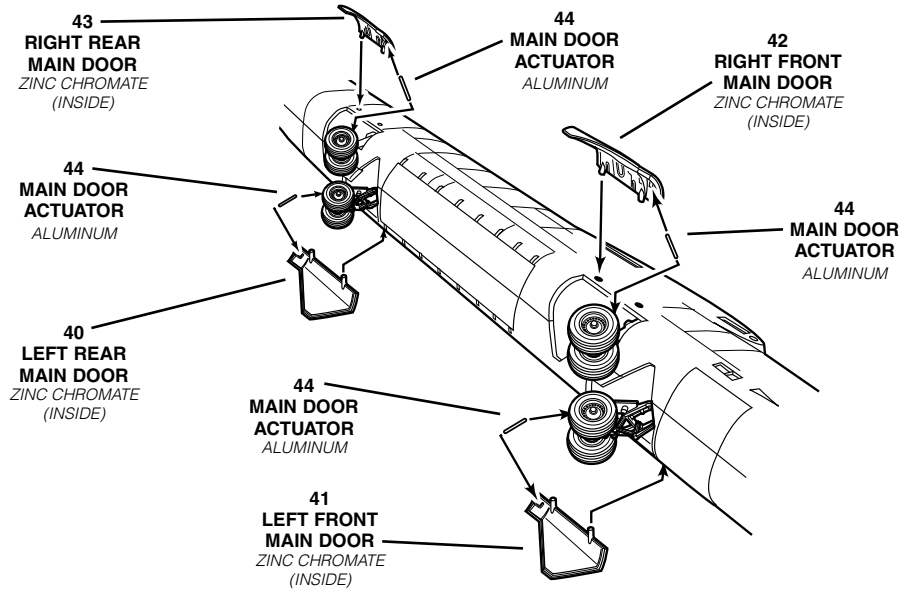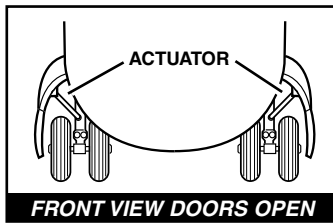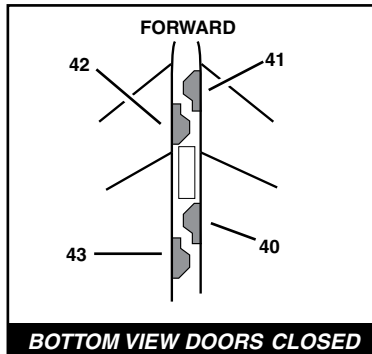

5


WING ASSEMBLY

SPOILER CAN BE GLUED IN THE OPEN OR CLOSED POSITION

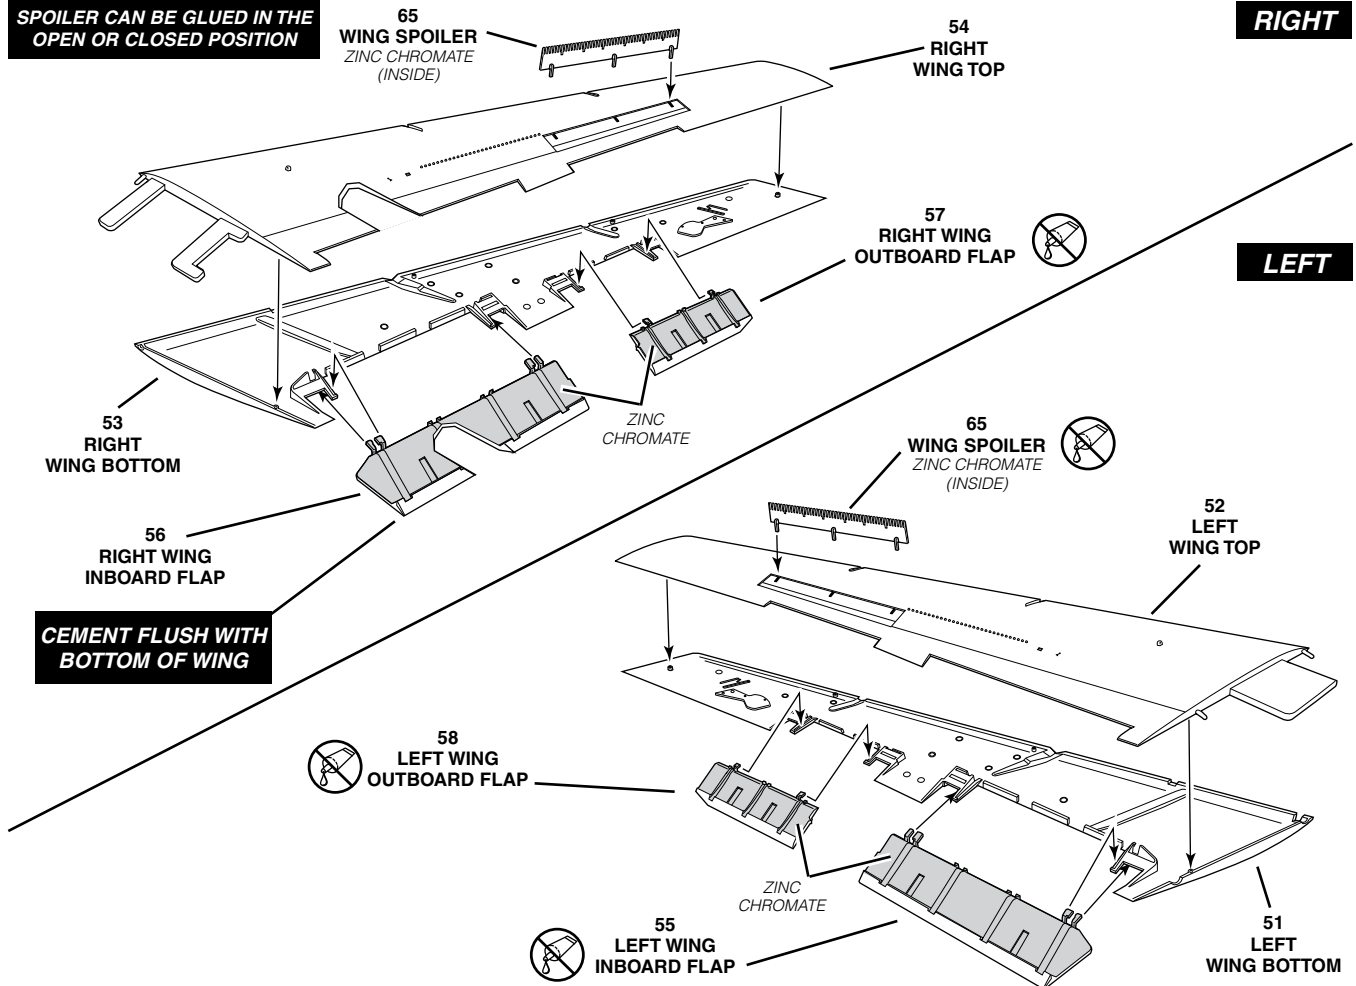


6





WING TO FUSELAGE ASSEMBLY

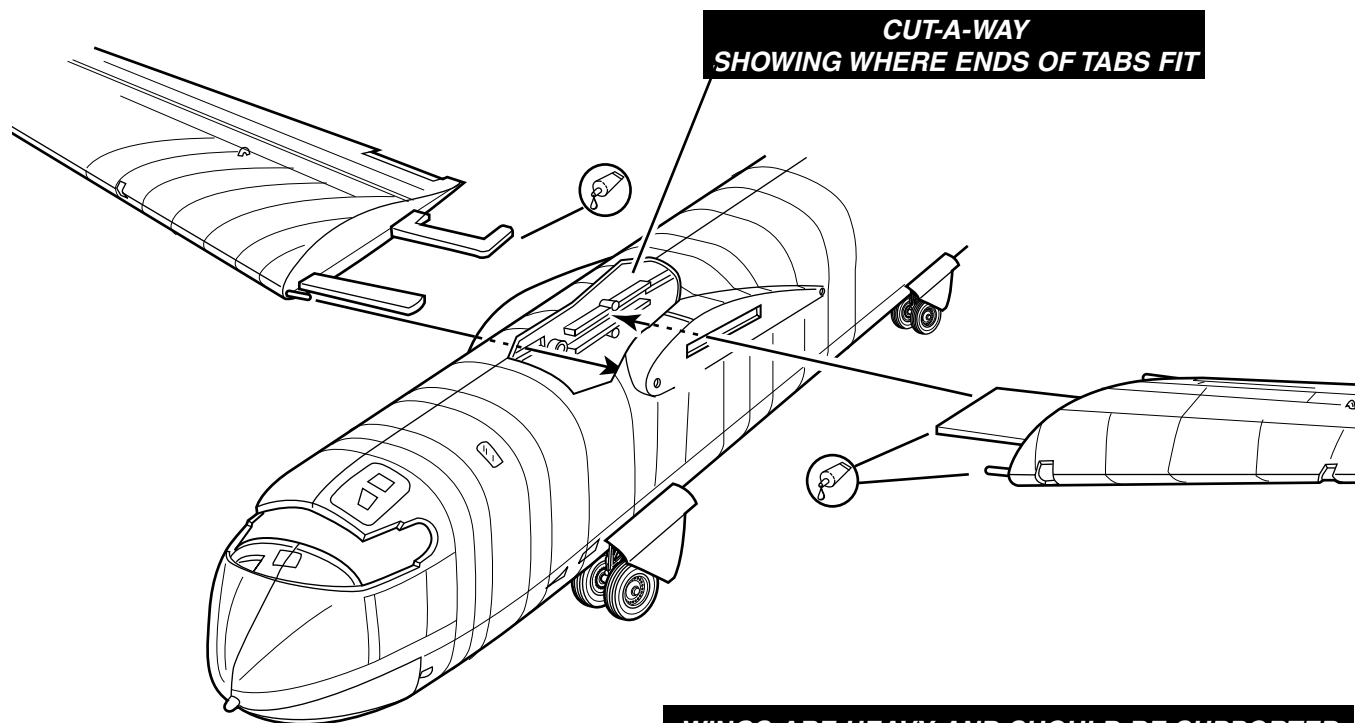

7



OUTRIGGER ASSEMBLY

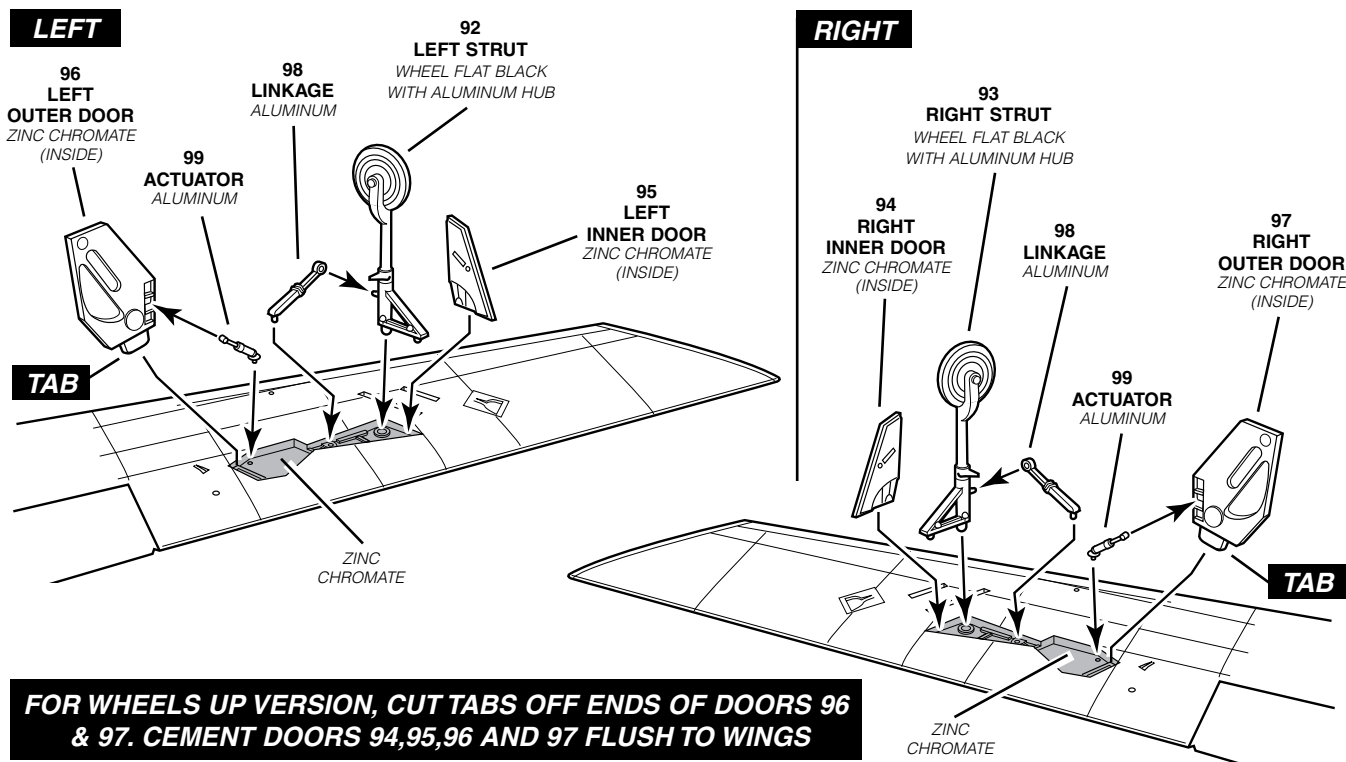

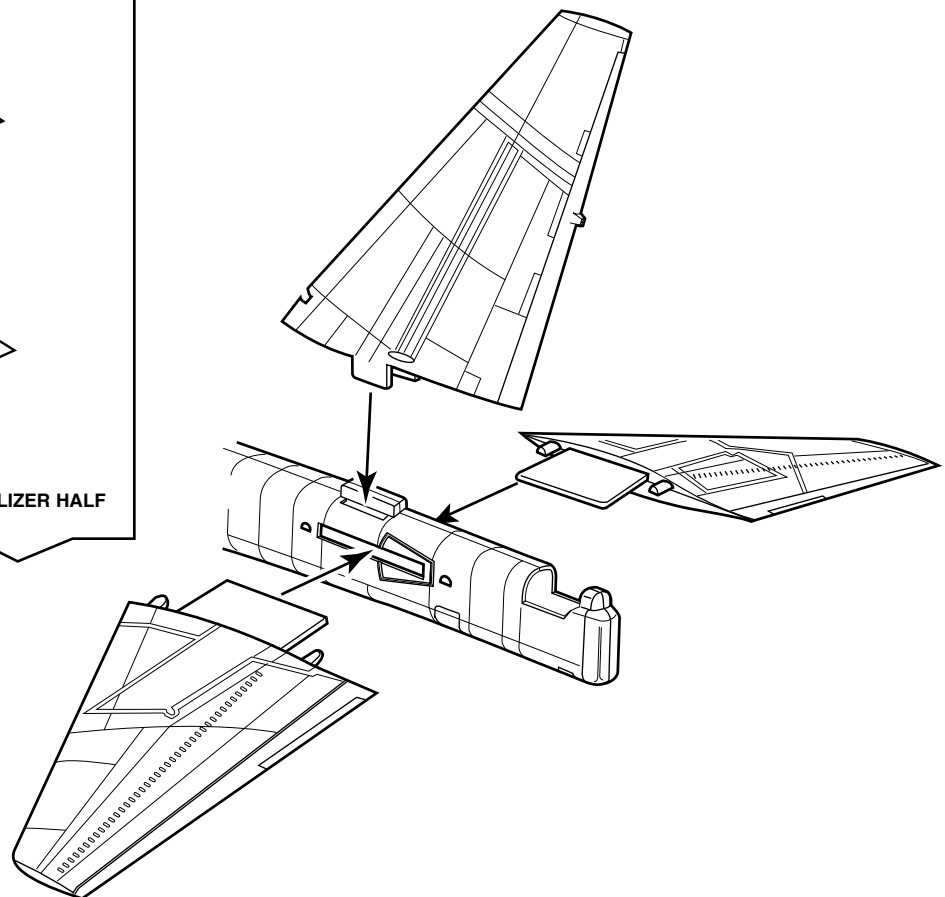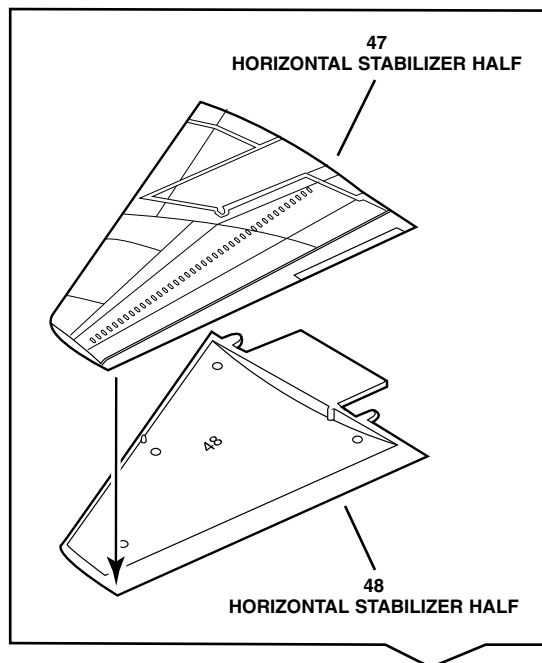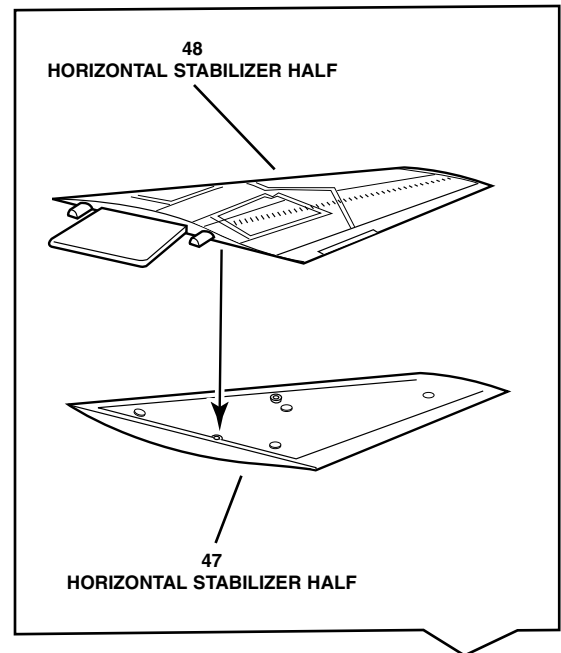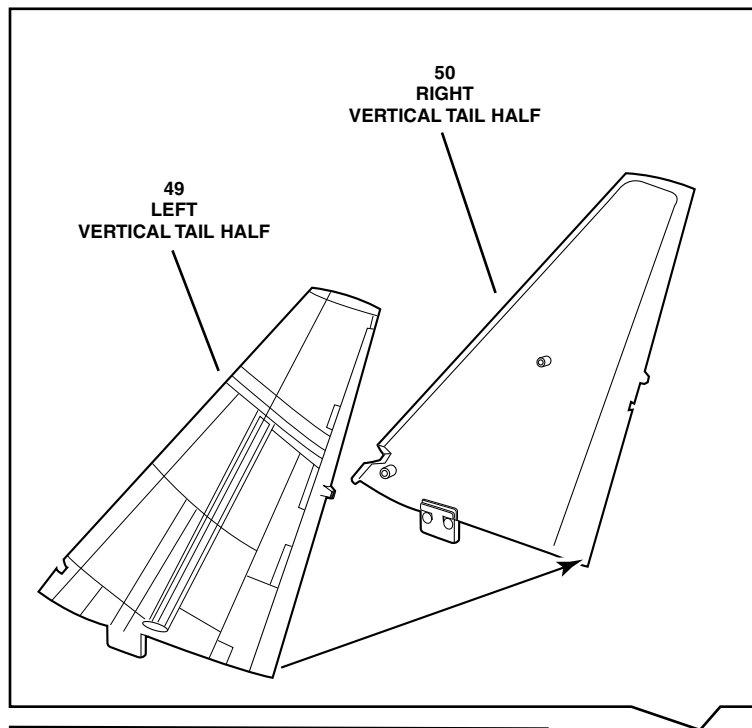

9

WINDSHIELD / CANOPY ASSEMBLY

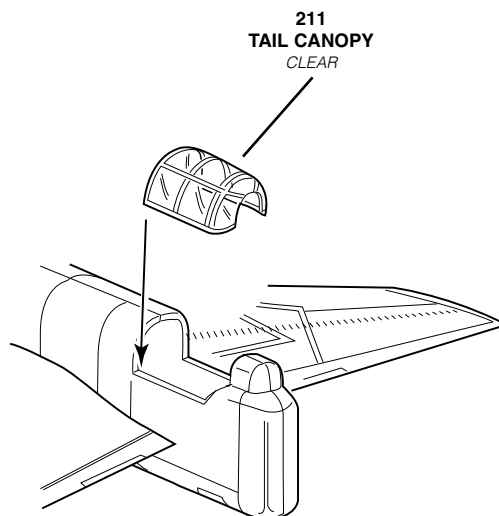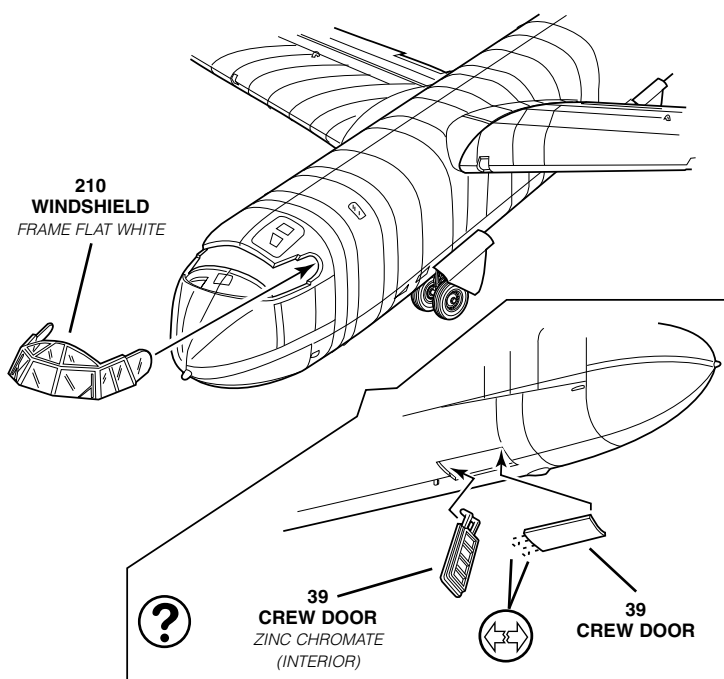


10



DISPLAY ENGINE ASSEMBLY




LEFT WING OUTBOARD NACELLE

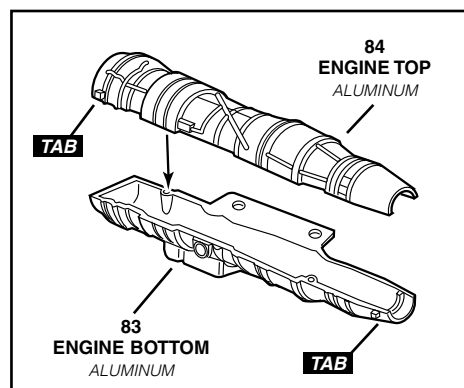



NOTE: NACELLE PROPS #87 CEMENTS TO PART #86 AND TO THE TABS ON THE ENGINE PARTS 83 & 84

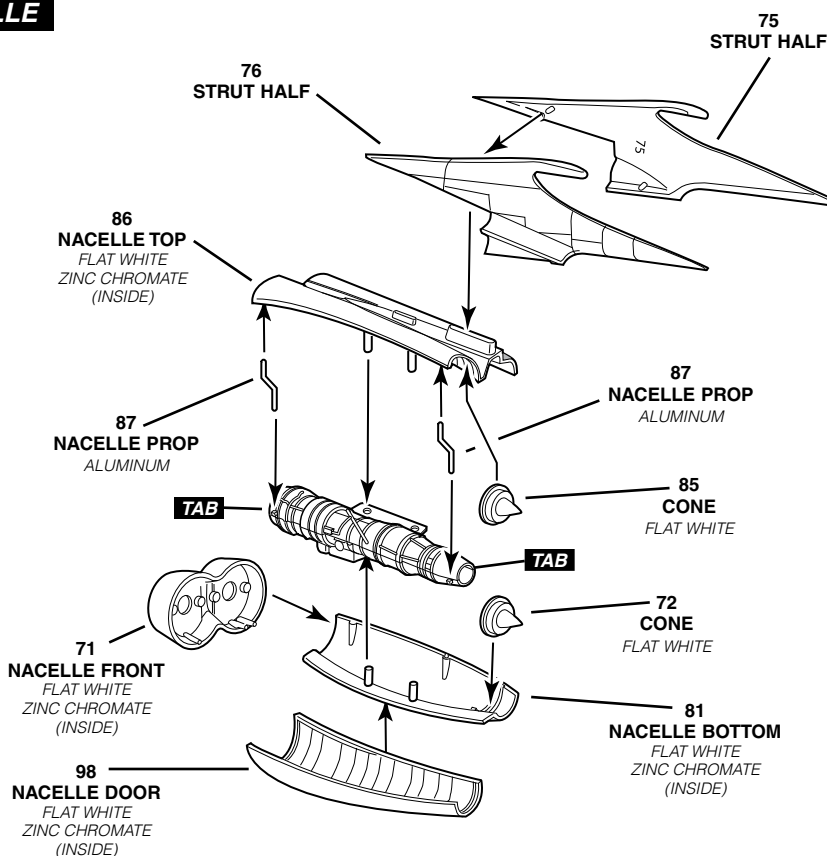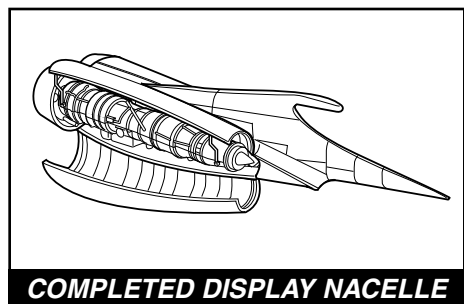


RIGHT INBOARD A

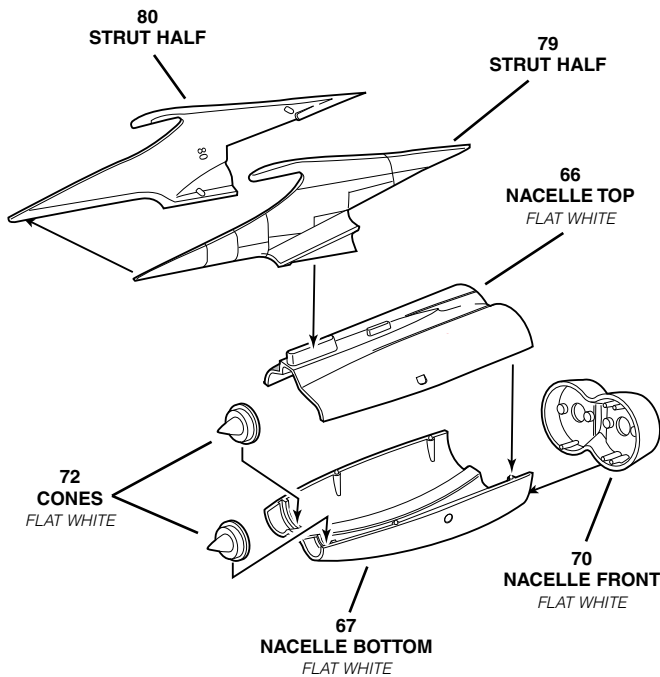


LEFT INBOARD C

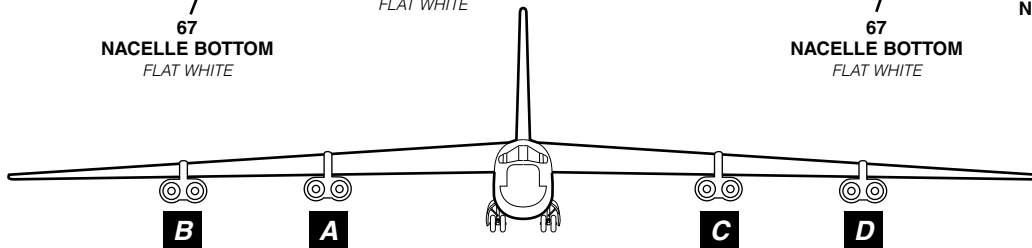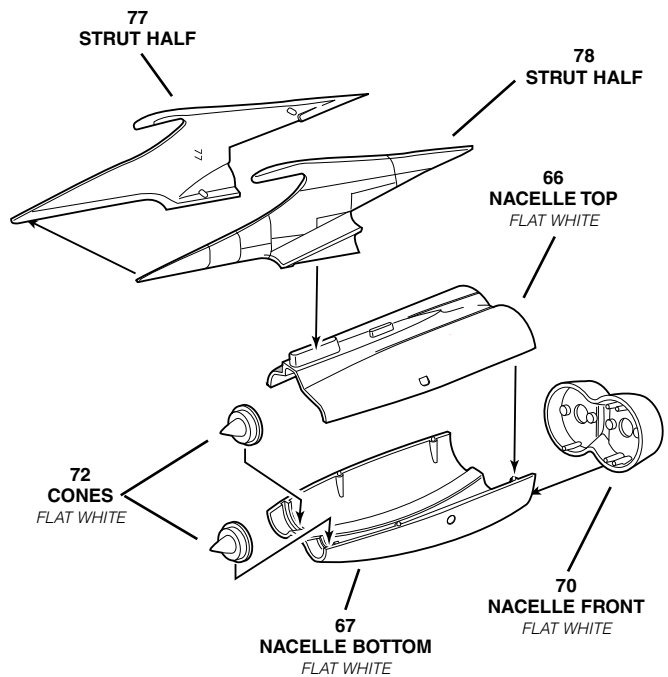

RIGHT OUTBOARD B

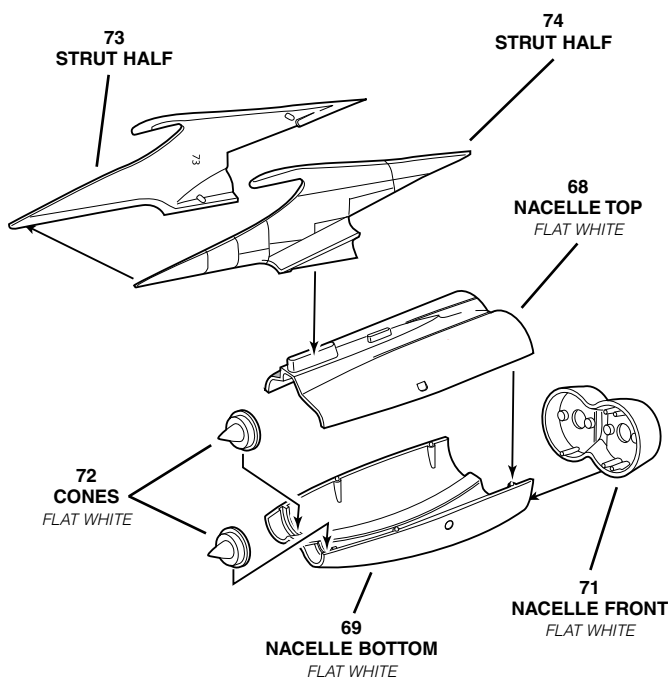


LEFT OUTBOARD D

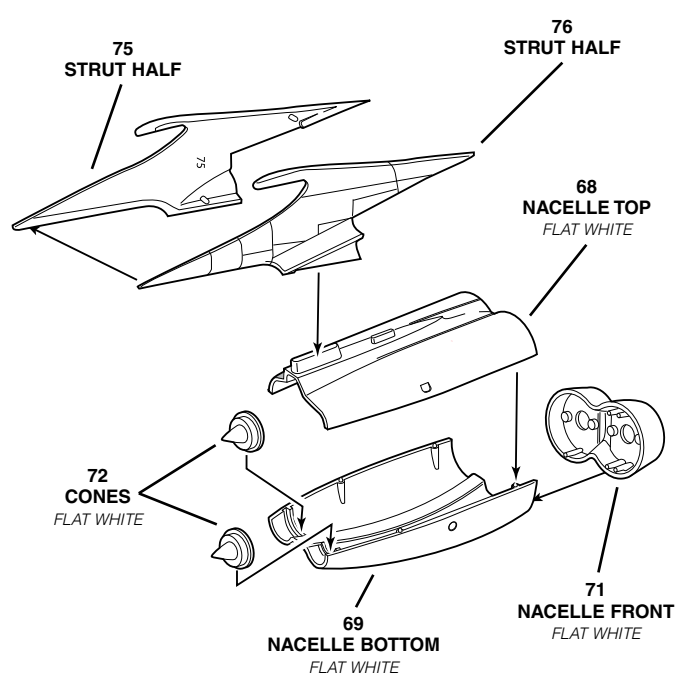

12



FINAL ASSEMBLY

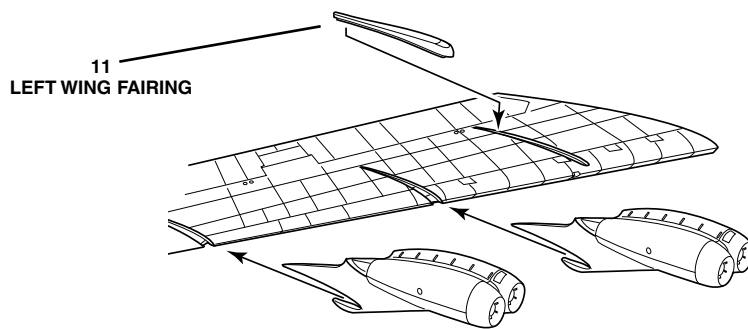

LEFT

202
RIGHT WING PYLON HALF

203
RIGHT WING PYLON HALF

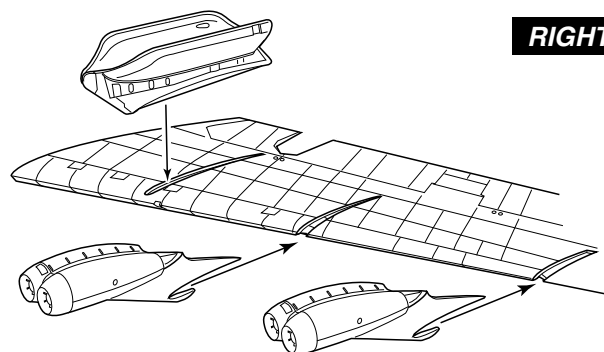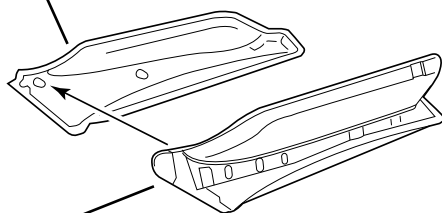


RIGHT

13


X-15 ASSEMBLY

VERSION A

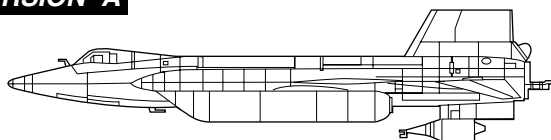


PAINT NOTE: ENTIRE AIRCRAFT WHITE, EXCEPT TANKS

VERSION B

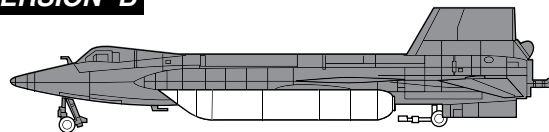


PAINT NOTE: ENTIRE AIRCRAFT BLACK, EXCEPT TANKS

29
FIN INTERIOR

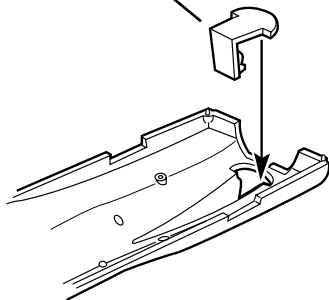





2
FUSELAGE
BOTTOM

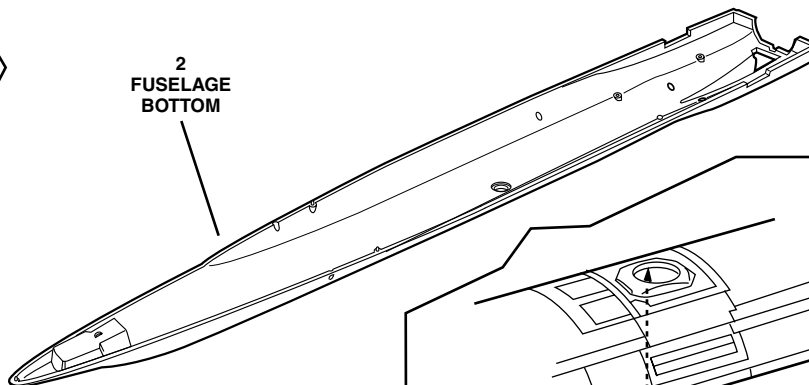

51
CAMERA PORT
CLEAR





14

COCKPIT ASSEMBLY

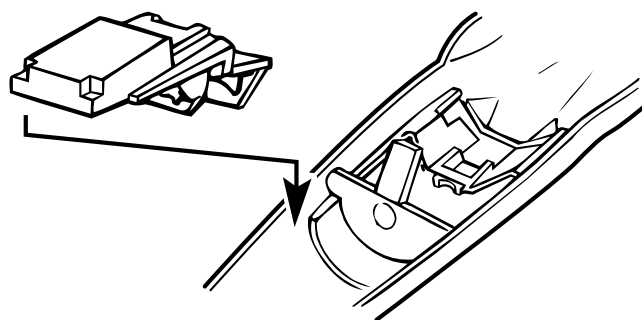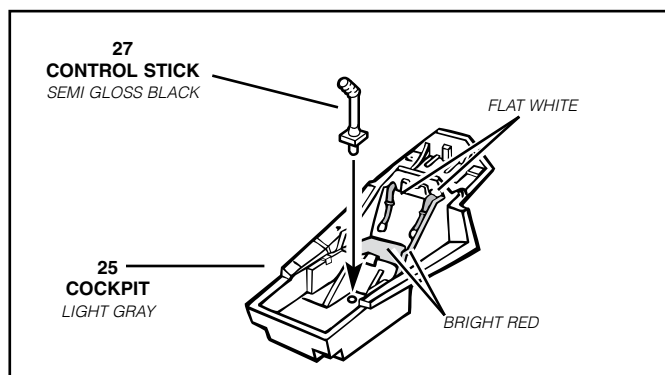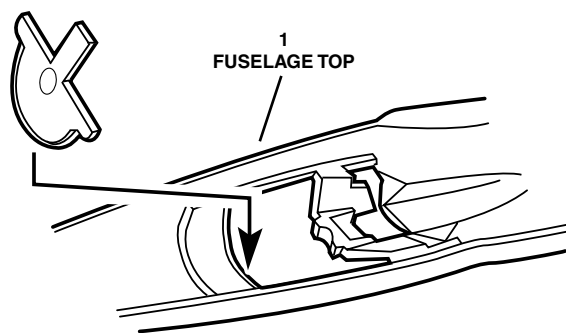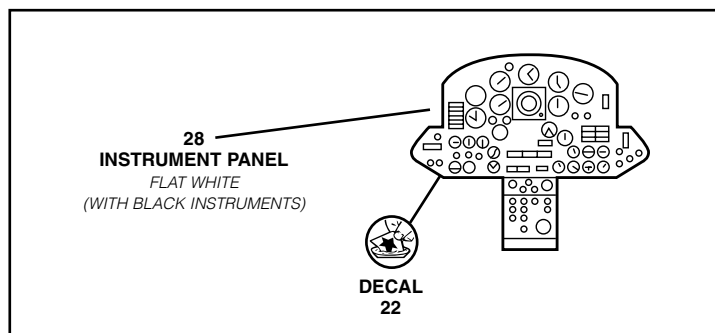

15

FUSELAGE ASSEMBLY

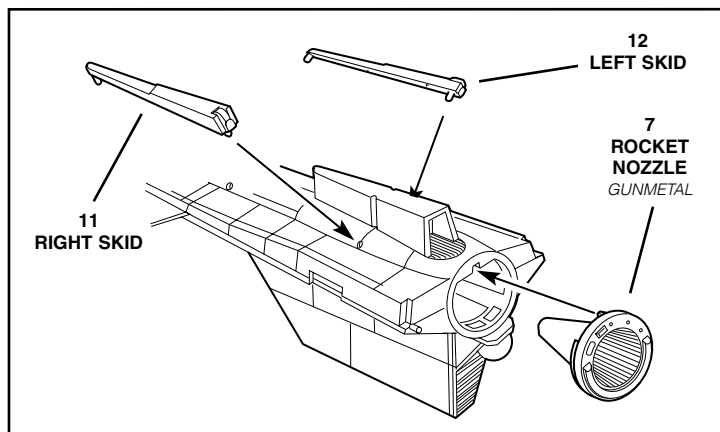
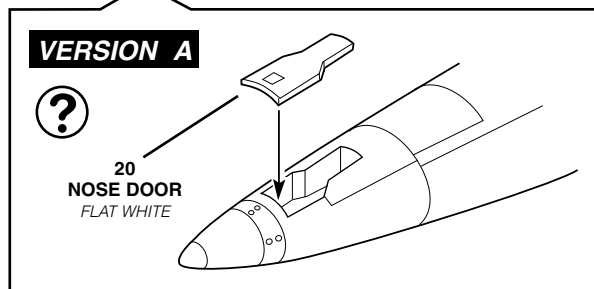
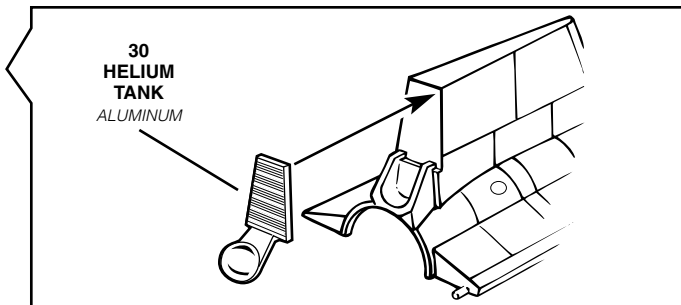
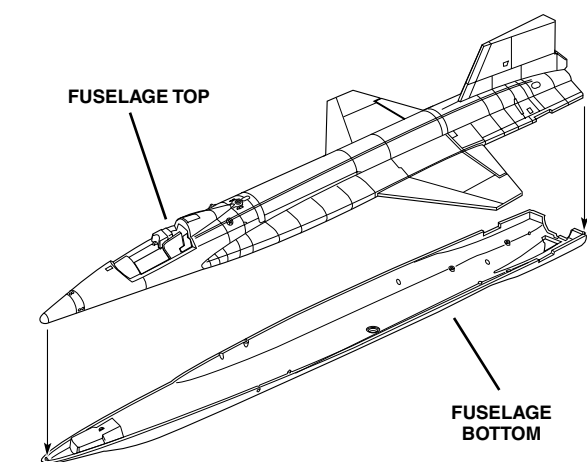


16

NOSE / DOLLY WHEEL ASSEMBLY



**VERSION B OPTIONAL PARTS FOR WHEELS DOWN
WHEN X-15 IS NOT ATTACHED TO B-52B**

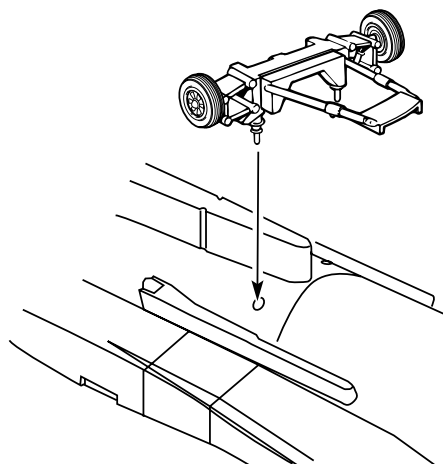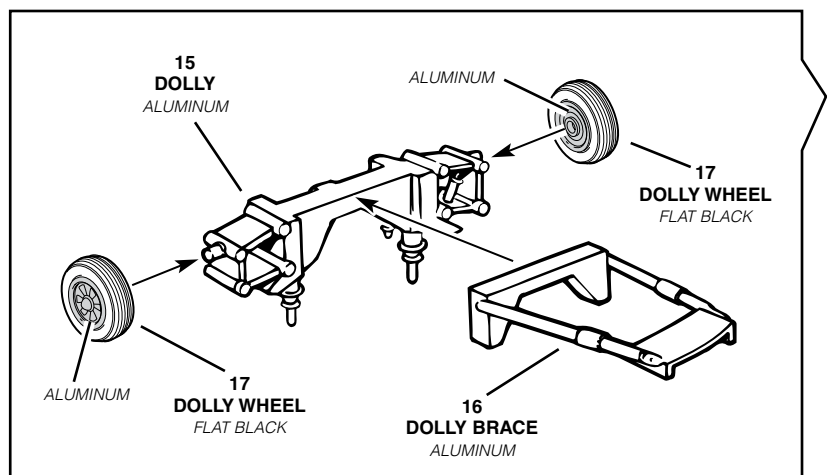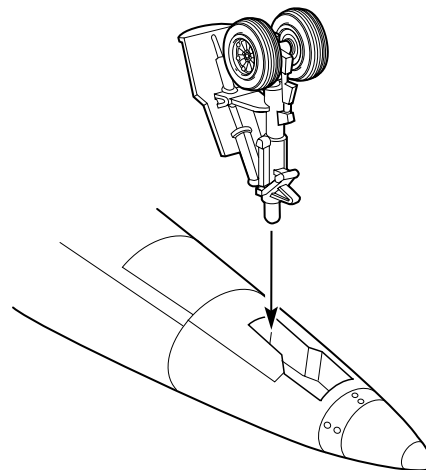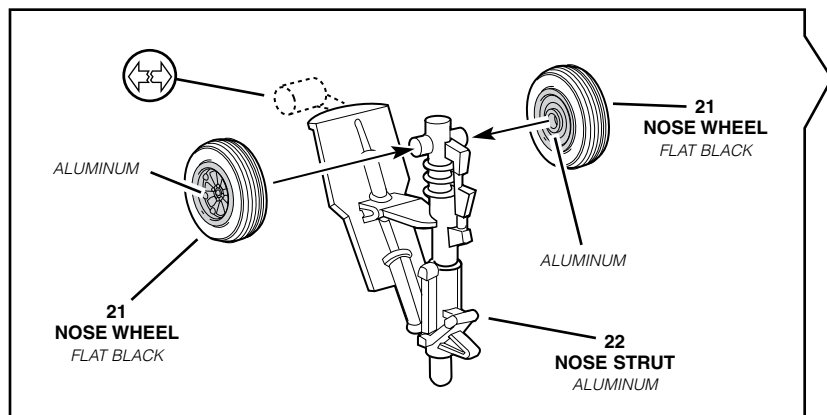


17

STABILIZER ASSEMBLY




**13
RIGHT
HORIZONTAL STABILIZER**

**14
LEFT
HORIZONTAL STABILIZER**

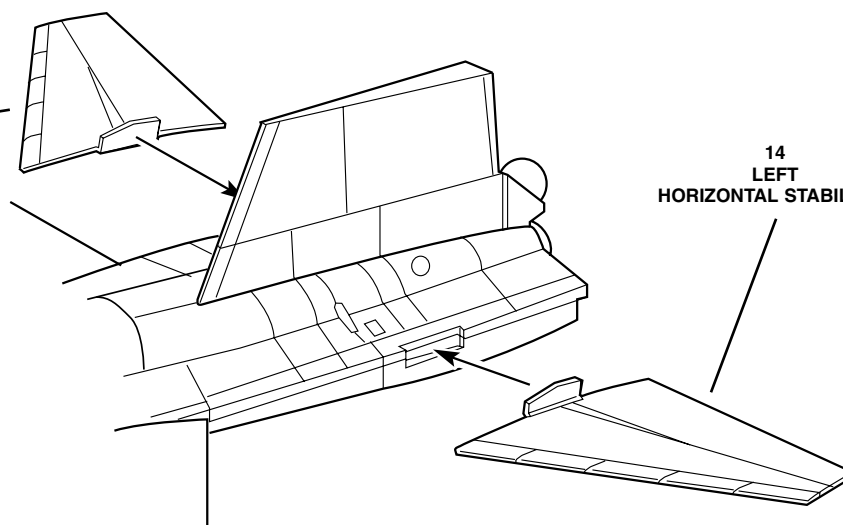



18

FUEL TANK ASSEMBLY

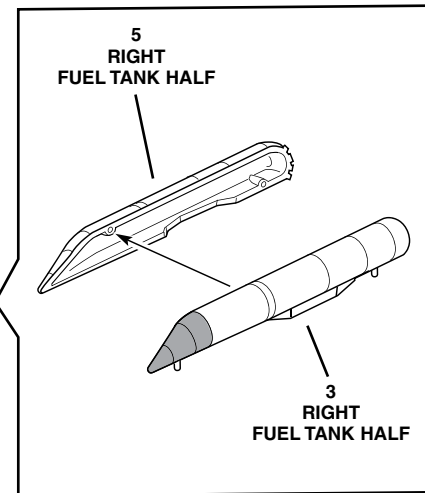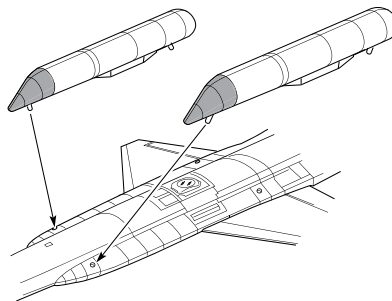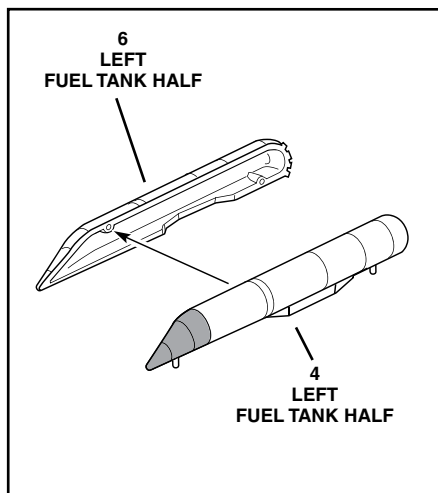



19

CANOPY / PITOT ASSEMBLY

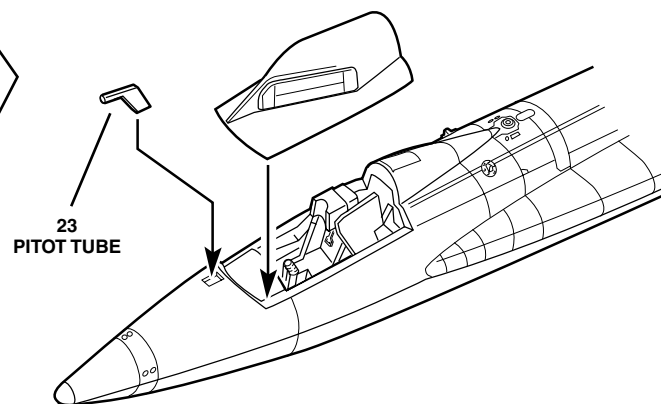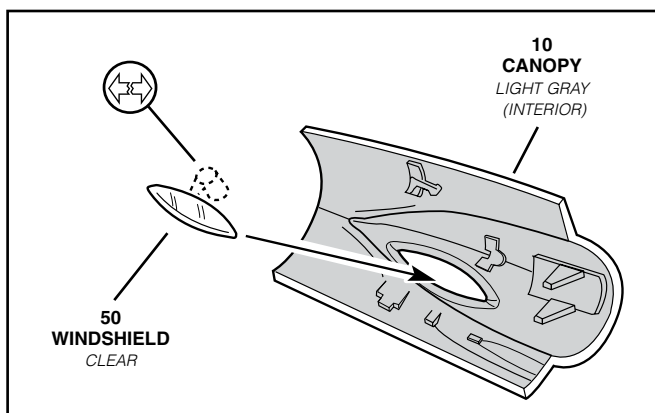

20

SENSOR / DUMP ASSEMBLY

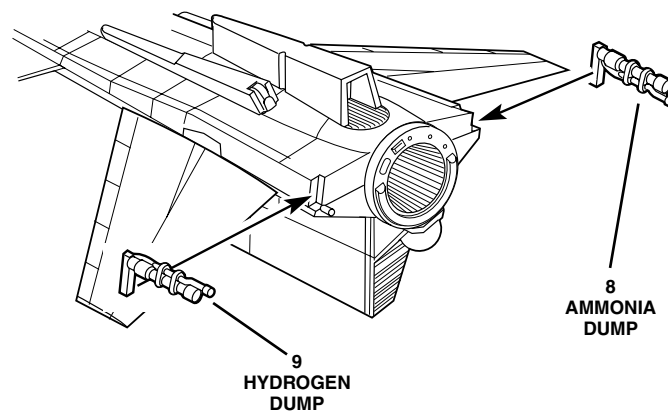
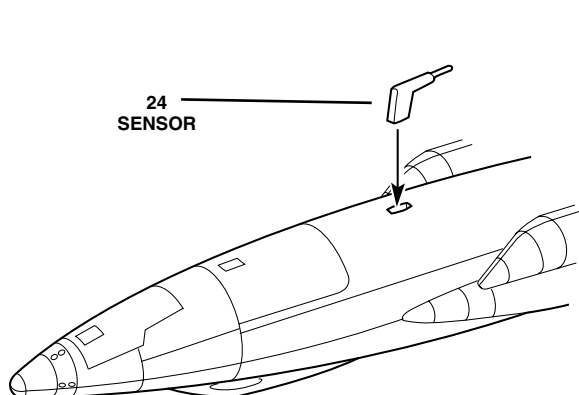


21

SCRAMJET ASSEMBLY








VERSION A

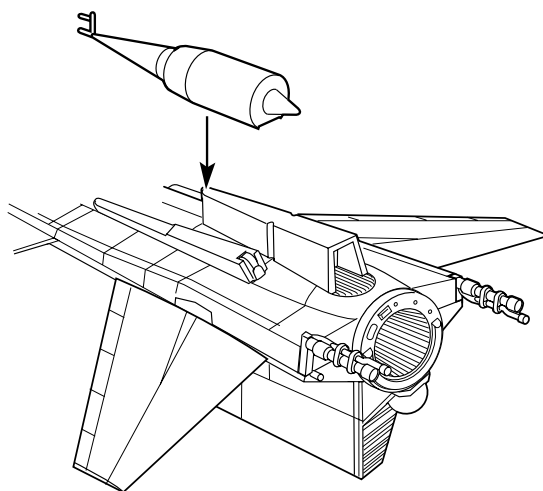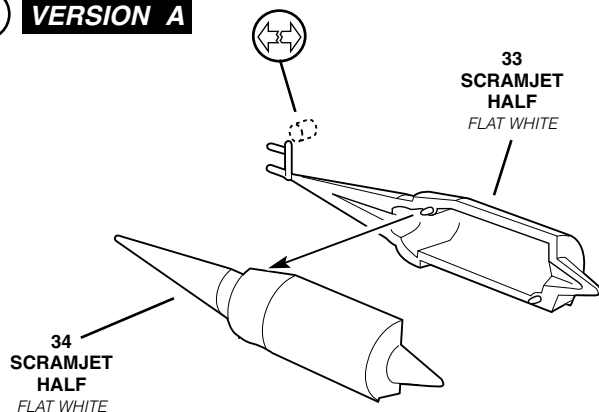

22


FINAL ASSEMBLY

COMPLETED X-15 TO PYLON ON RIGHT WING OF B-52

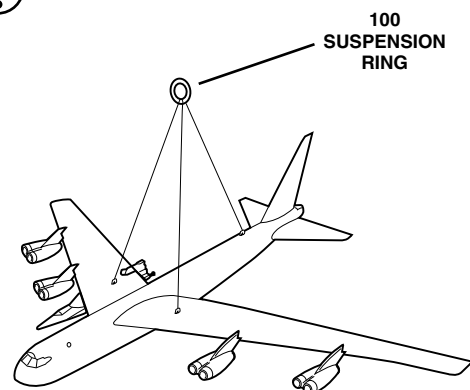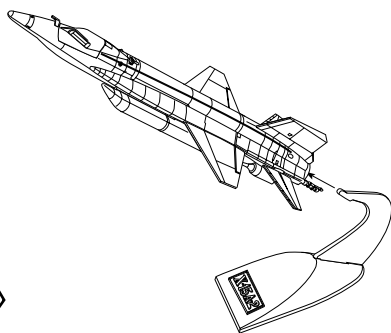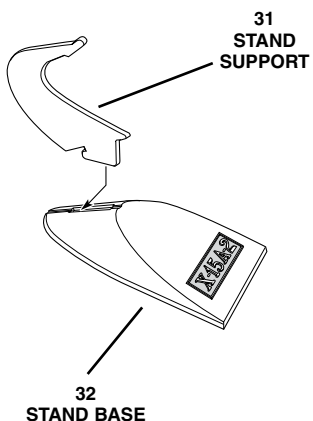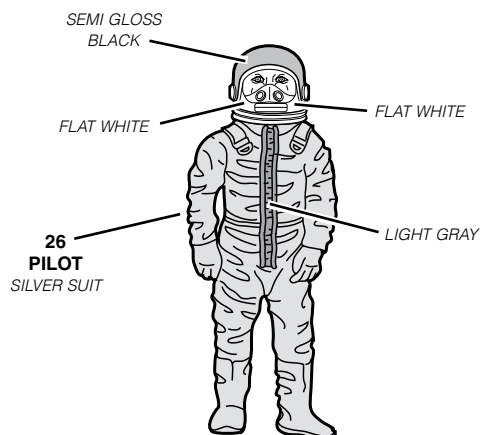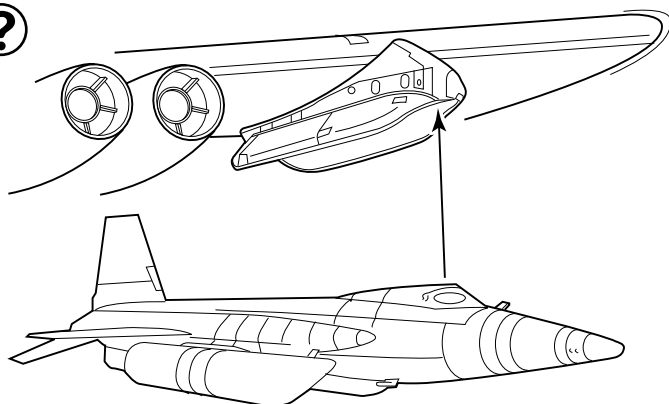


STRONG THREAD NOT SUPPLIED

DECAL PLACEMENT

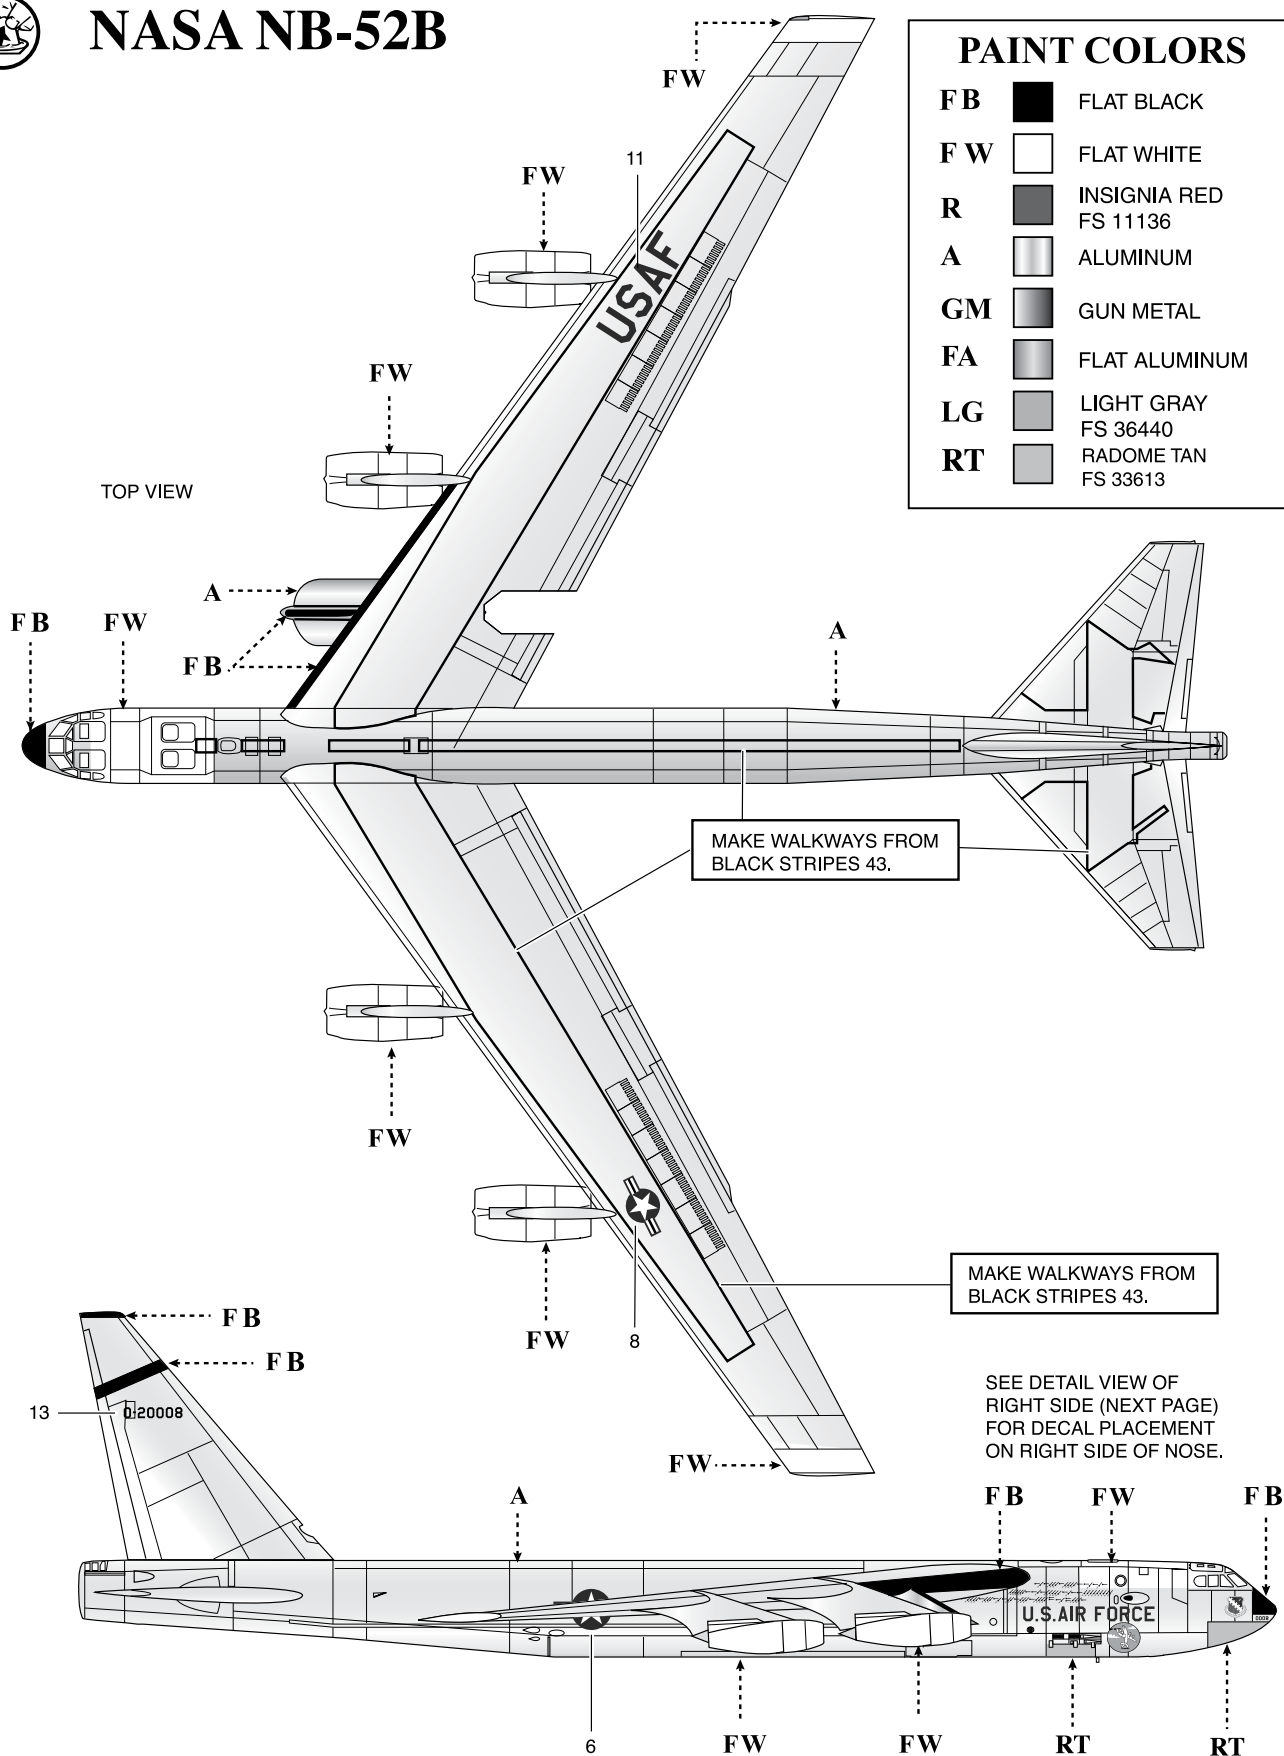







NASA NB-52B


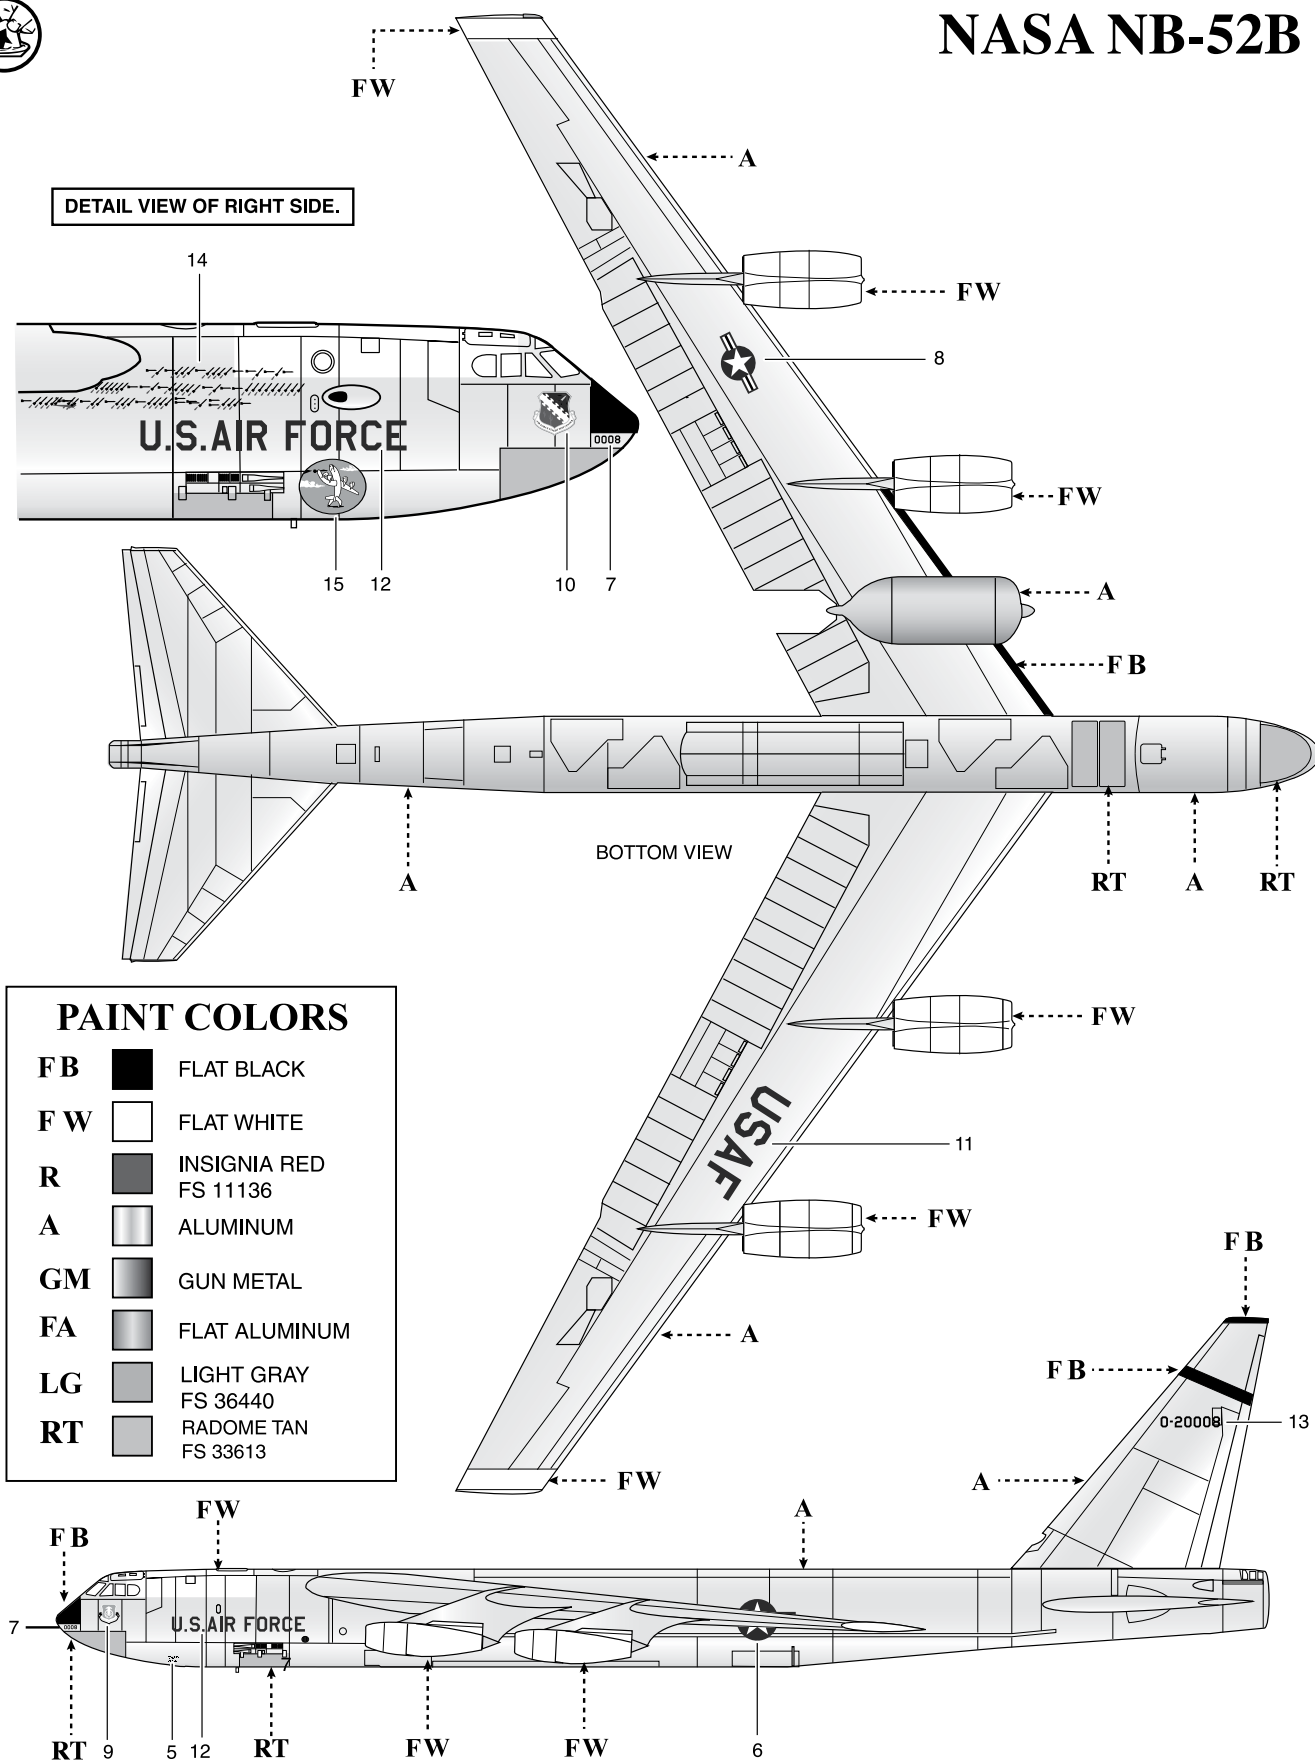




NASA X-15A/B

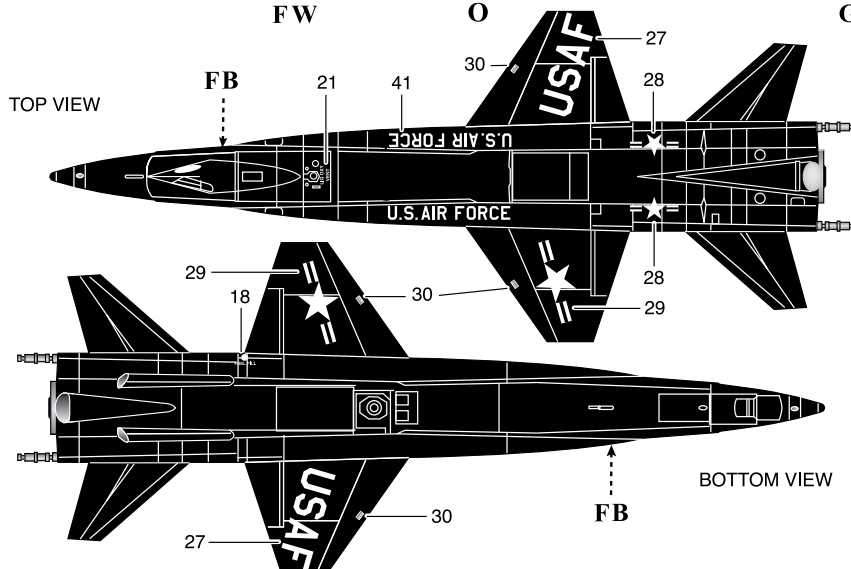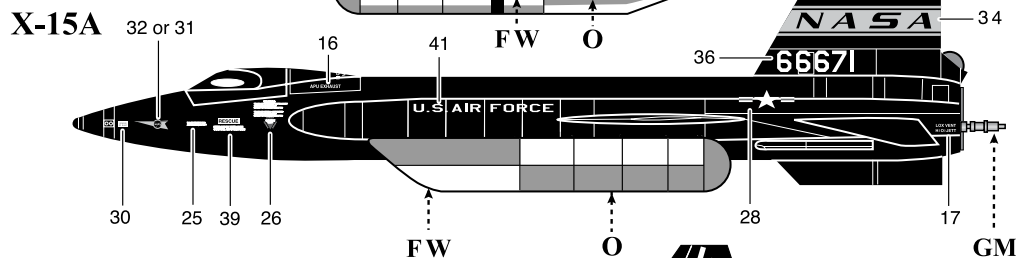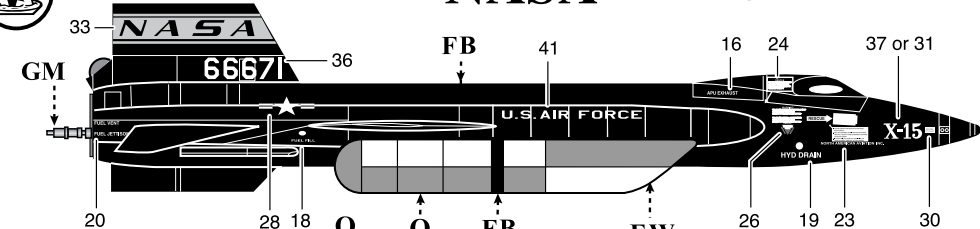

X-15B

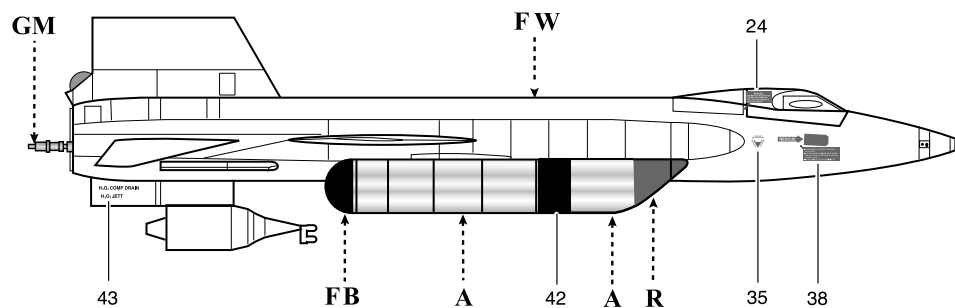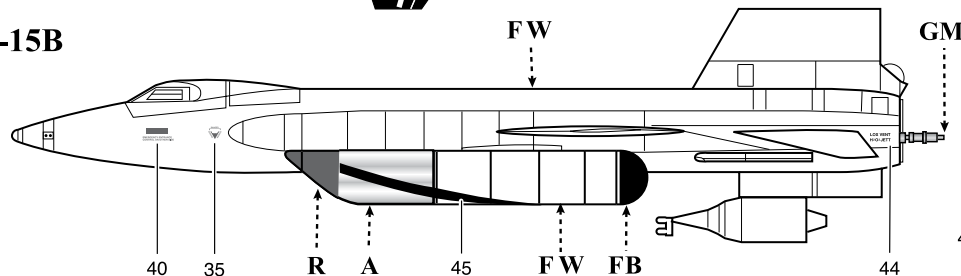

PAINT COLORS

FB		FLAT BLACK
FW		FLAT WHITE
R		INSIGNIA RED FS 11136
A		ALUMINUM
GM		GUN METAL
FA		FLAT ALUMINUM
LG		LIGHT GRAY FS 36440
O		ORANGE

