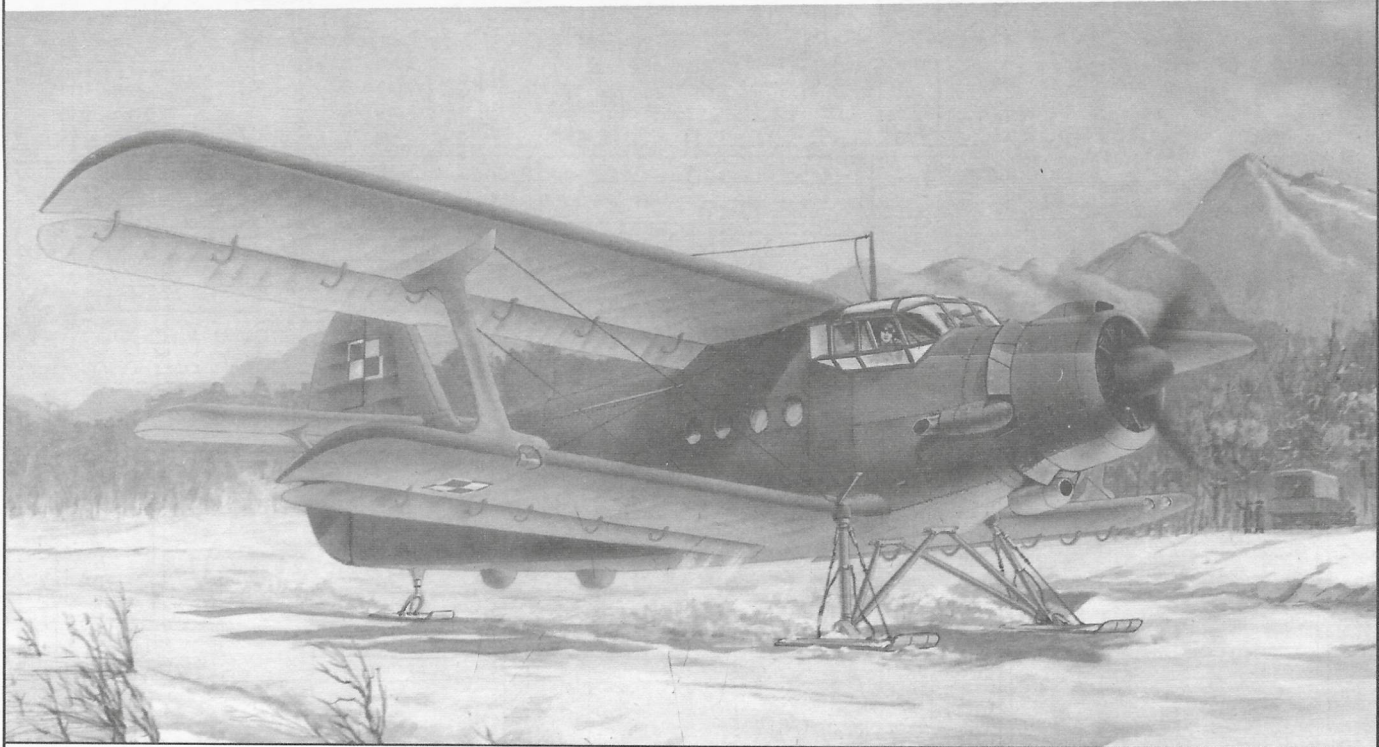


1:72 SCALE

Antonov An-2 Colt on Skis

安-2运输机雪橇型

颜色指示
COLOR

2-黑色	Black
3-红色	Red
4-黄色	Yellow
6-绿色	Green
8-银色	Silver

15-浓绿	Ljn green
33-消光黑	Flat black
34-天蓝色	Sky blue
61-烧铁色	Burnt iron
115-浅兰色	Light blue

cyanoacrylate glue
使用强力胶weight
配重make hole
钻孔cut / remove
切除bend
弯曲file / sand
锉平option
选择no cement
不涂胶水decal
贴纸

水贴纸的使用:


1. 从水贴纸上剪下印花;
2. 将印花放入温水中浸10秒, 然后放在干净布上。
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至水干, 气泡消失。

DECAL APPLICATION


1. Cut off decal from sheet.
2. Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.

部品图 Parts


A

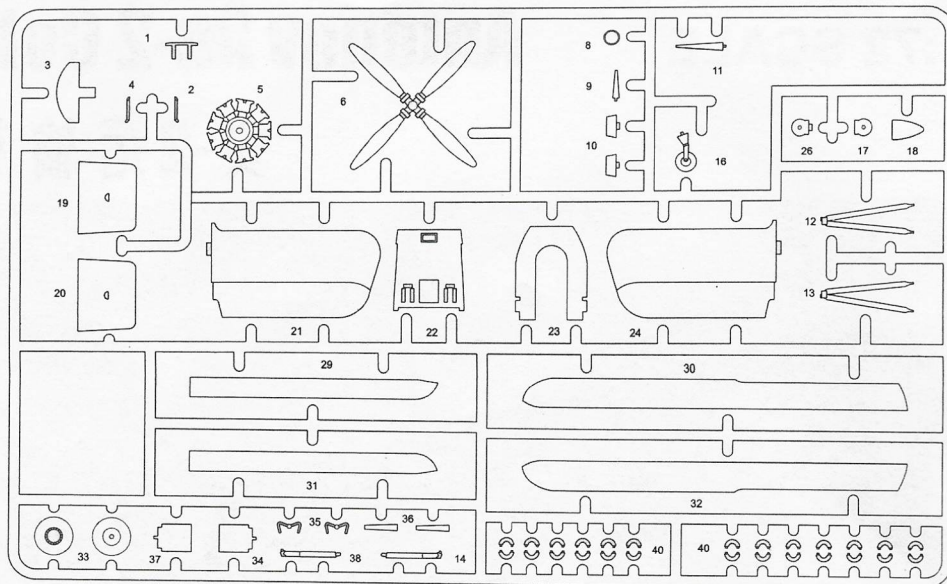


E1

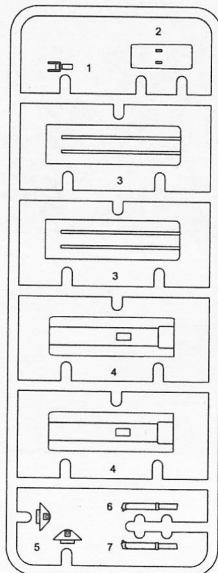


B

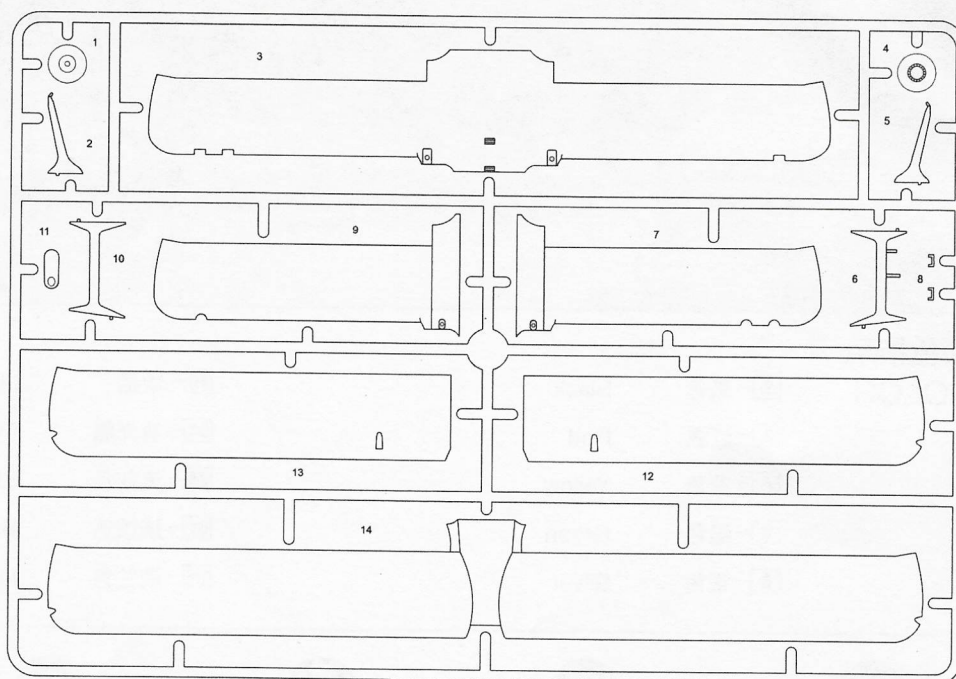




C

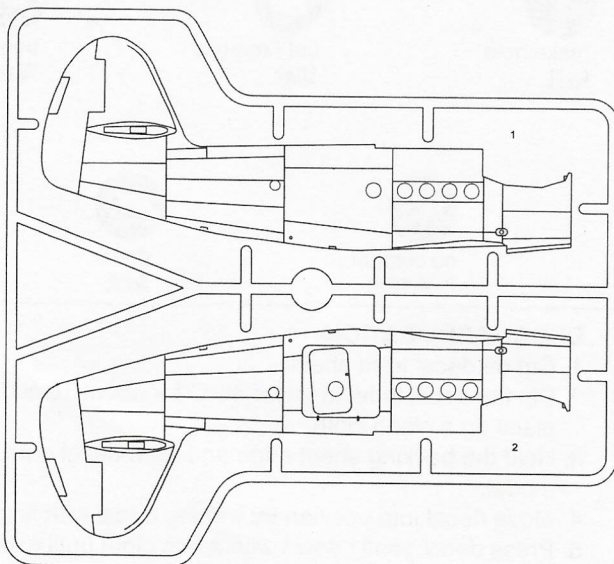


D

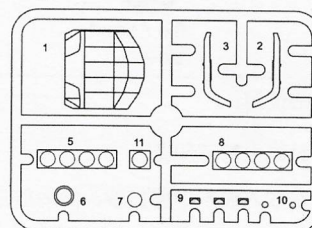


1 座舱的装配 Cockpit assembly

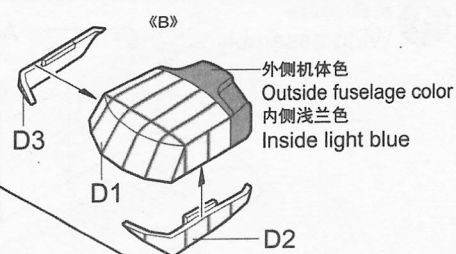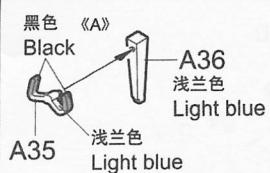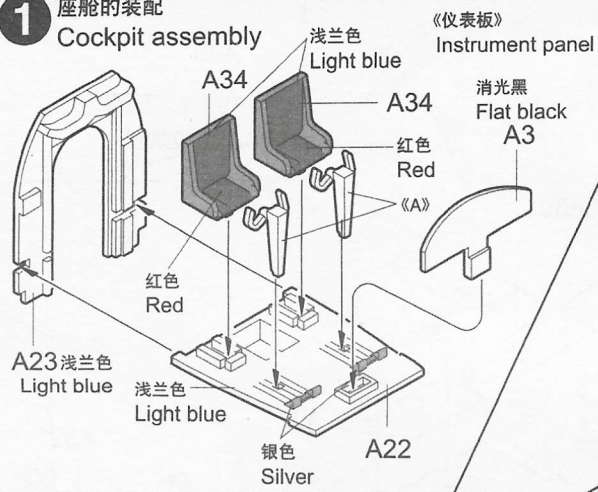


2 前机身的组装 Forward fuselage

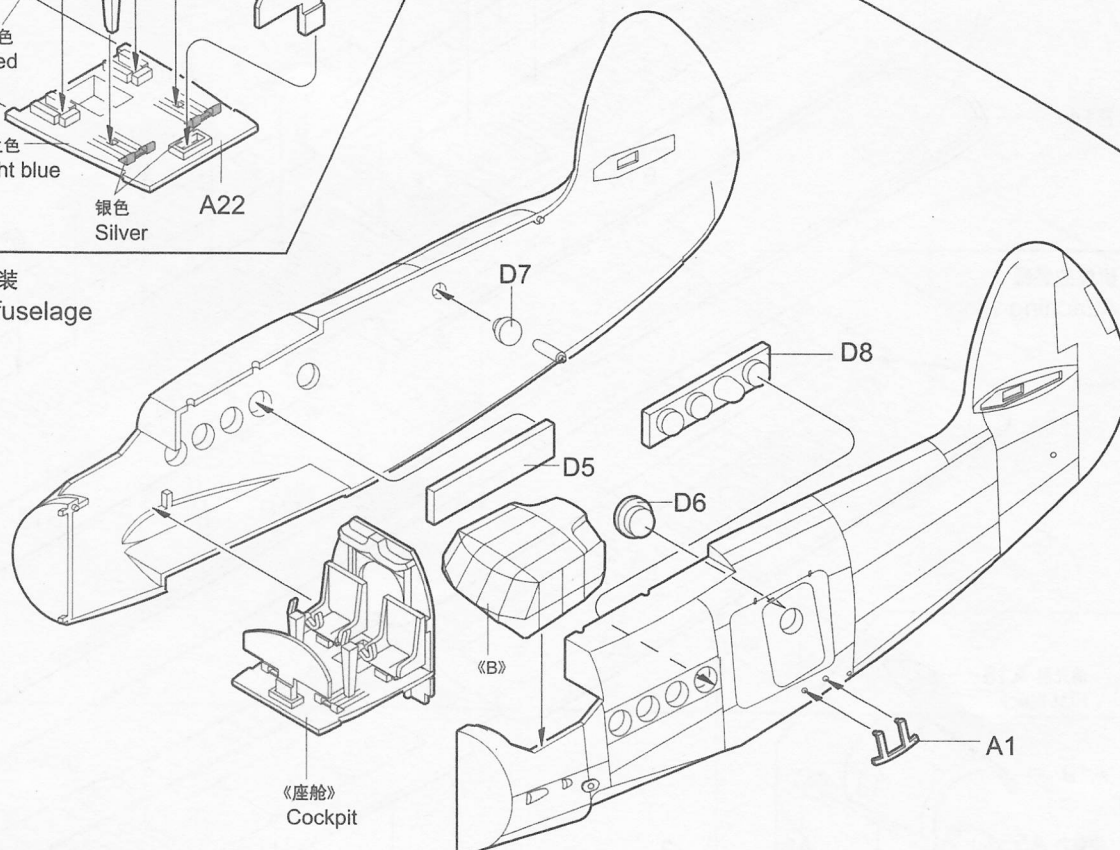


3 机翼的装配 Wing assembly

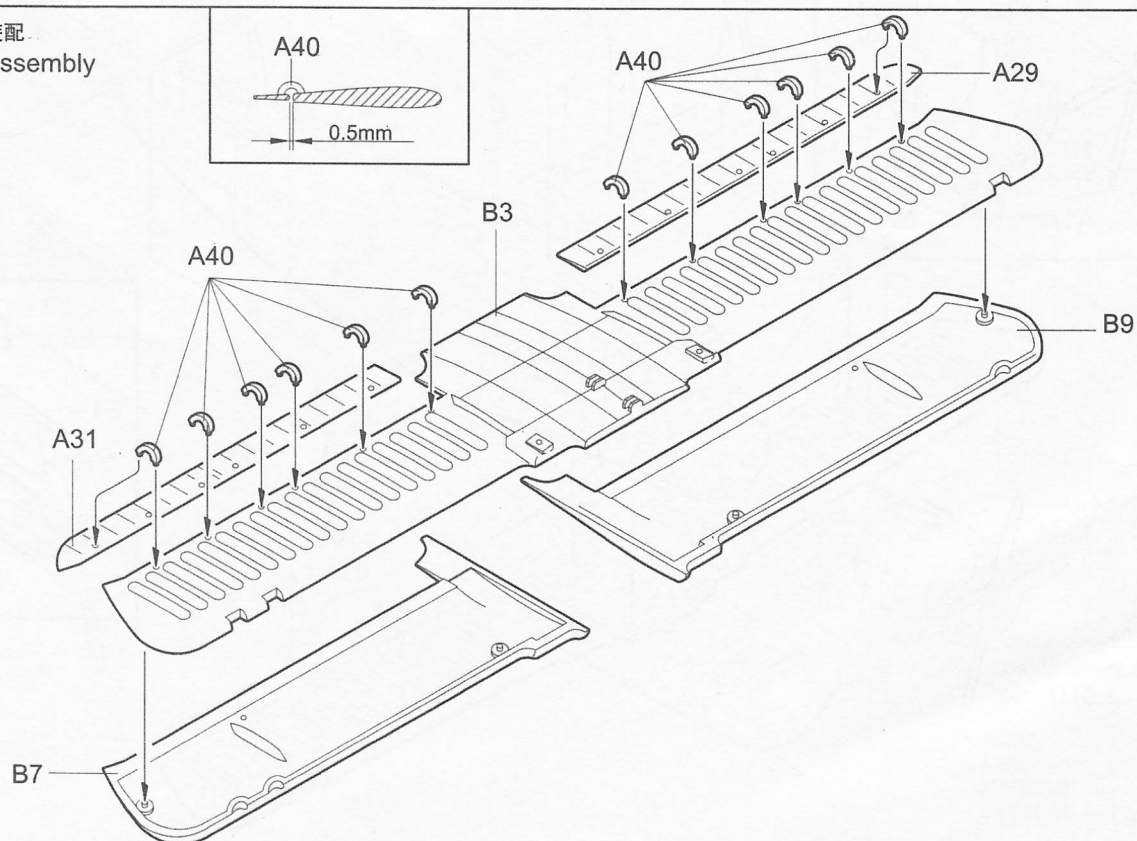


4 机翼的装配 Wing assembly

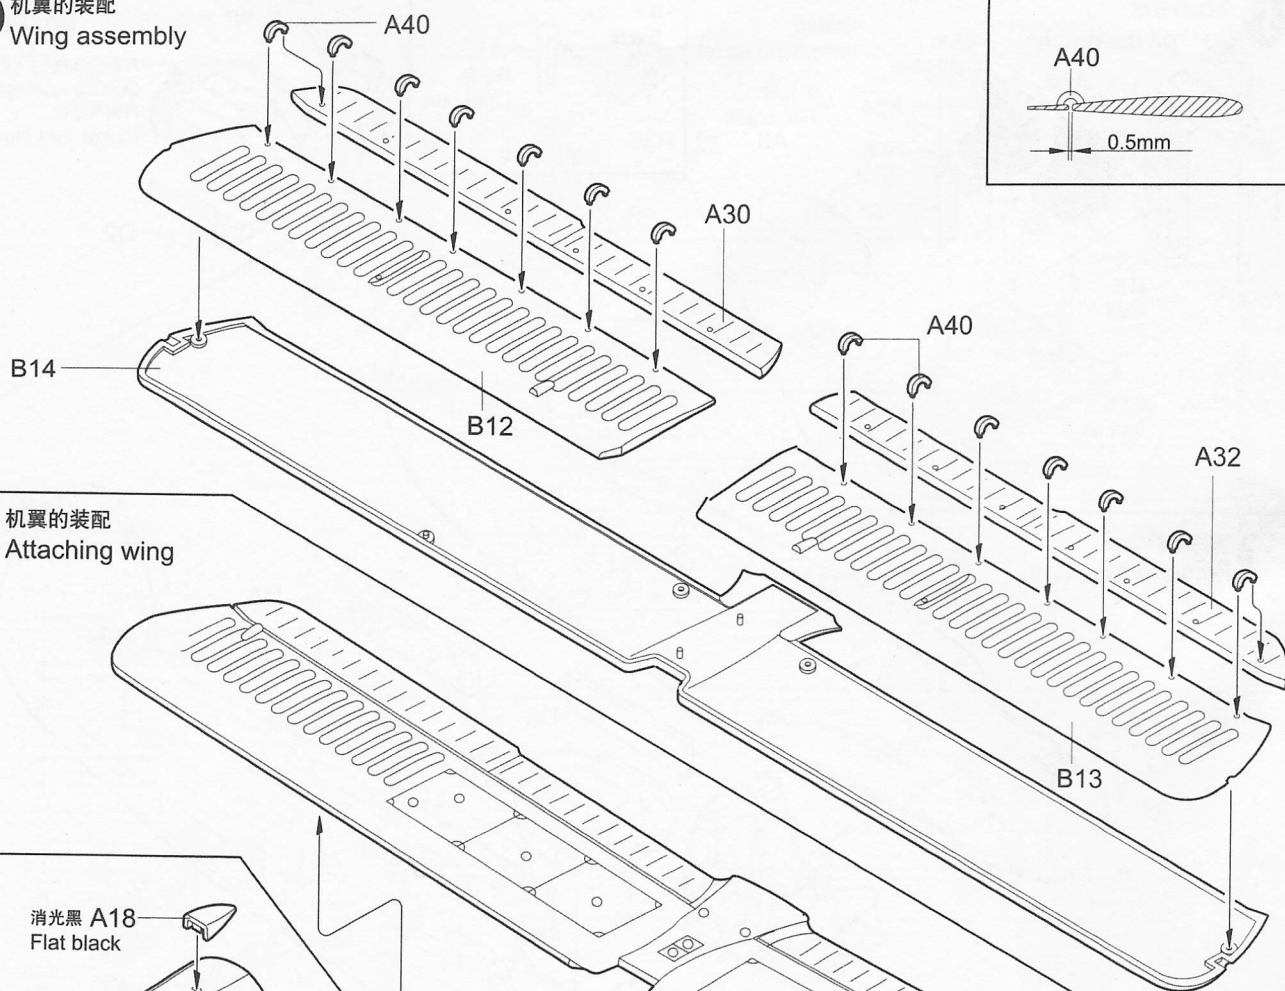


5 机翼的装配 Attaching wing

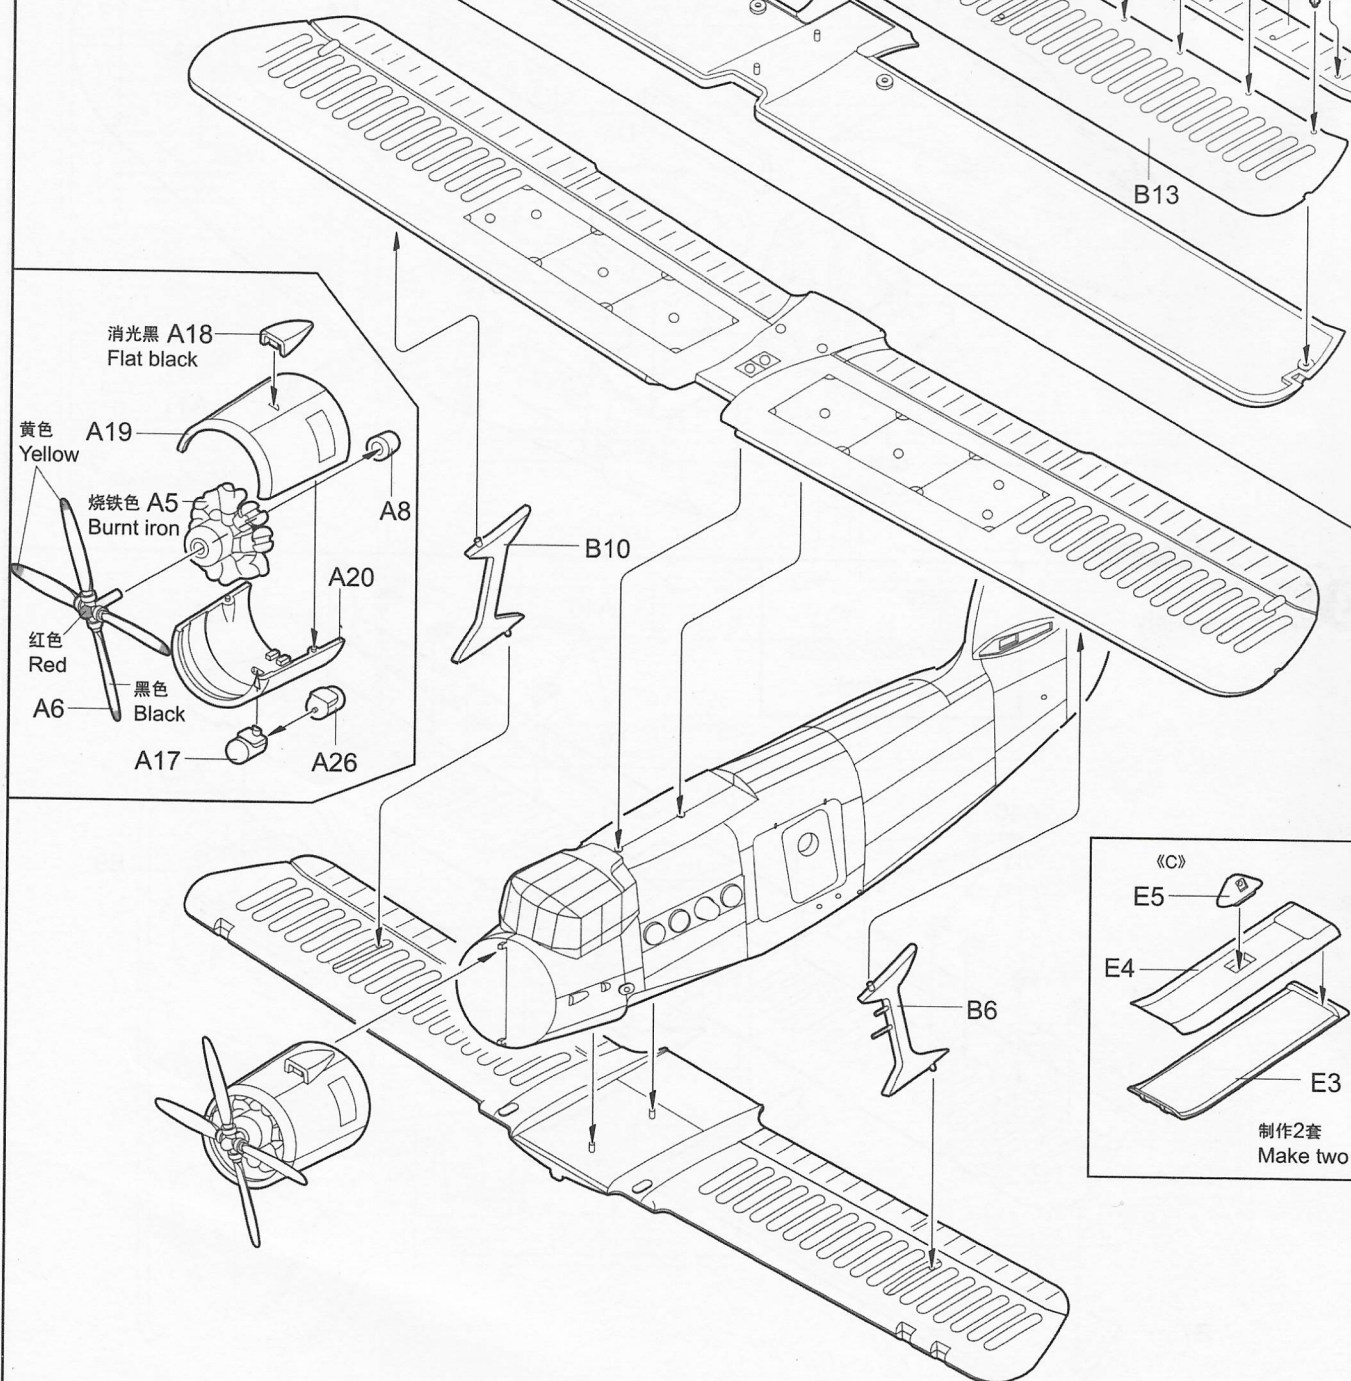

6 滑橇的安装 Attaching sledge

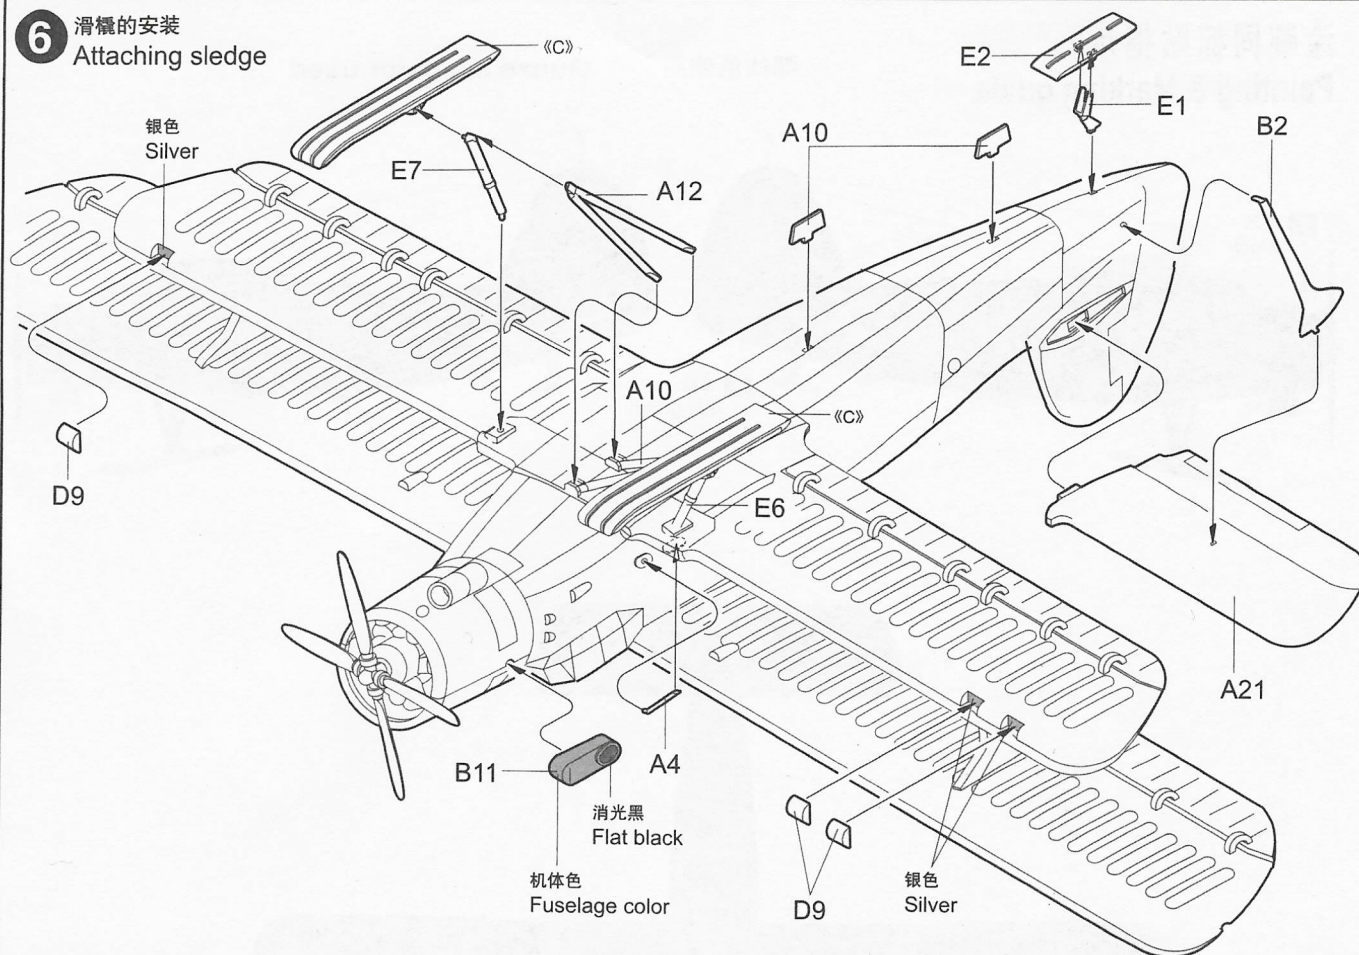

7 尾翼的安装 Attaching tail wing

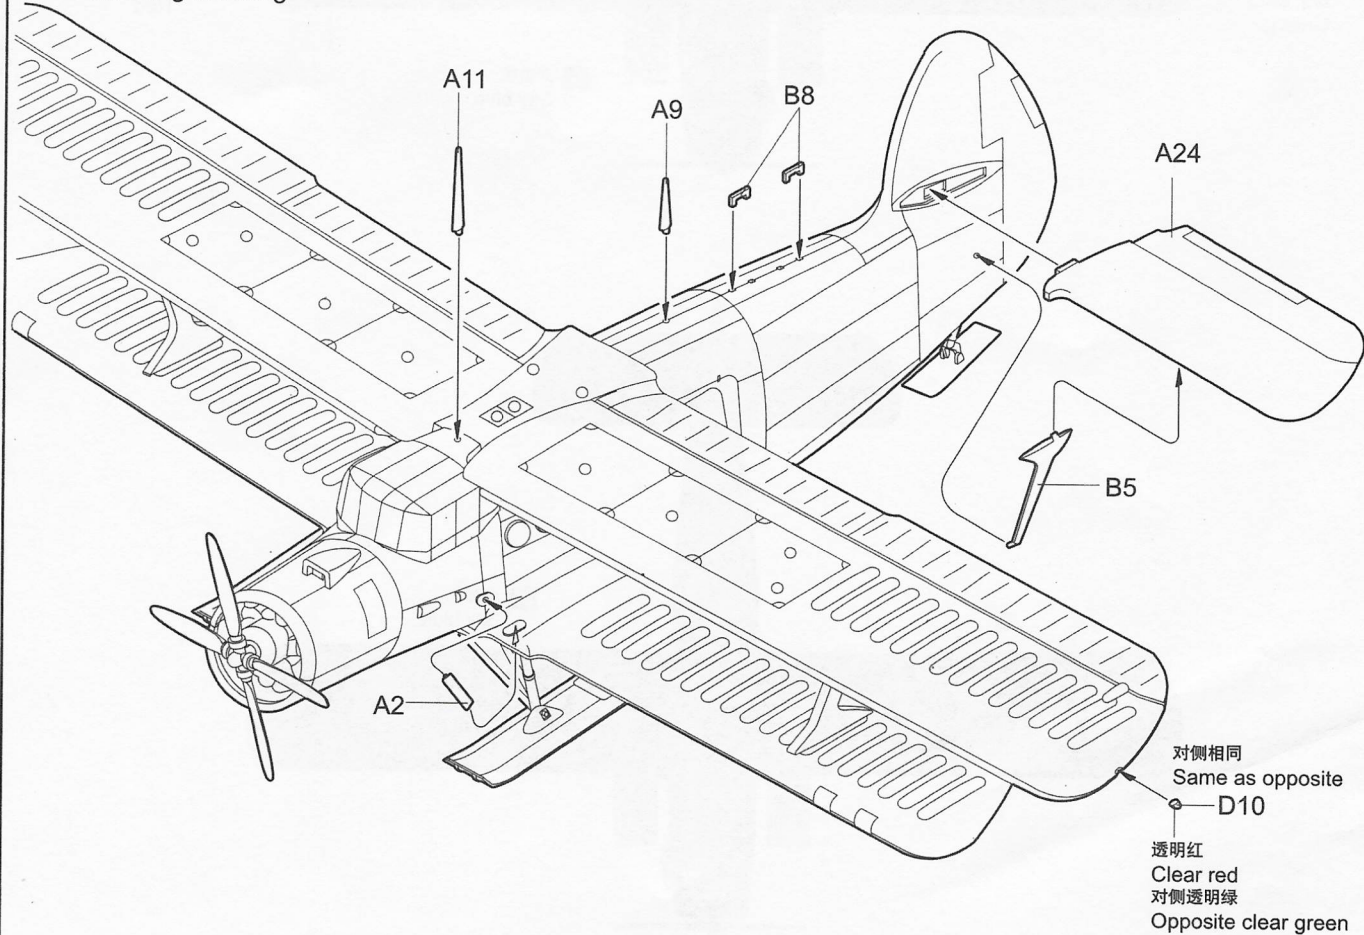

涂装同标贴指示 Painting & Marking guide

郡仕色使用

Gunze Mr. color used

