
ITEM NO.:05560

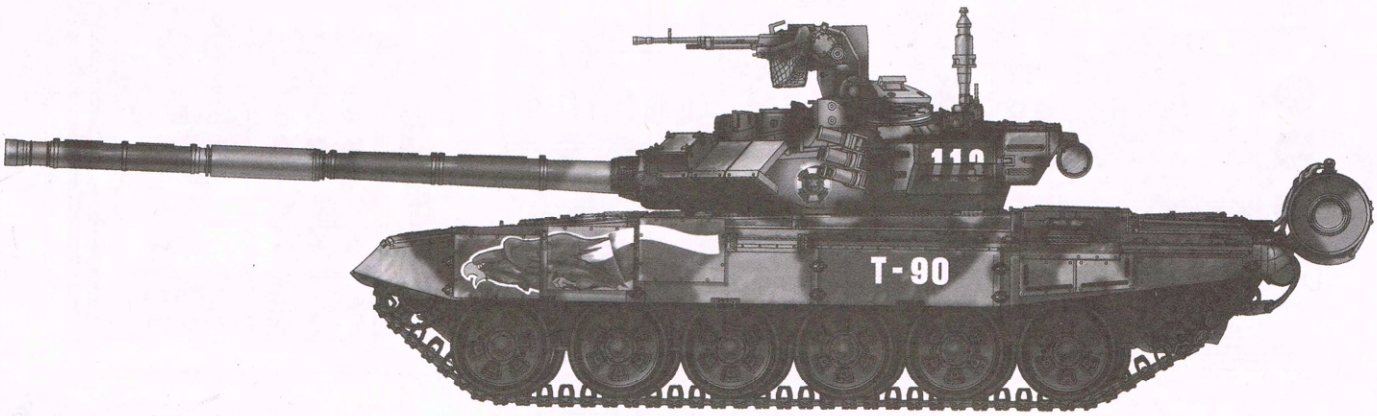

Russian T-90 MBT - Cast Turret

俄罗斯T-90主战坦克-铸造炮塔

1/35 SCALE

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements, sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。



配重
Weight



使用强力胶
Cyanoacrylate glue



钻孔
Make hole



切除
Cut / Remove



贴纸
Decal



锉平
File / Sand



选择
Option



不涂胶水
No cement



弯曲
Bend

水贴纸的使用：

1.从水贴纸上剪下印花；

2.将印花放入温水中浸10秒，然后放在干净布上。

3.拿着印花纸板将印花移到模型上；

4.手指蘸水将印花移到适当的位置；

5.用软布轻压印花直至水干，汽泡消失

DECAL APPLICATION

1.Cut decals from sheet as needed

2.Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.

3.Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.


4.While still wet,decal can be adjusted for better fit on model by dampening it gently with your finger.

5.When placed in the proper position,gently press decal down with a soft cloth until excess water and air bubbles are gone.


6.Allow decal to dry completely before handling model

部品图 Parts


A*4

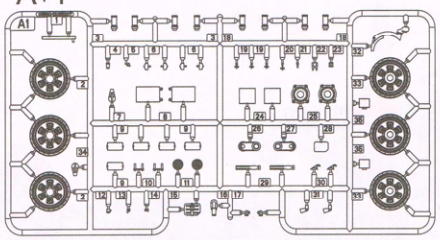


B*2

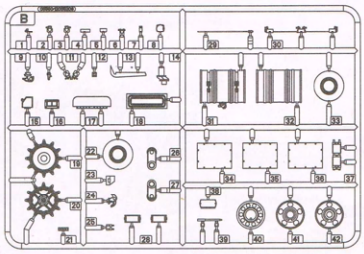


C

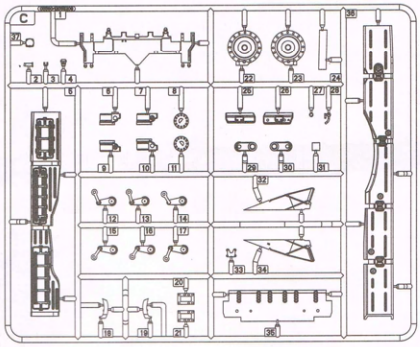


D

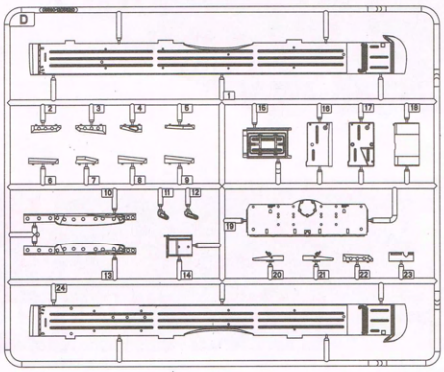


F

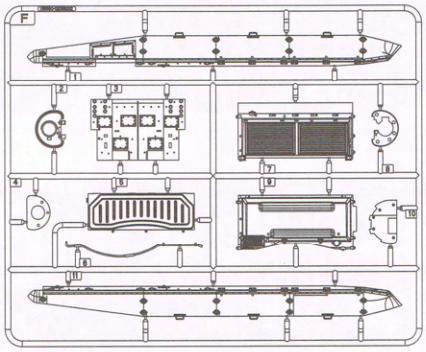


G

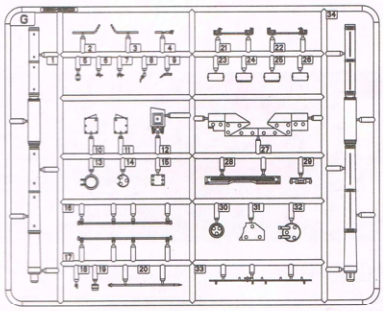


E

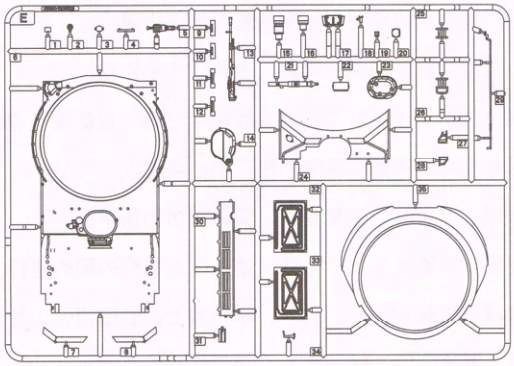


J

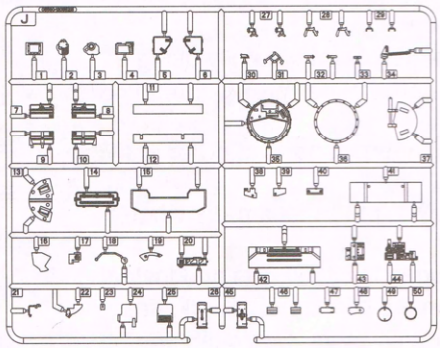


S*2

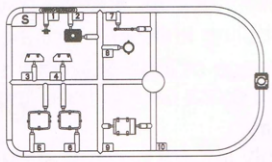


《车底》
Lower hull

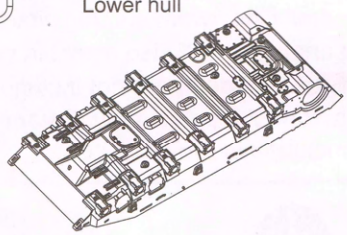


H

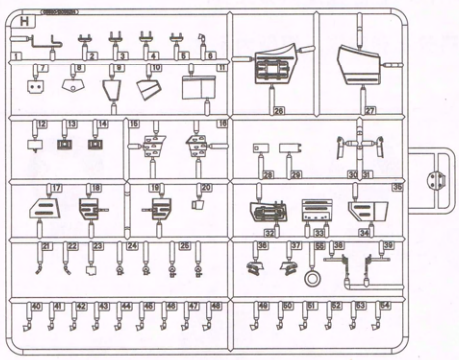


A2

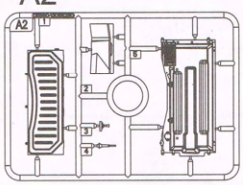


《炮塔》
Turret

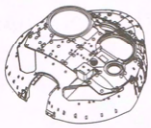


《蚀刻片》*2
PE-A*2

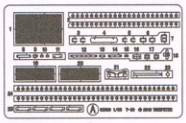


《蚀刻片》
PE-B

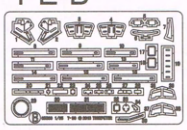


P

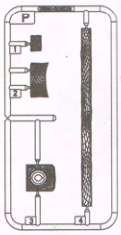


T*4

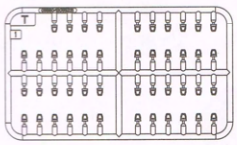


U

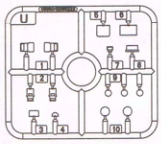

TR*4

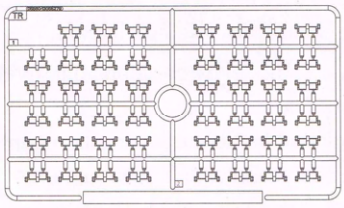

《轮塞》
Poly cap



《水贴》
Decal



《铜丝》Ø0.6X250mm
Copper wire




《软管》Ø1.2X250mm
Vingyl tubing





《铜缆》Ø0.8X250mm
Brass wire

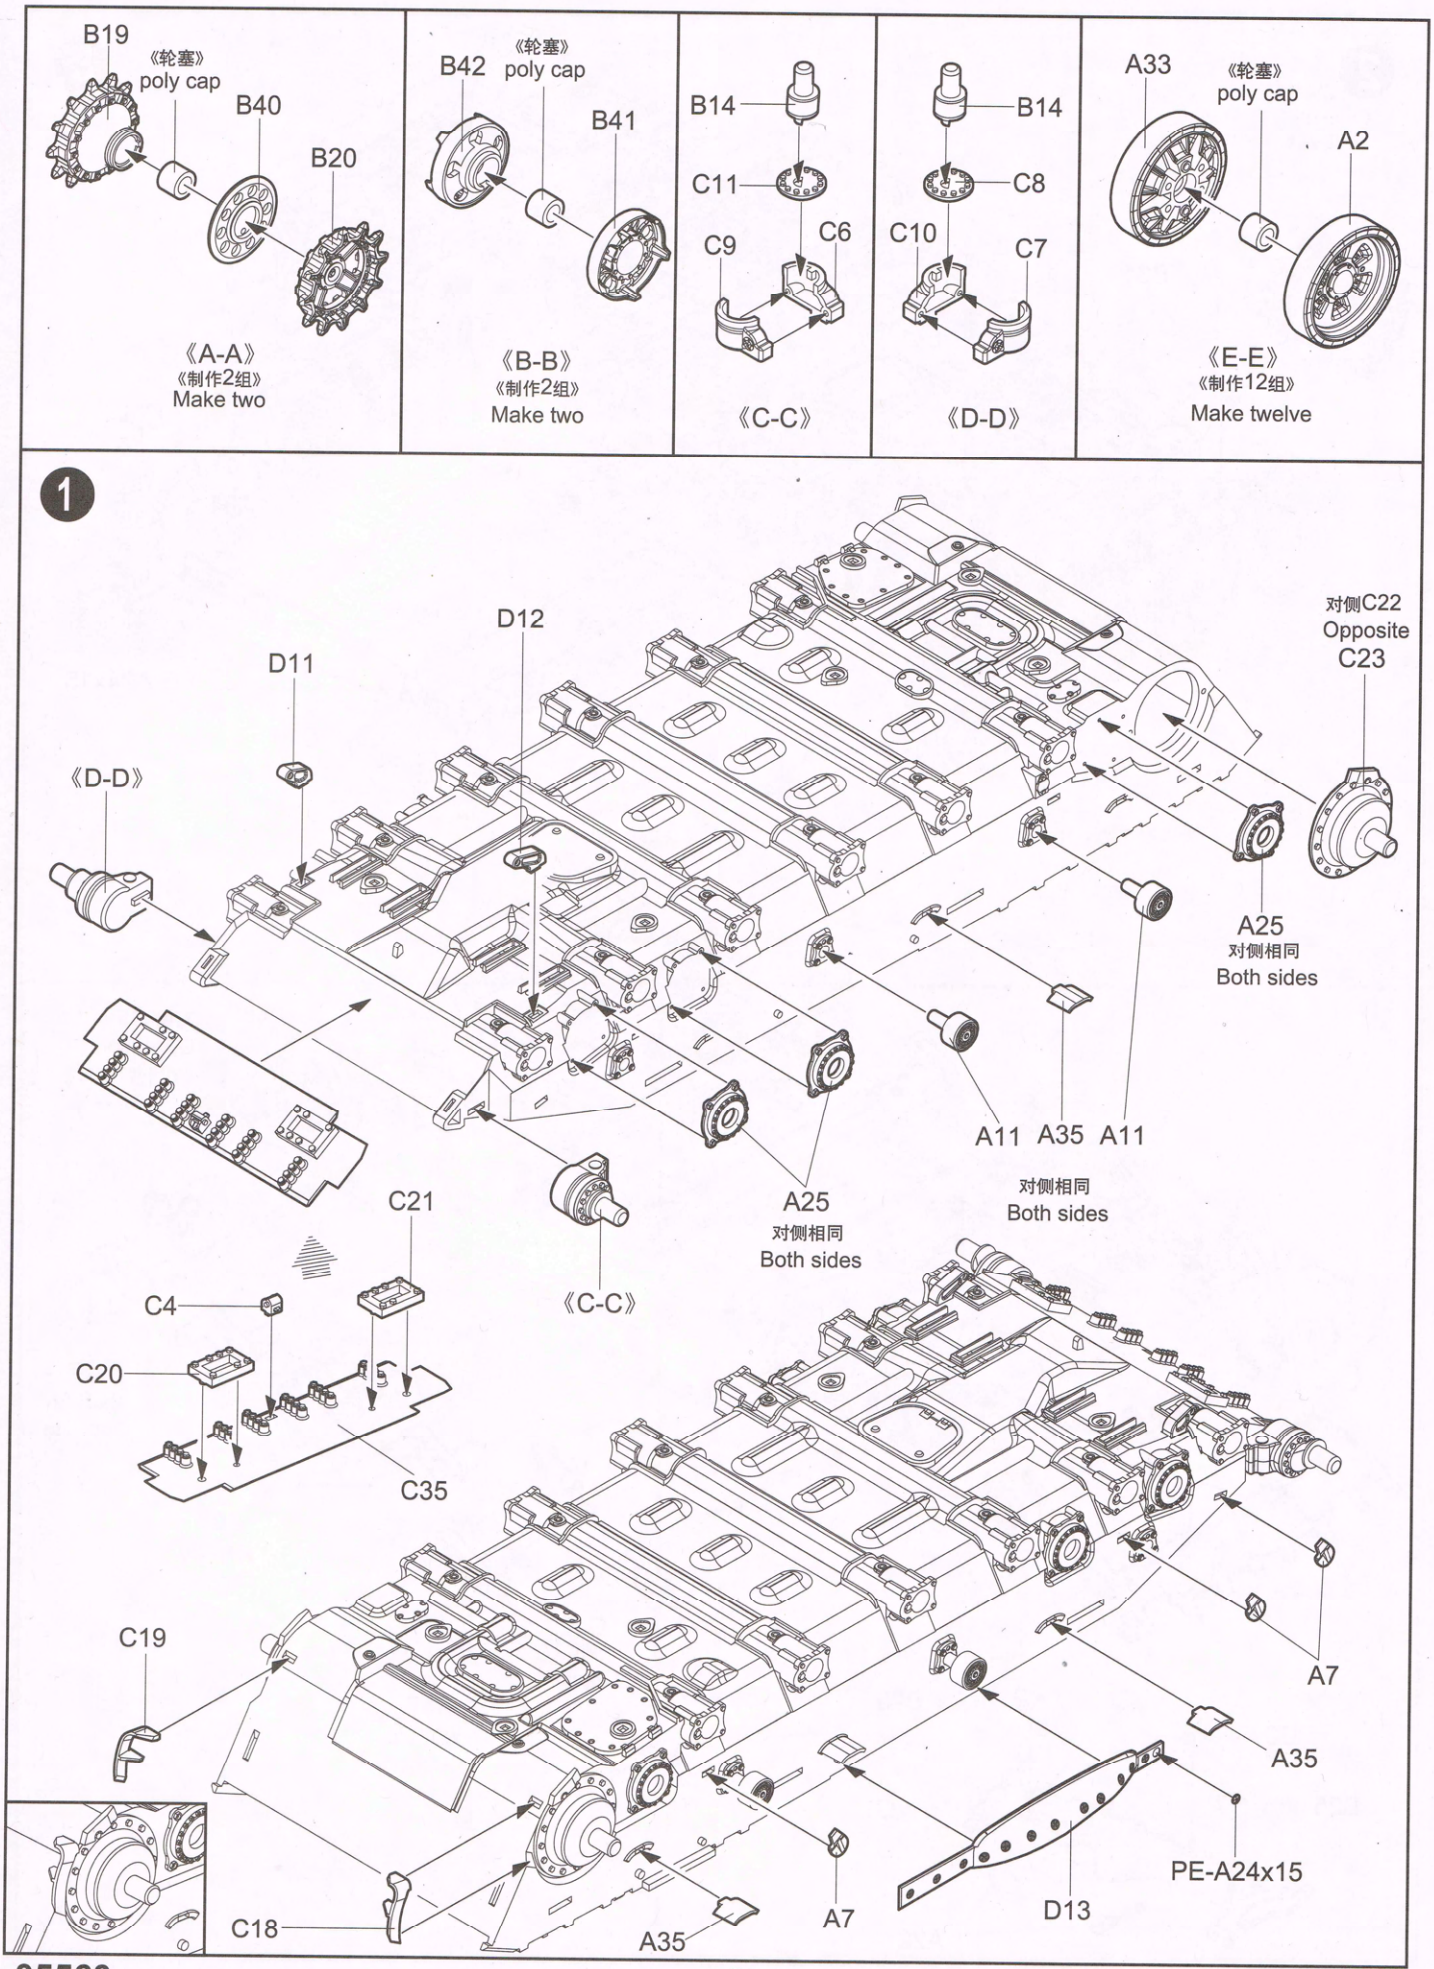



B19
《轮塞》
poly cap
B40
B20
《A-A》
《制作2组》
Make two
B42
《轮塞》
poly cap
B41
《B-B》
《制作2组》
Make two
B14
C11
C9
C6
《C-C》
B14
C8
C10
C7
《D-D》
A33
《轮塞》
poly cap
A2
《E-E》
《制作12组》
Make twelve
1
D12
D11
《D-D》
对侧C22
Opposite
C23
A25
对侧相同
Both sides
A11
A35
A11
对侧相同
Both sides
A25
对侧相同
Both sides
《C-C》
C21
C4
C20
C35
C19
A7
A35
PE-A24x15
D13
A7
C18
A35


2

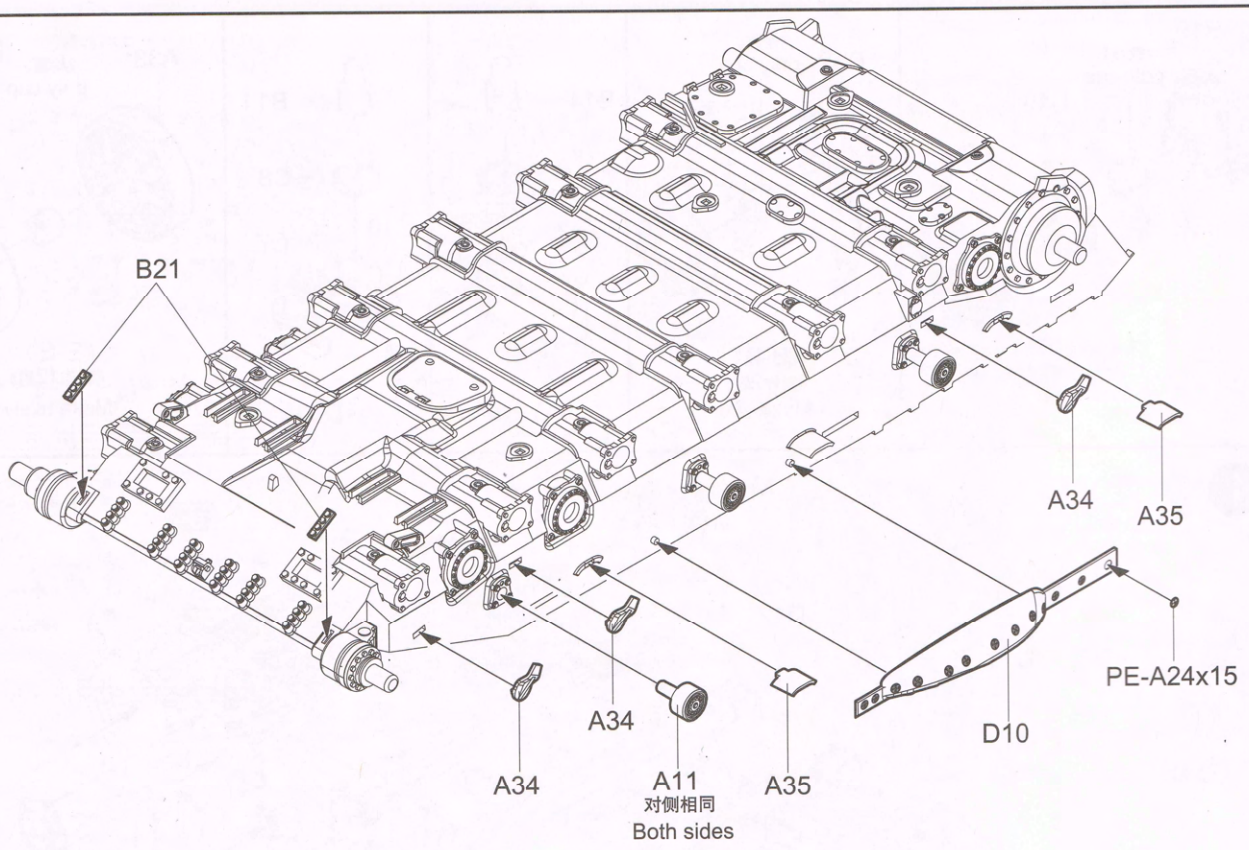

B21
A34
A35
PE-A24x15
D10
A34
A34
A11
对侧相同
Both sides
A35

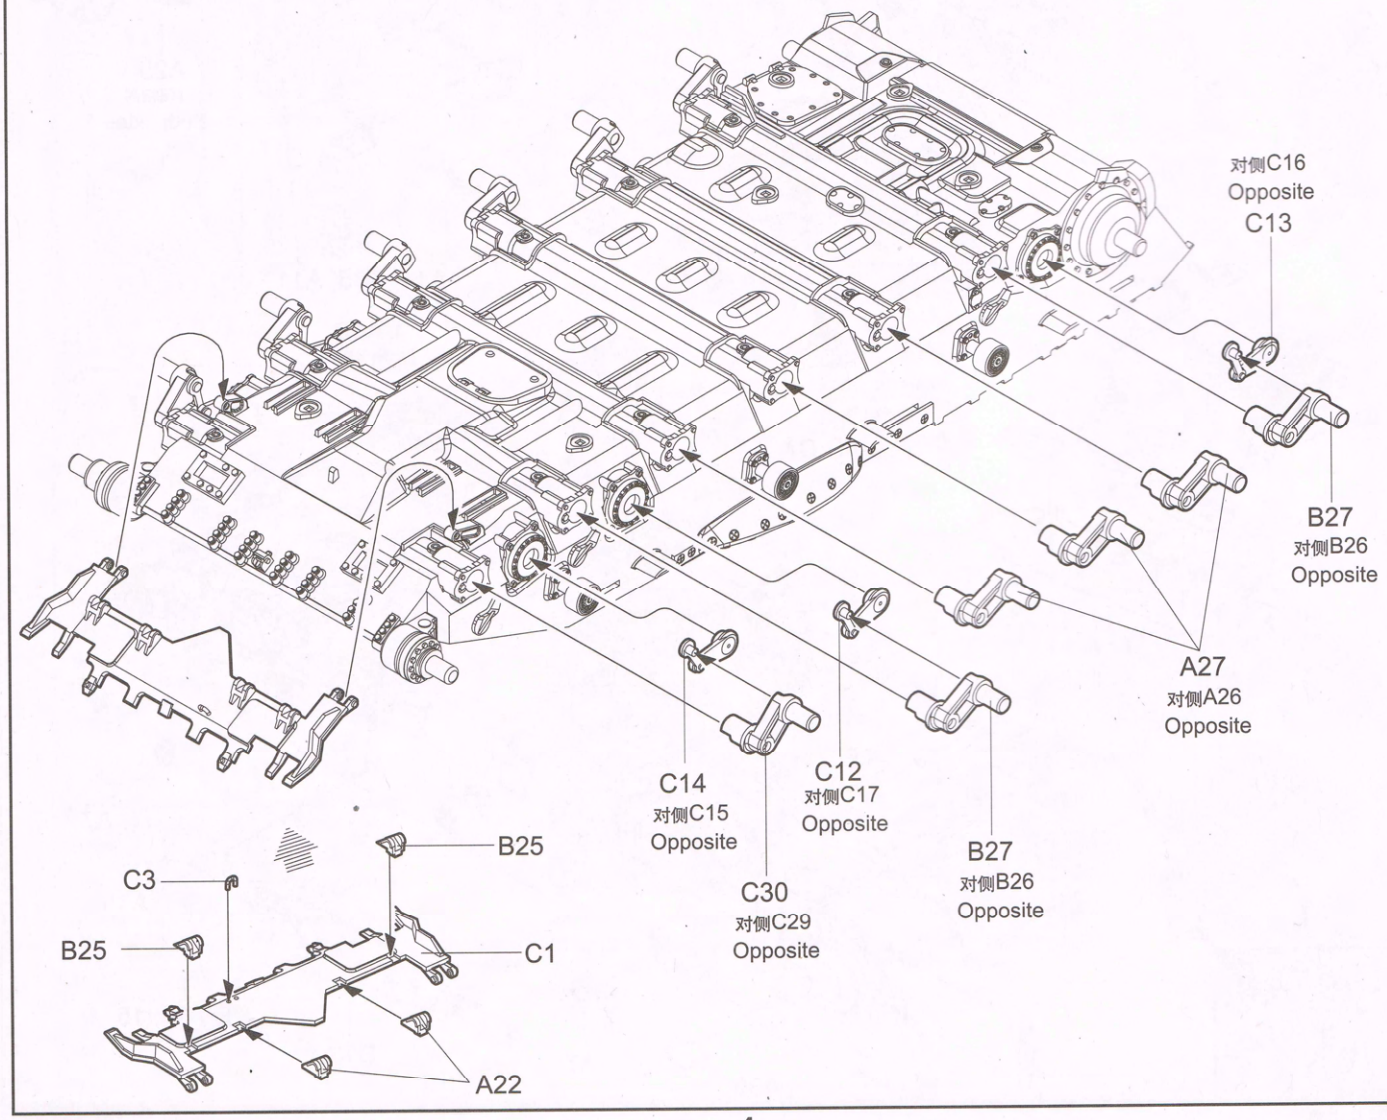

对侧C16
Opposite
C13
B27
对侧B26
Opposite
A27
对侧A26
Opposite
C14
对侧C15
Opposite
C12
对侧C17
Opposite
C30
对侧C29
Opposite
B27
对侧B26
Opposite


B25
C3
B25
C1
A22

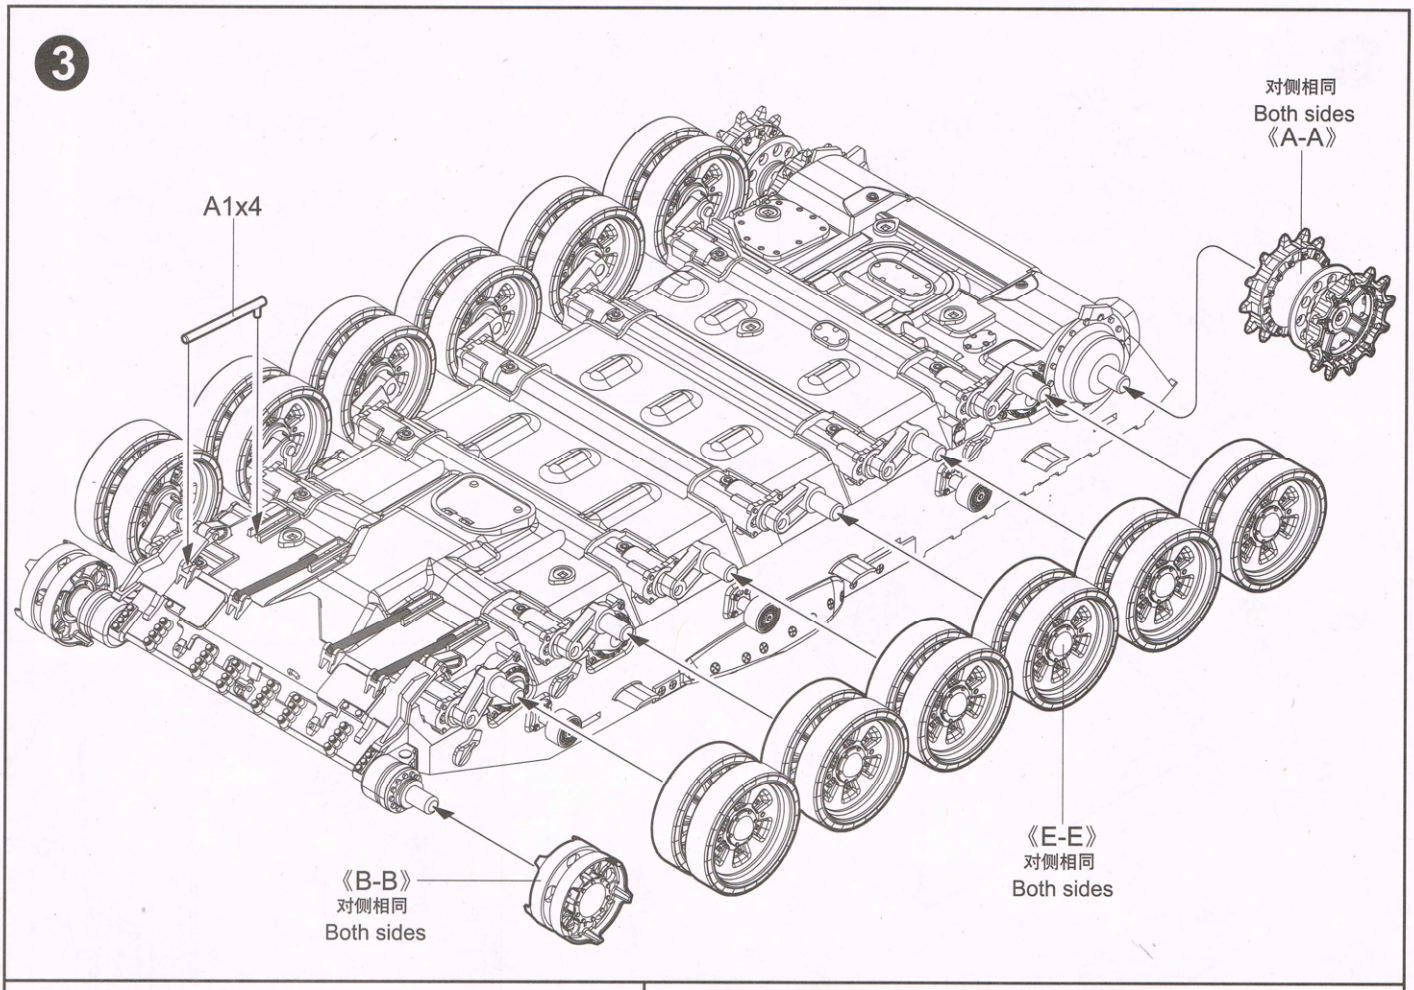
3
对侧相同
Both sides
《A-A》
A1x4
《E-E》
对侧相同
Both sides
《B-B》
对侧相同
Both sides

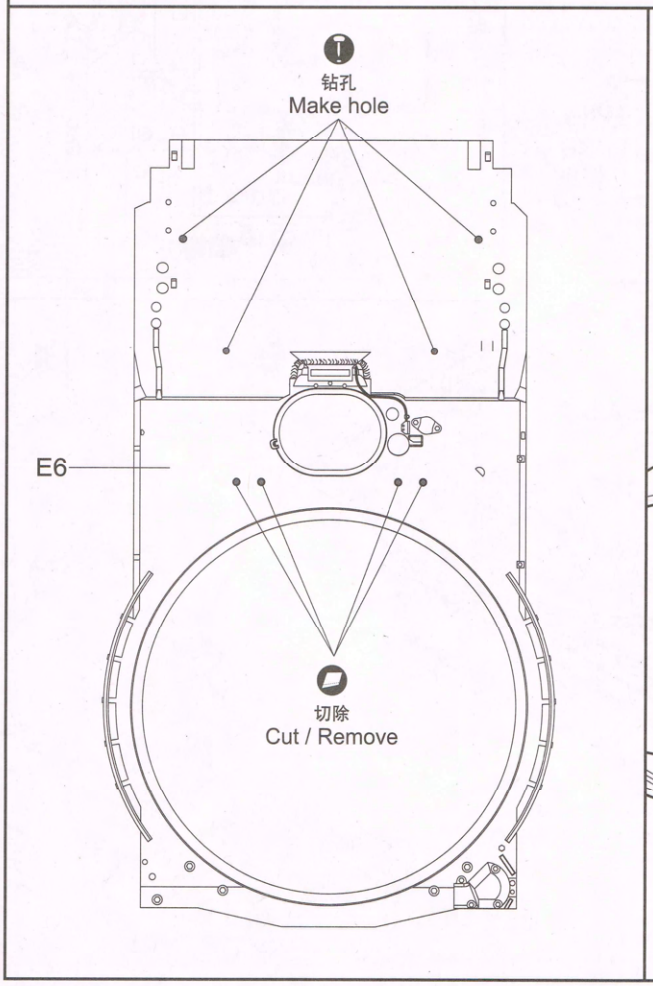

钻孔
Make hole
E6
切除
Cut / Remove

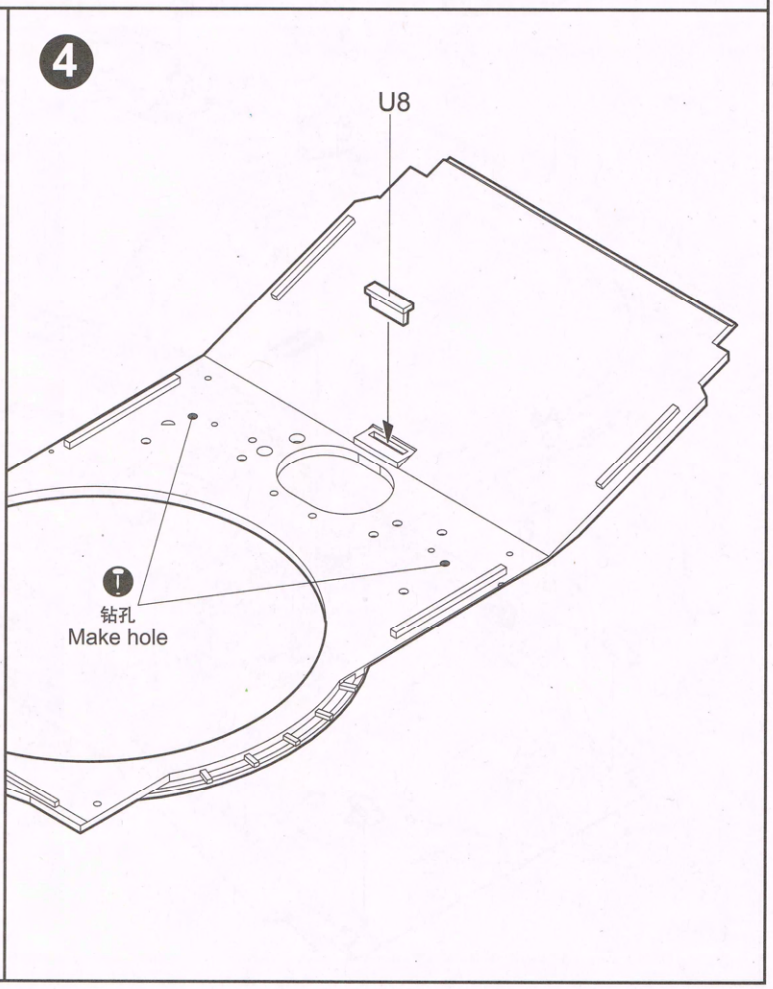
4
U8
钻孔
Make hole

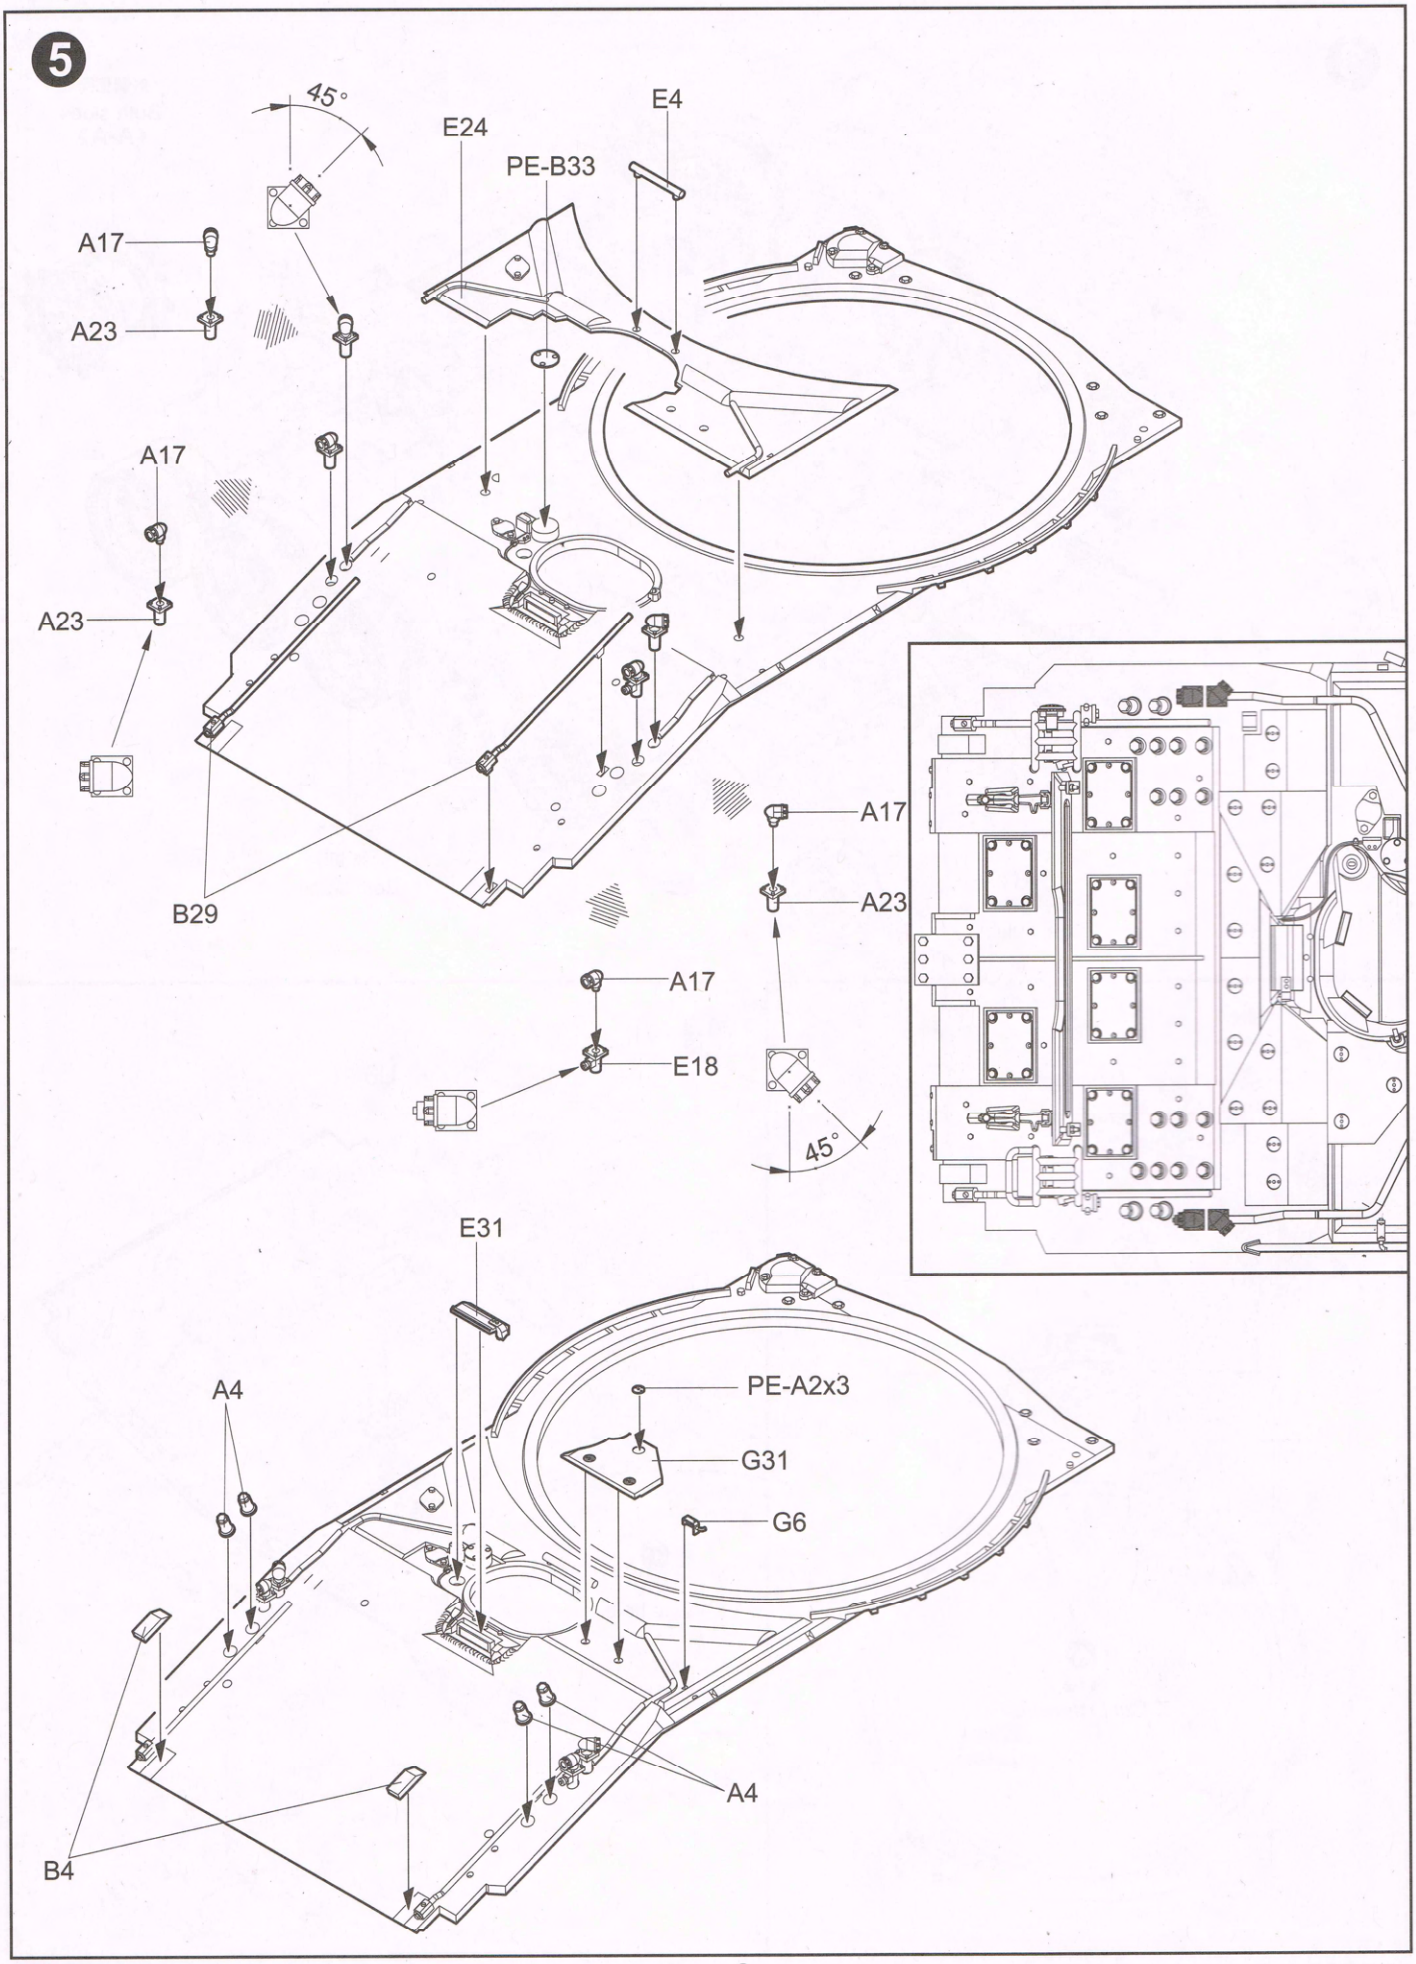

5
45°
E24
E4
PE-B33
A17
A23
A17
A23
B29
A17
A23
A17
E18
45°
E31
A4
PE-A2x3
G31
G6
A4
B4

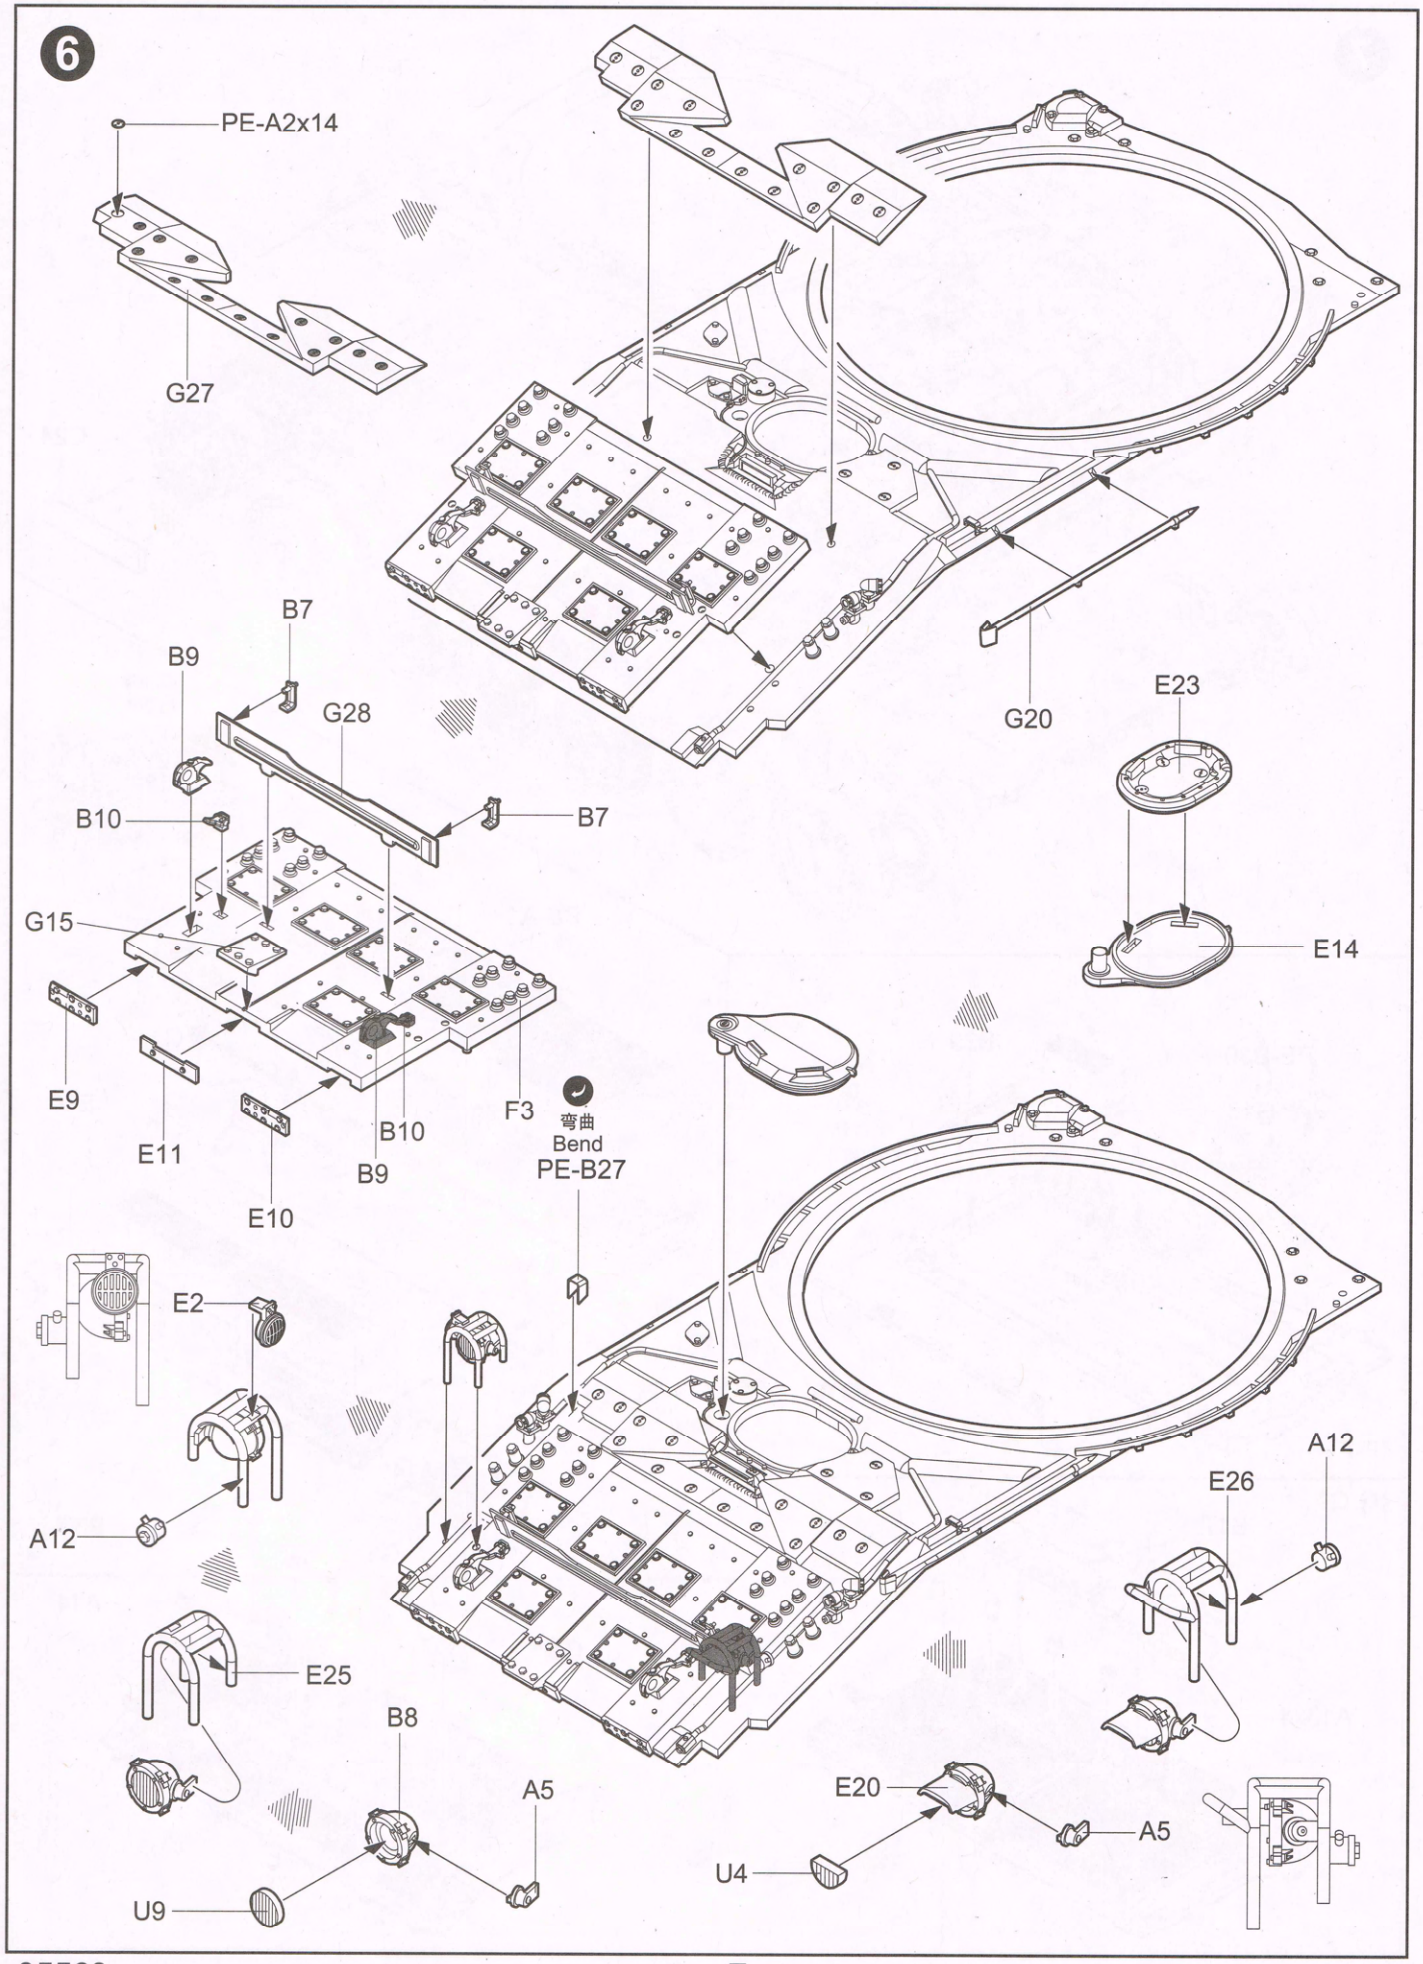
6
PE-A2x14
G27
B7
B9
G28
B10
B7
G15
E9
E11
E10
B10
B9
F3
弯曲
Bend
PE-B27
G20
E23
E14
E2
A12
E25
B8
A5
U9
E20
A5
U4
A12
E26


7

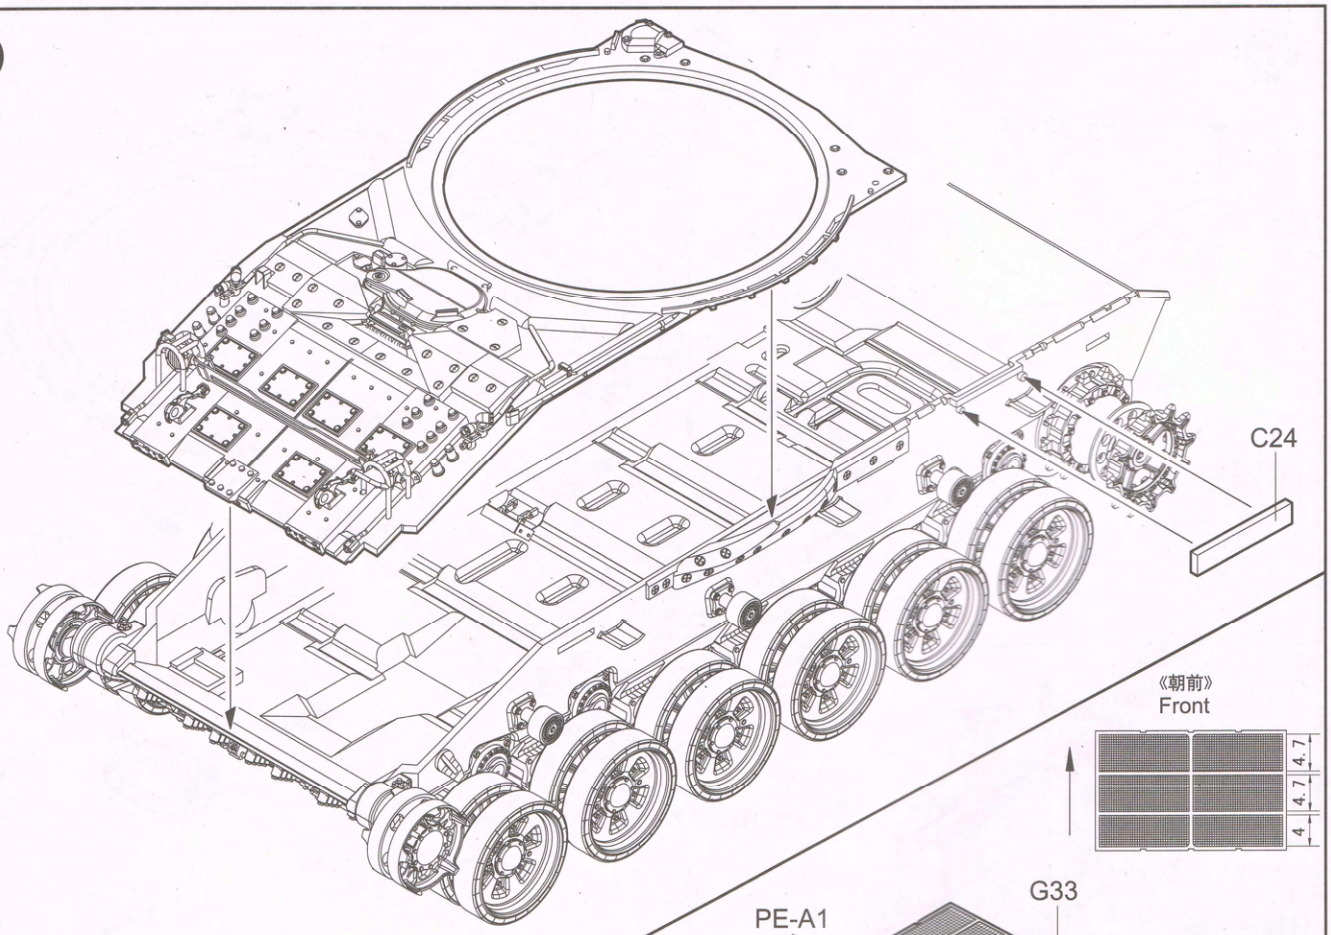


《朝前》
Front

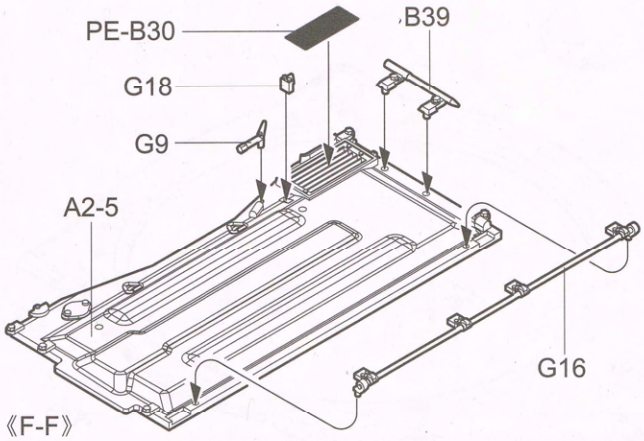


《F-F》

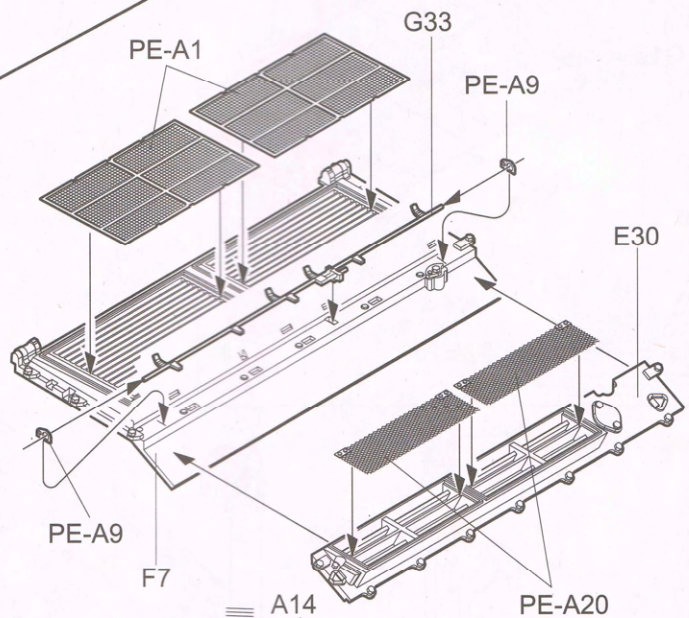



《G-G》

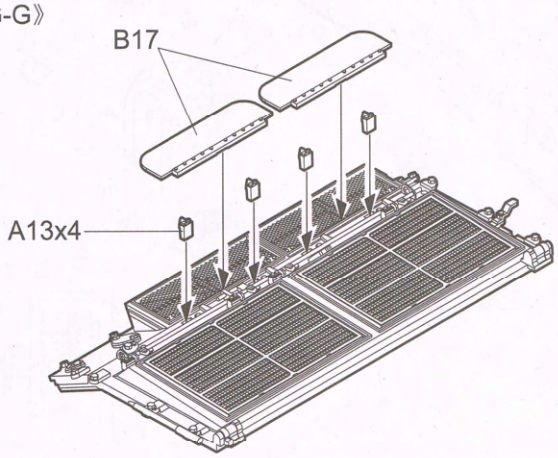


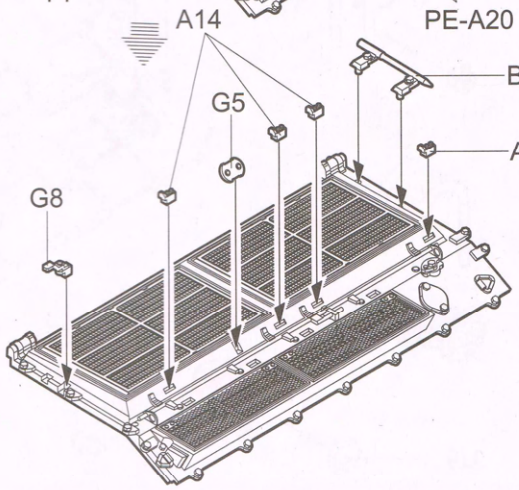



8

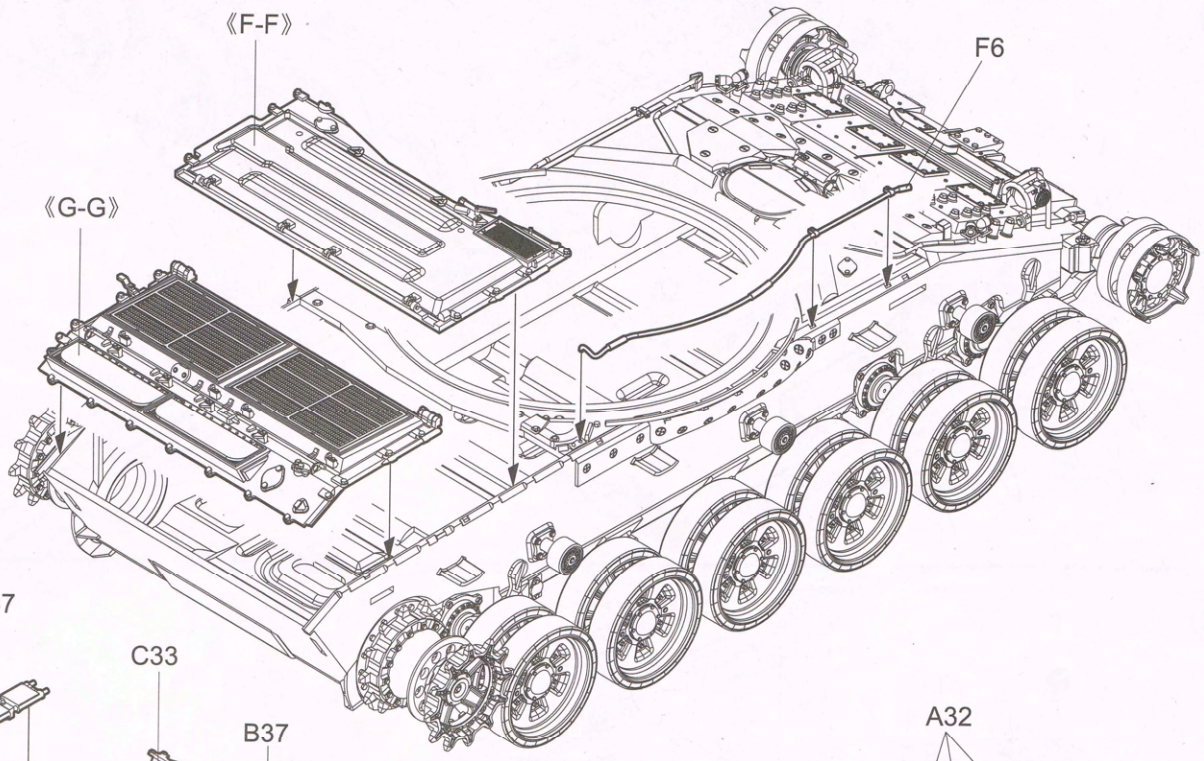

《F-F》
F6
《G-G》

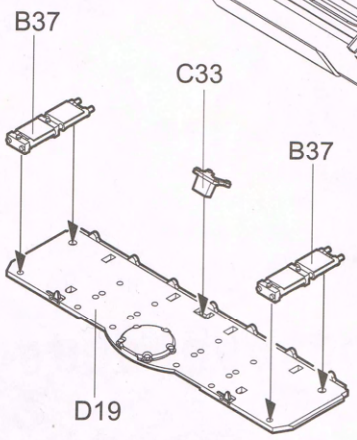

B37
C33
B37
D19

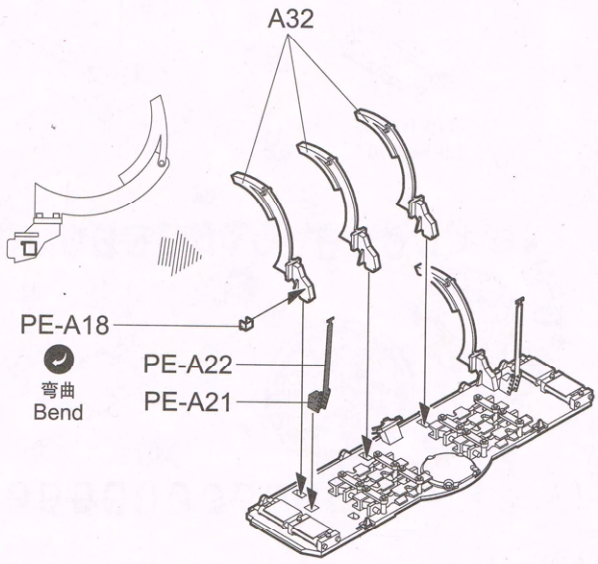
A32
PE-A18
弯曲
Bend
PE-A22
PE-A21

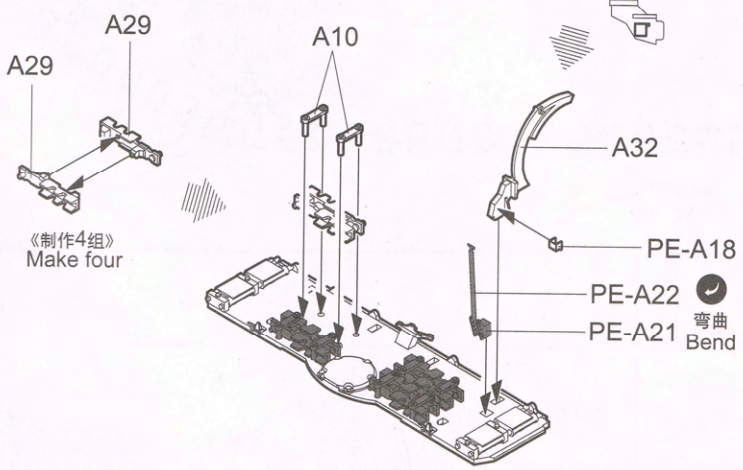

A29
A29
《制作4组》
Make four
A10
A32
PE-A18
PE-A22
弯曲
Bend
PE-A21

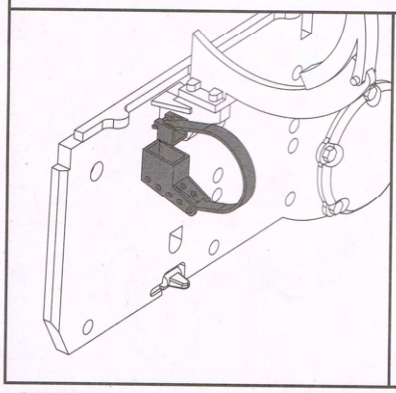

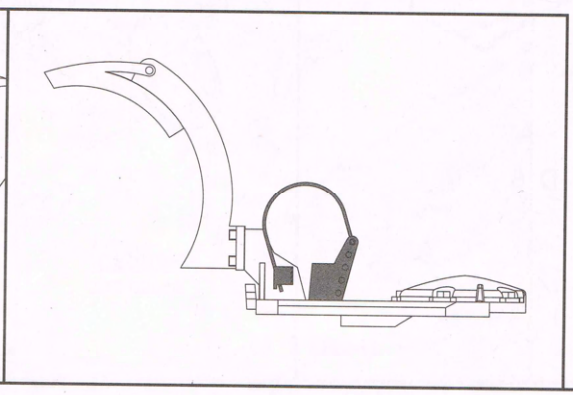


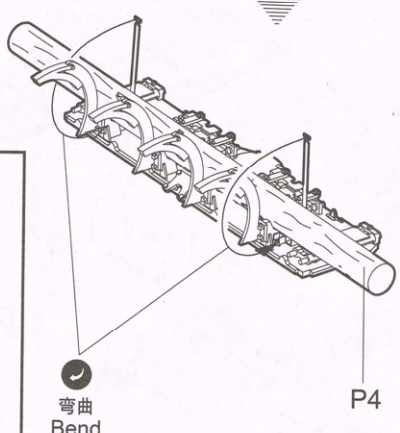
弯曲
Bend
P4


9

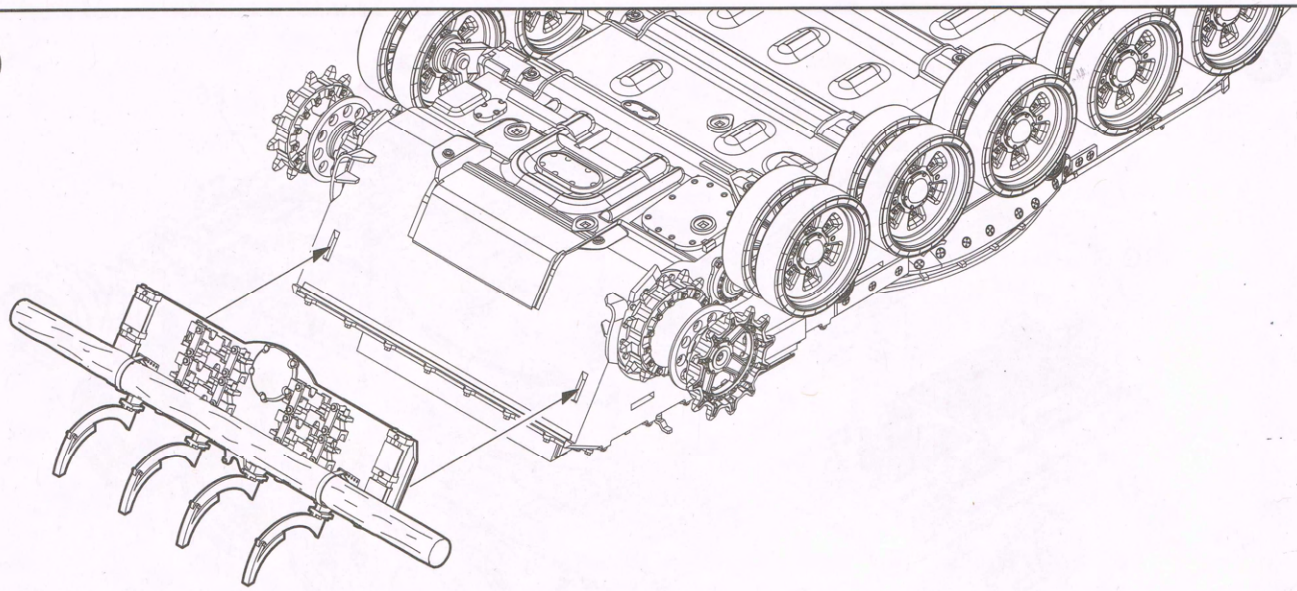


10

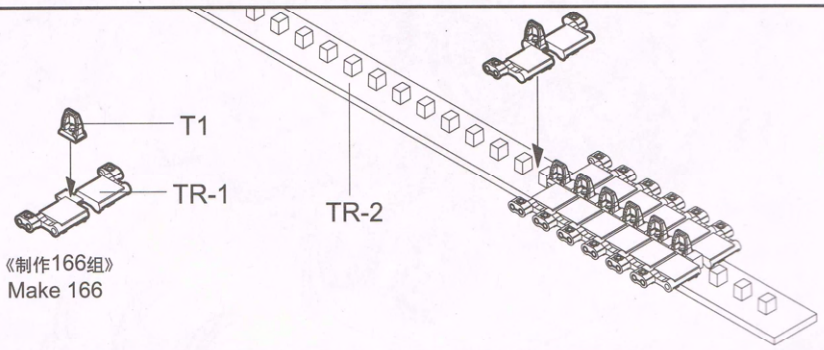


《制作166组》
Make 166

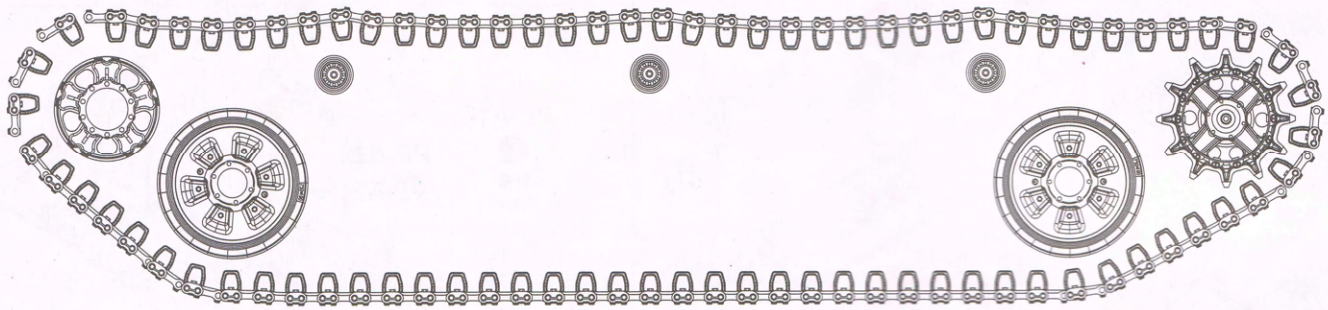

《制作2组》
Make two

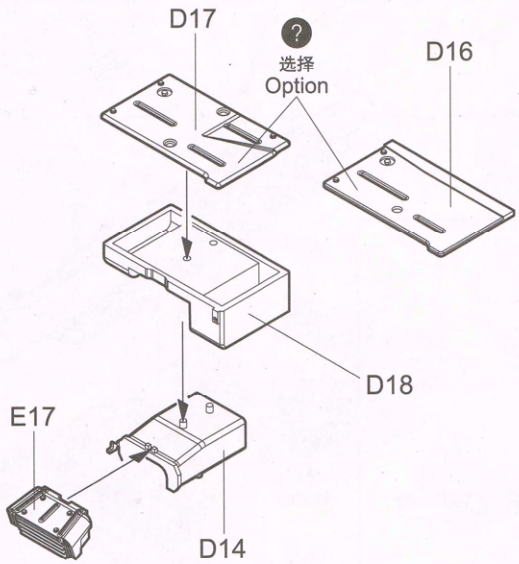

《H-H》

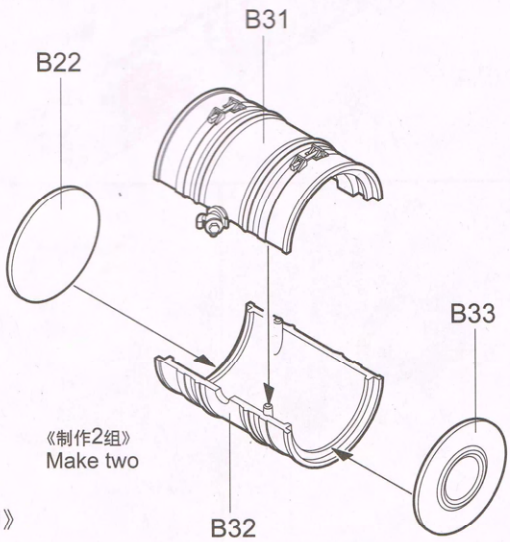


《制作2组》
Make two

《J-J》


11


《K-K》

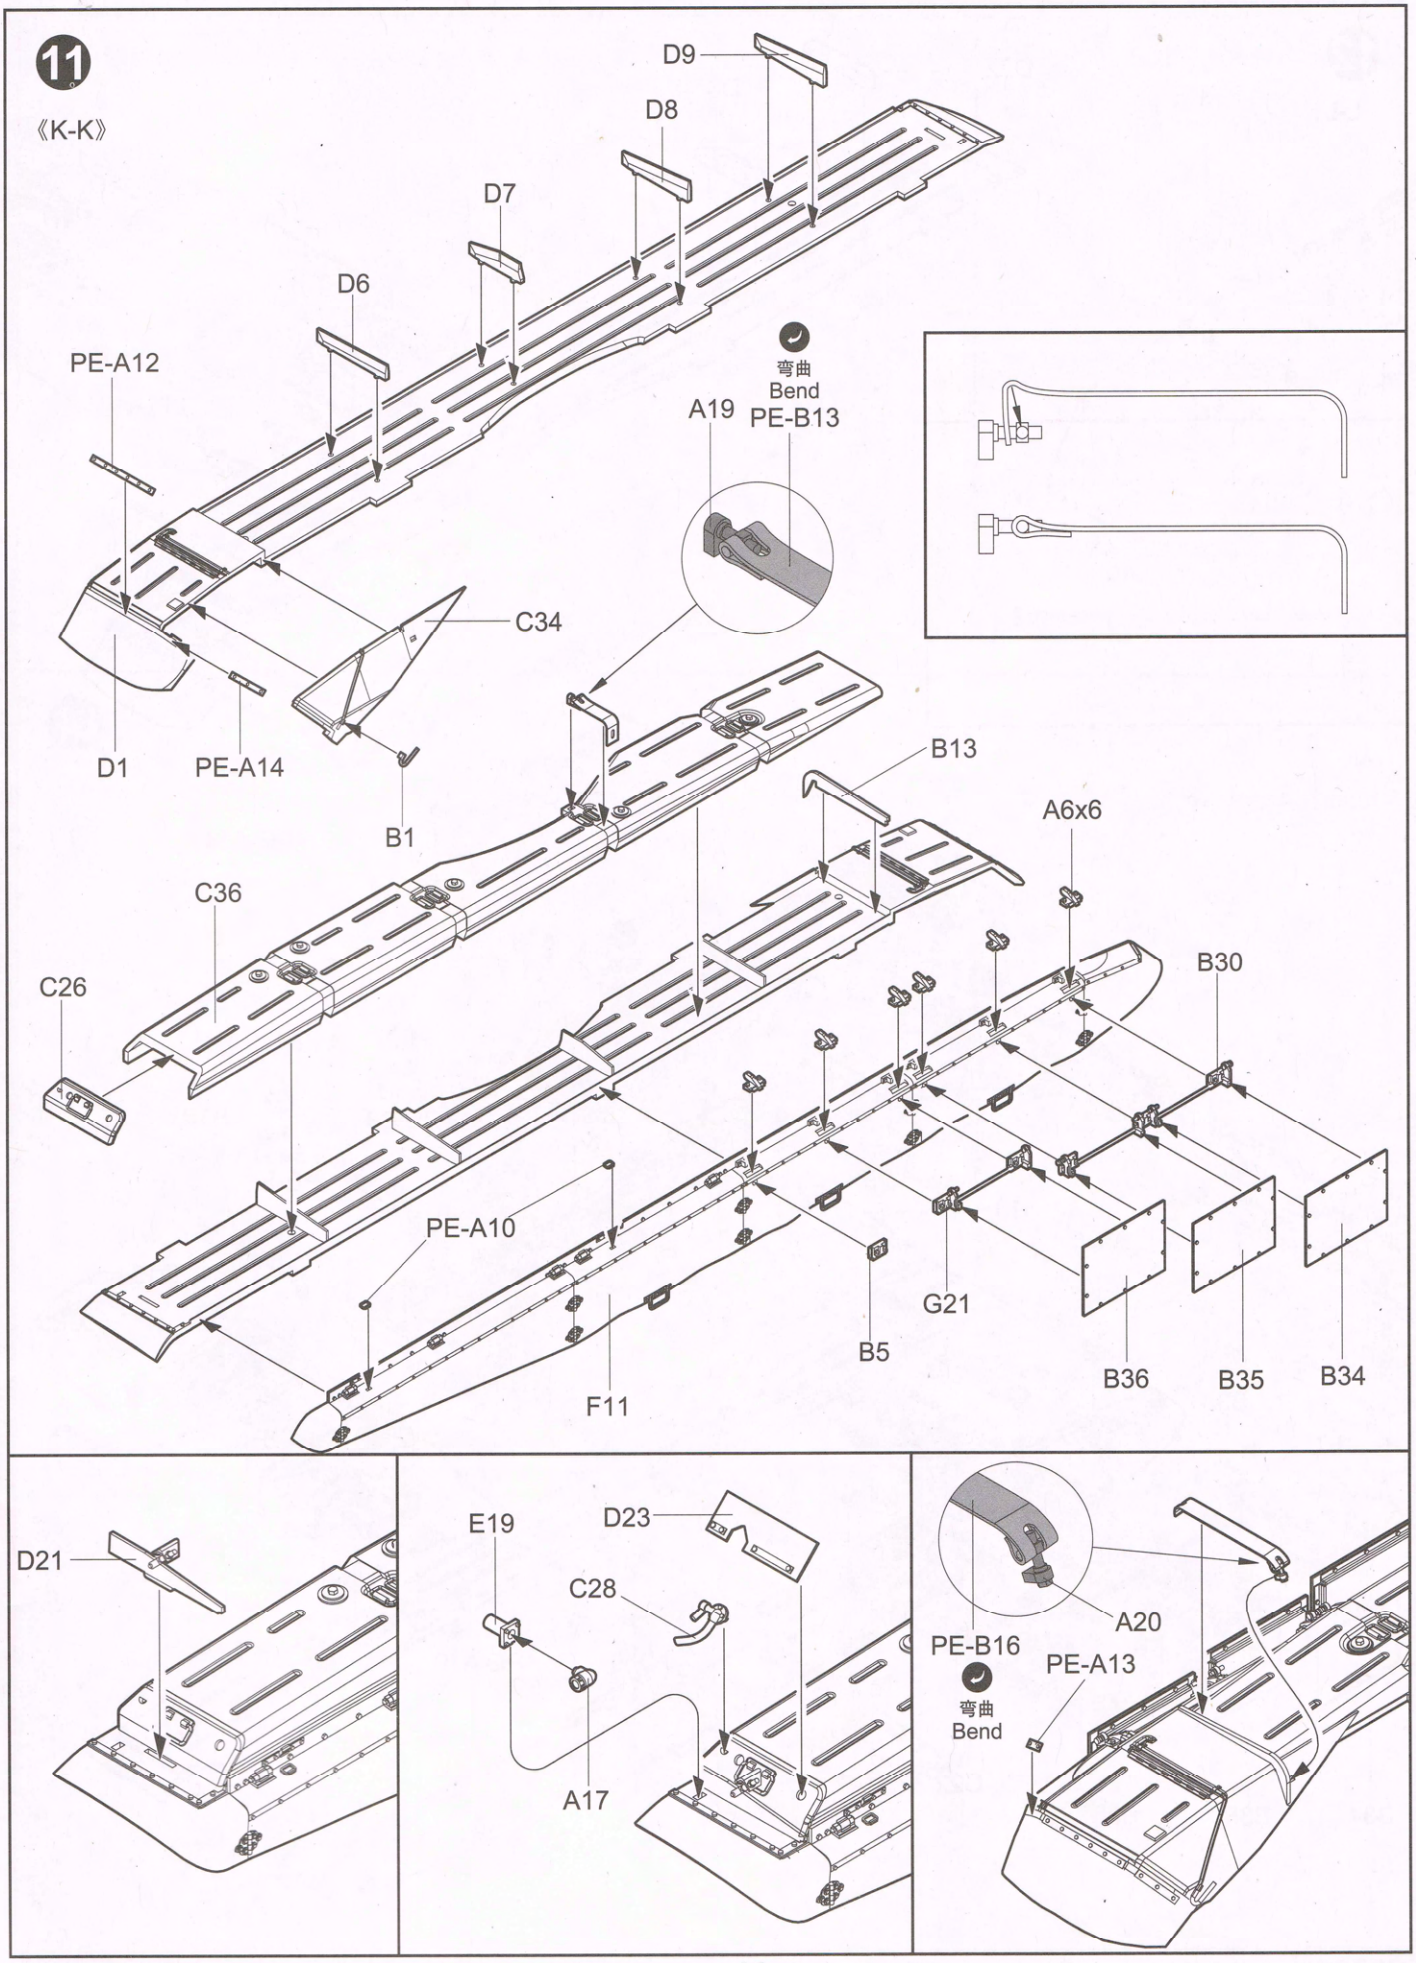

D9
D8
D7
D6
PE-A12
弯曲
Bend
A19
PE-B13
C34
D1
PE-A14
B1
B13
A6x6
C36
C26
B30
PE-A10
G21
B5
B36
B35
B34
F11
D21
E19
D23
C28
A17
PE-B16
A20
PE-A13
弯曲
Bend


12

《L-L》

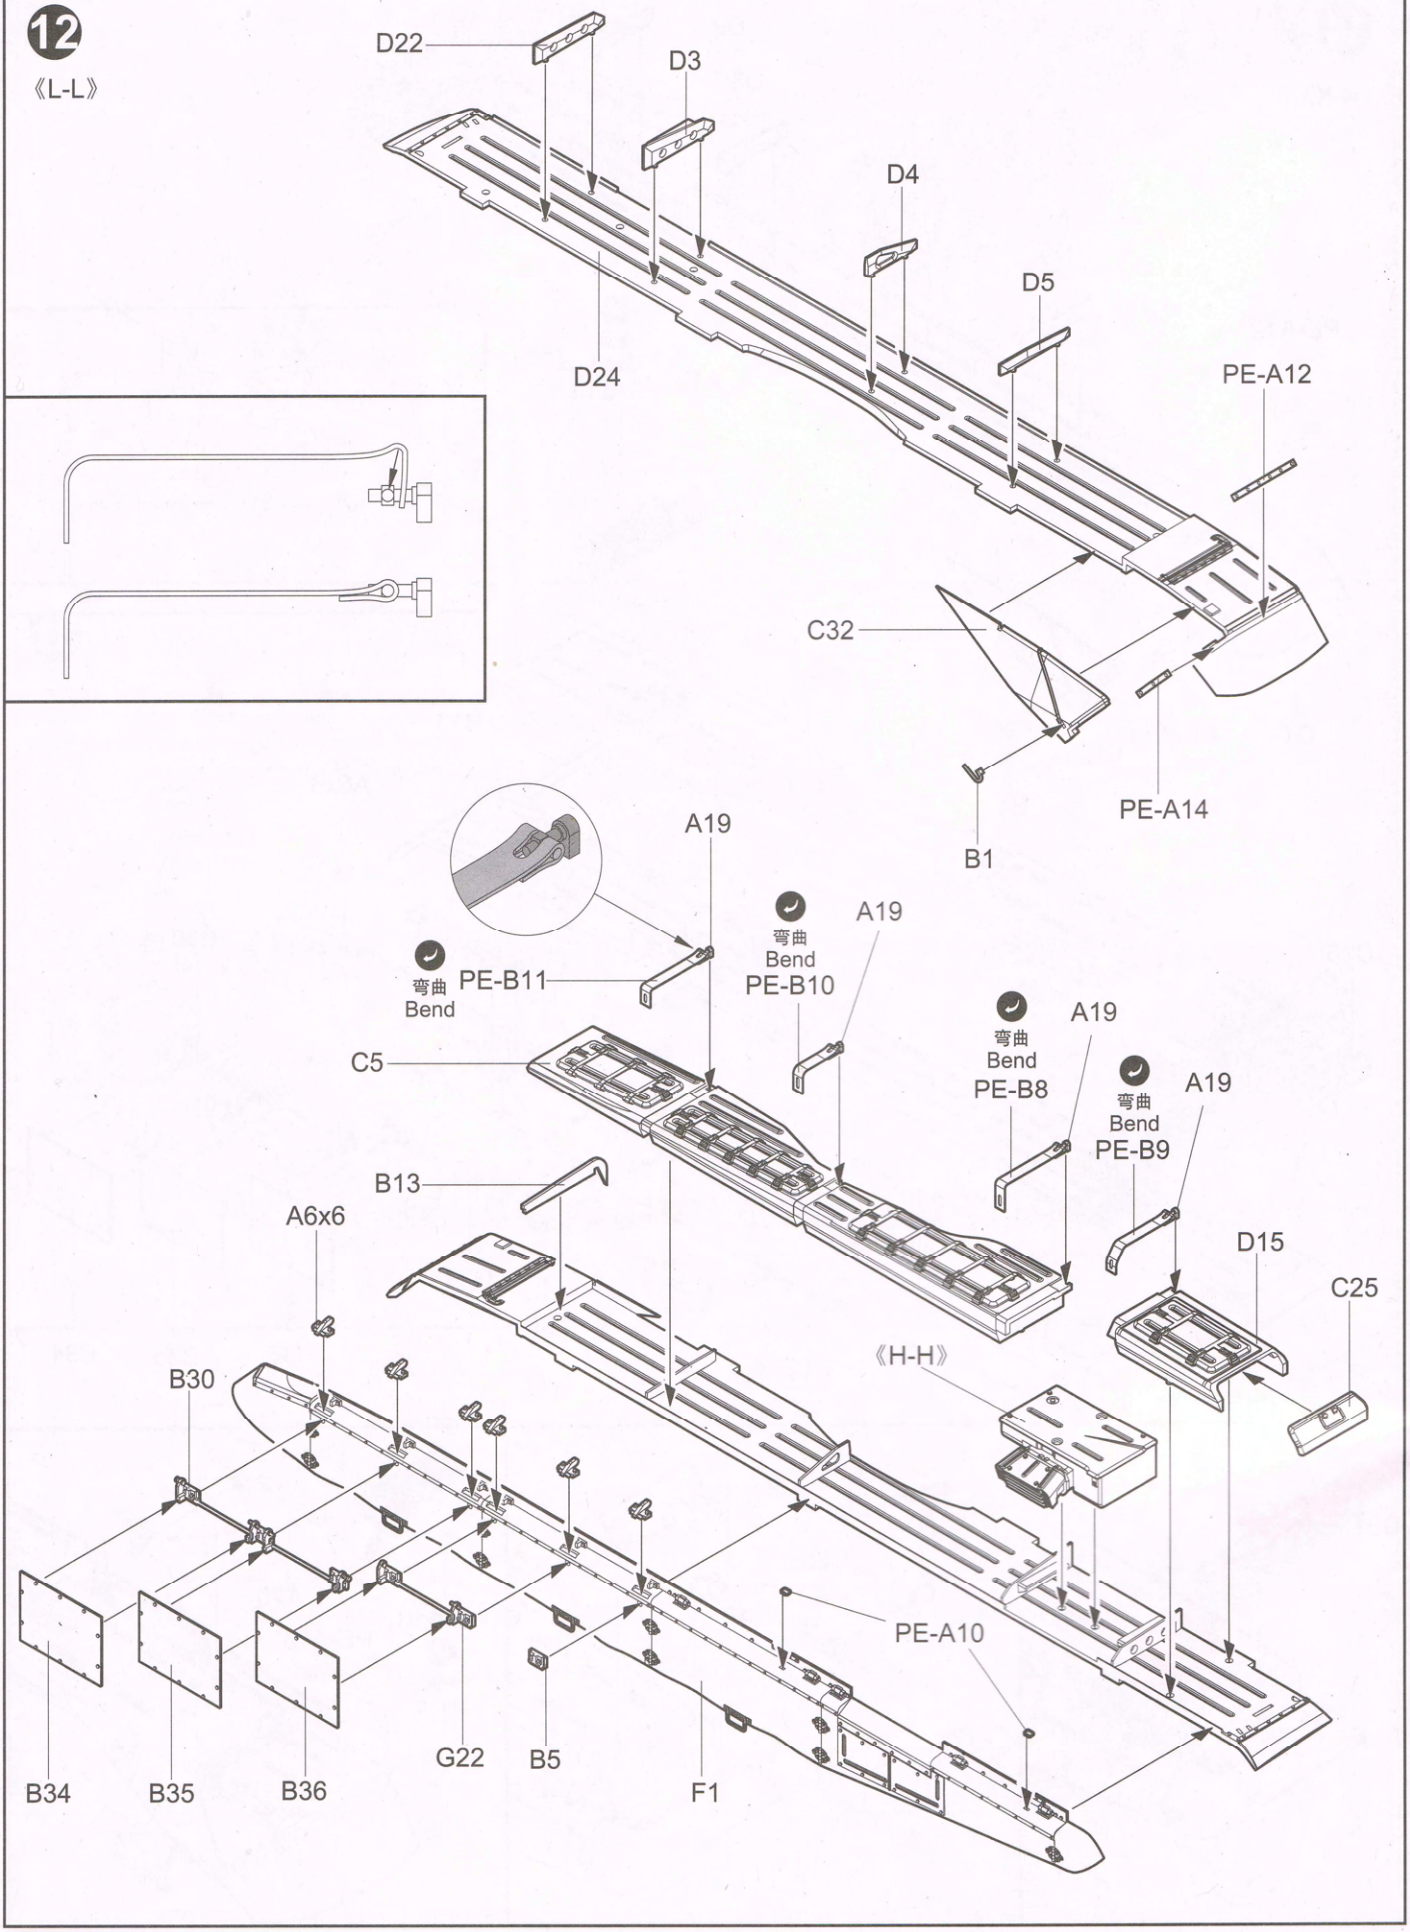

D22
D3
D4
D5
D24
PE-A12
C32
PE-A14
B1
A19
弯曲
Bend
PE-B11
A19
弯曲
Bend
PE-B10
C5
弯曲
Bend
PE-B8
A19
弯曲
Bend
PE-B9
A19
B13
A6x6
D15
C25
《H-H》
B30
PE-A10
B34
B35
B36
G22
B5
F1

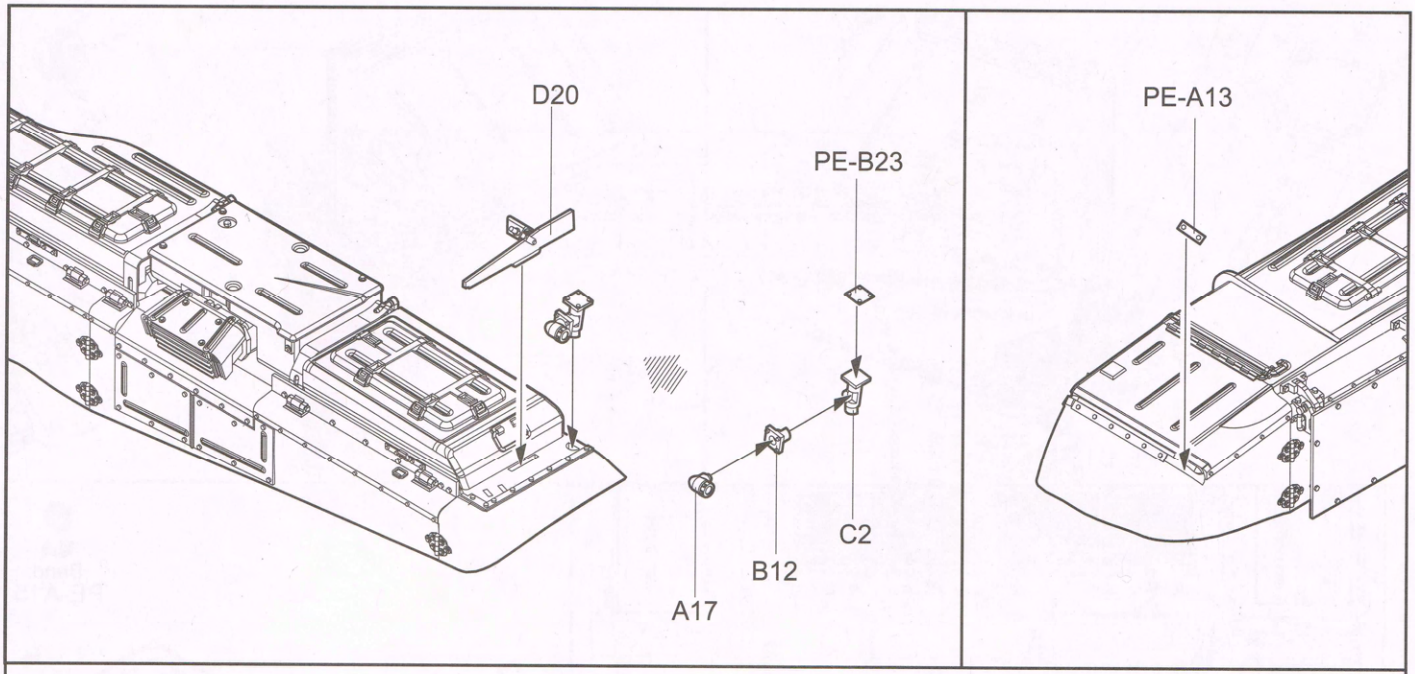

D20
PE-B23
C2
B12
A17
PE-A13

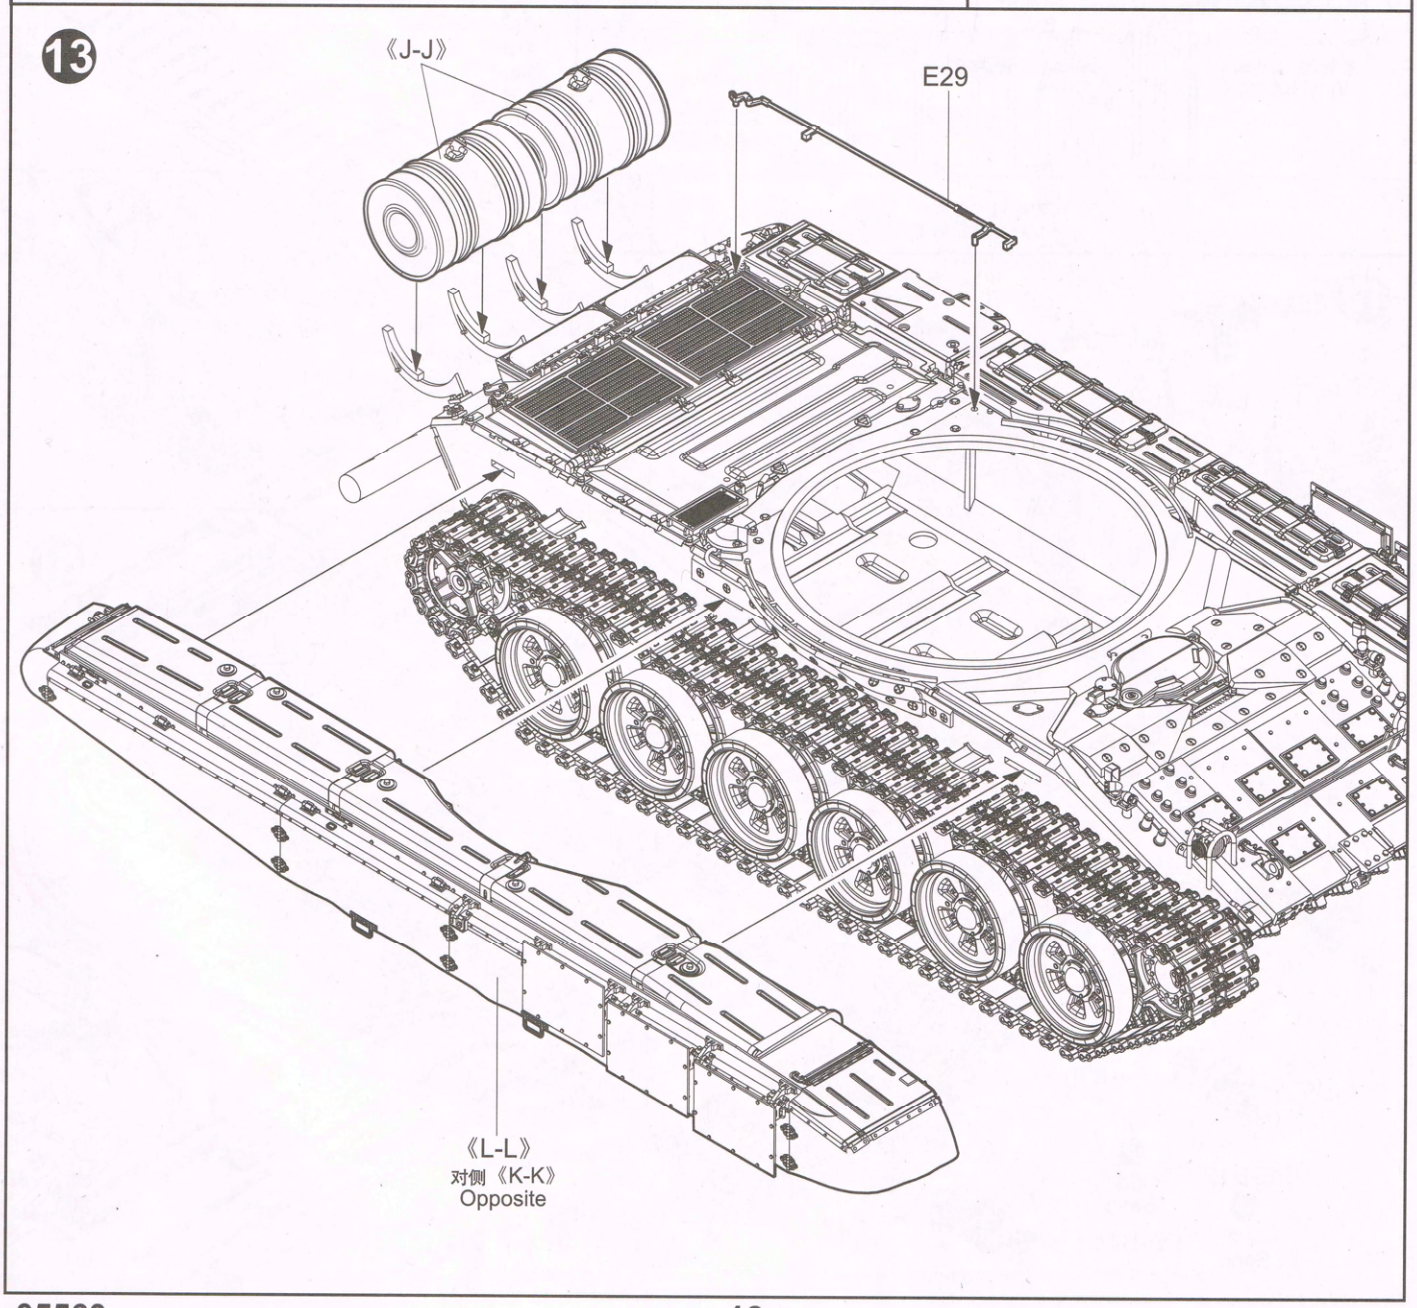

13
《J-J》
E29
《L-L》
对侧《K-K》
Opposite

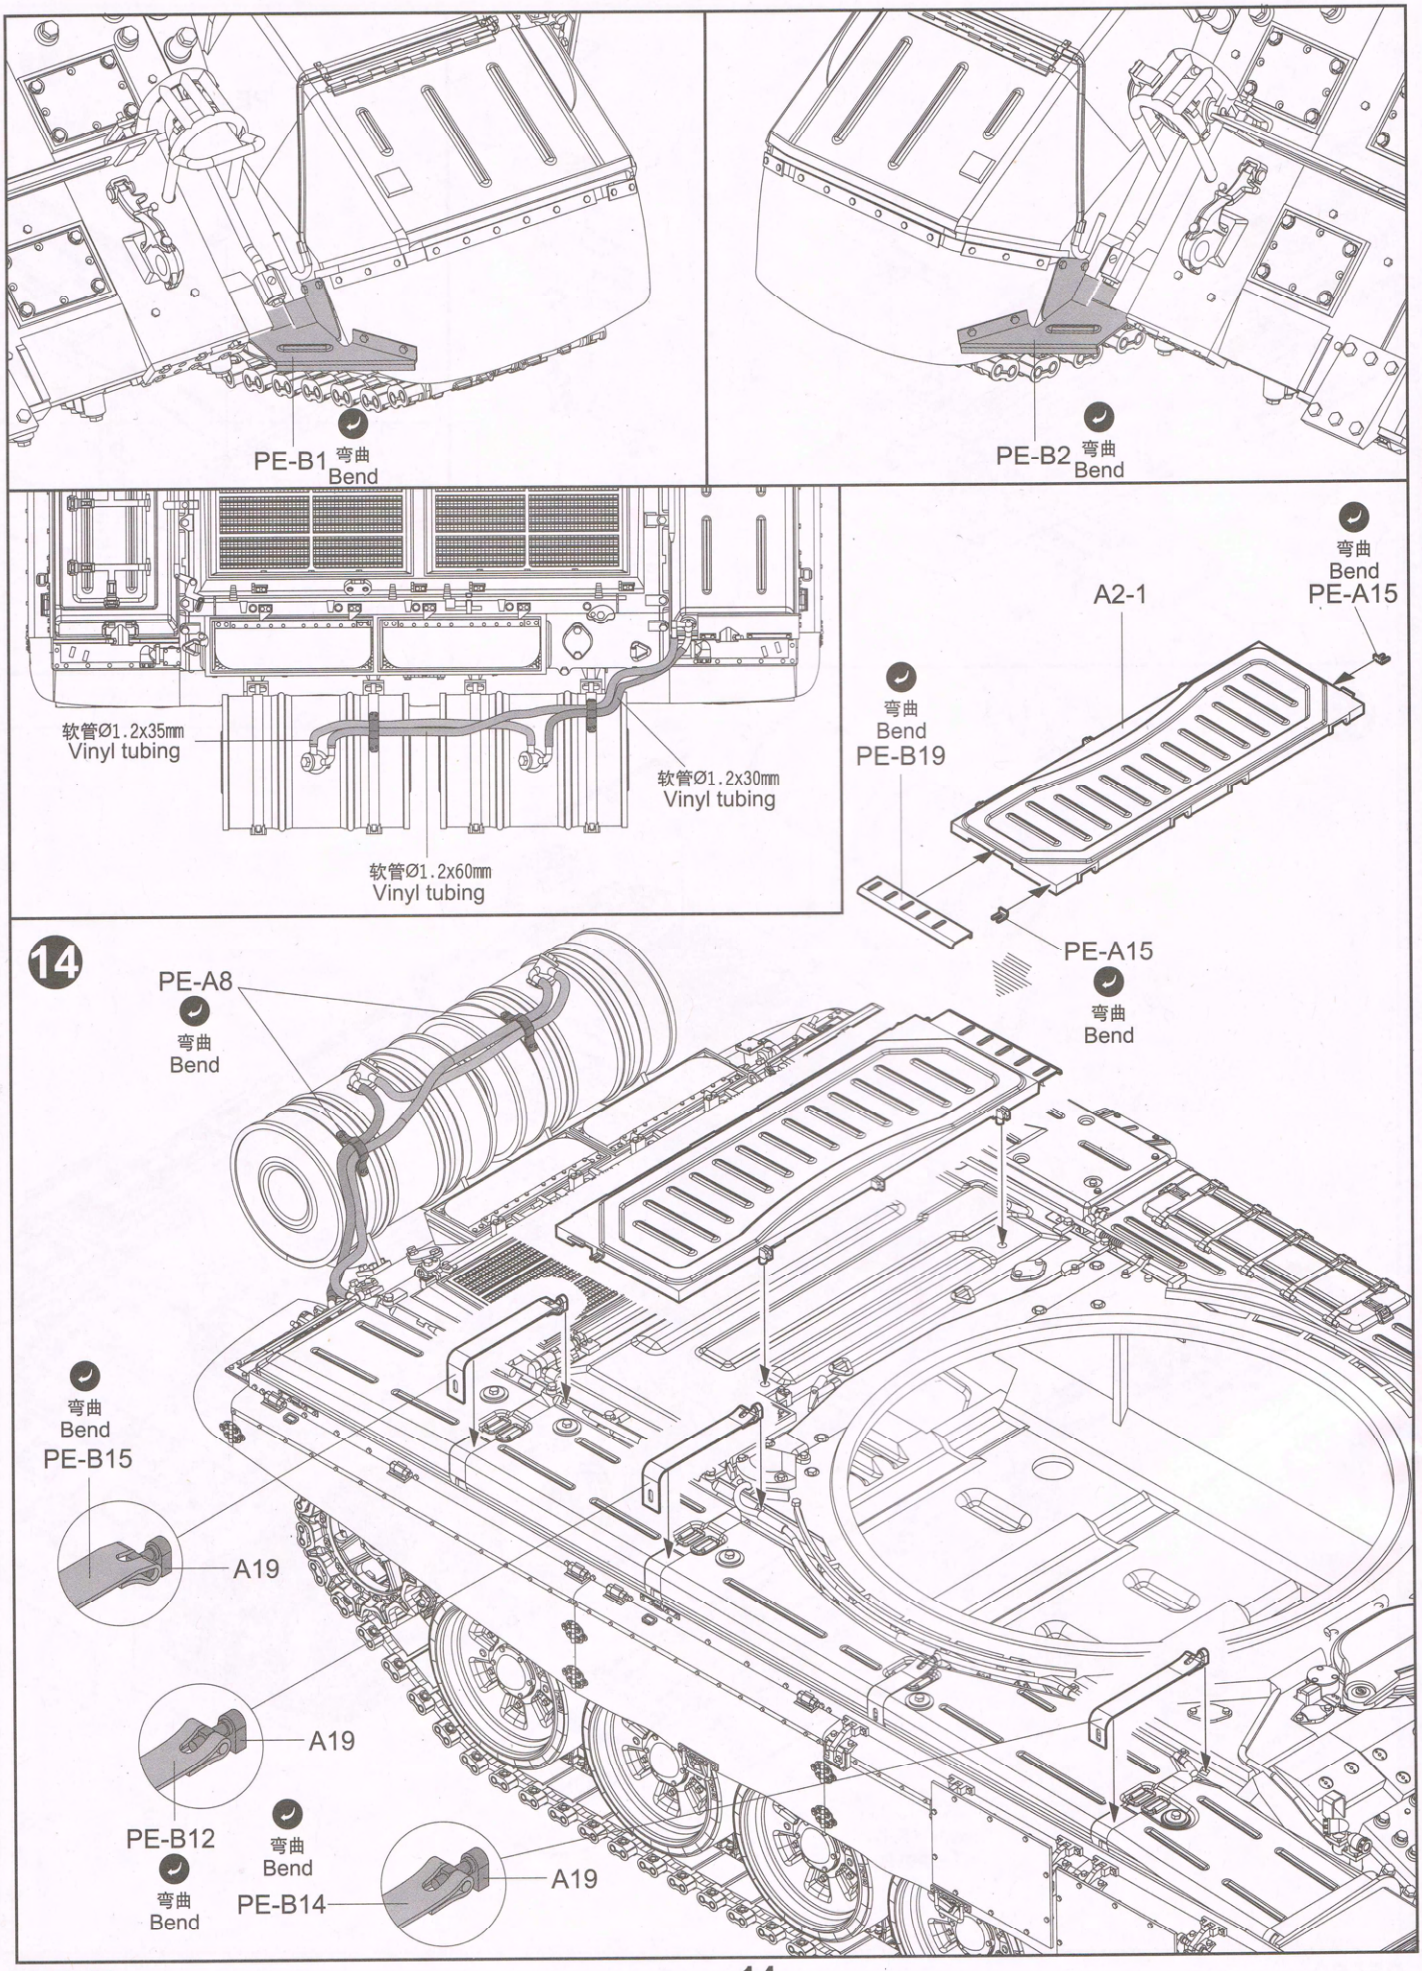

PE-B1
弯曲
Bend
PE-B2
弯曲
Bend
软管Ø1.2x35mm
Vinyl tubing
软管Ø1.2x30mm
Vinyl tubing
软管Ø1.2x60mm
Vinyl tubing
弯曲
Bend
PE-A15
A2-1
弯曲
Bend
PE-B19
PE-A15
弯曲
Bend
14
PE-A8
弯曲
Bend
弯曲
Bend
PE-B15
A19
A19
PE-B12
弯曲
Bend
弯曲
Bend
PE-B14
A19

15

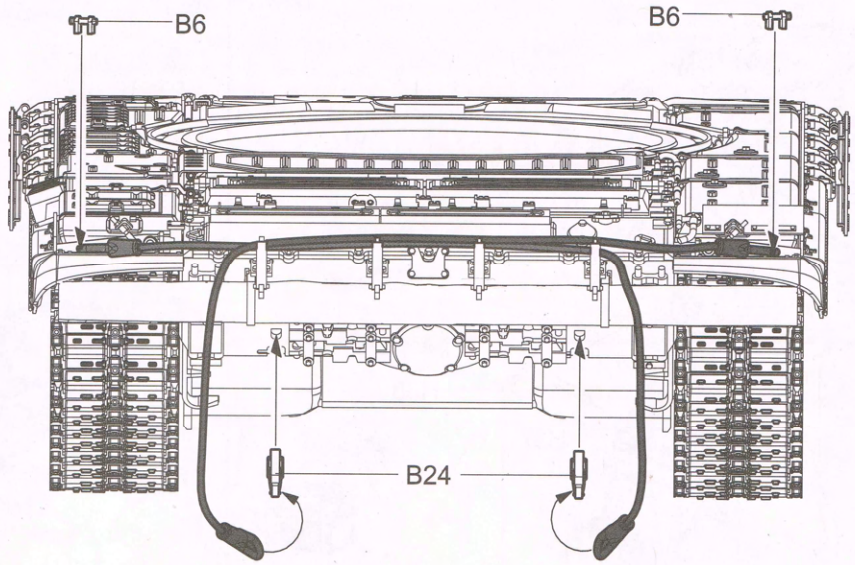

B6
B6
B24

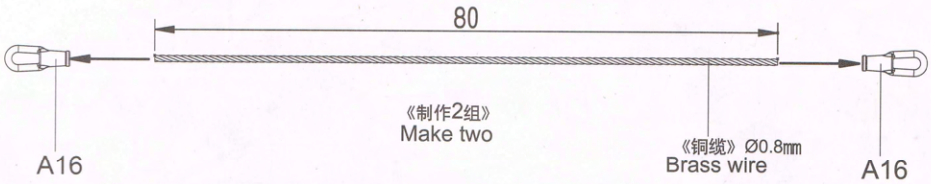
80
《制作2组》
Make two
《铜缆》Ø0.8mm
Brass wire
A16
A16

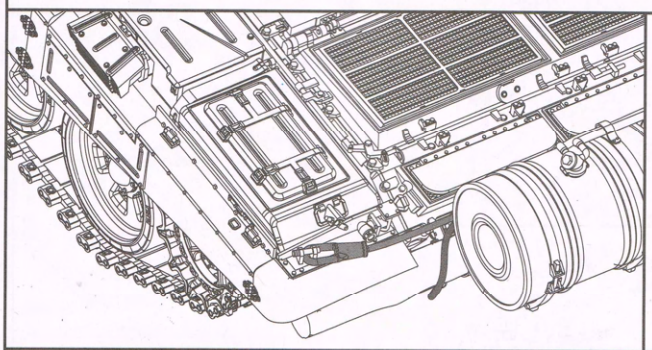


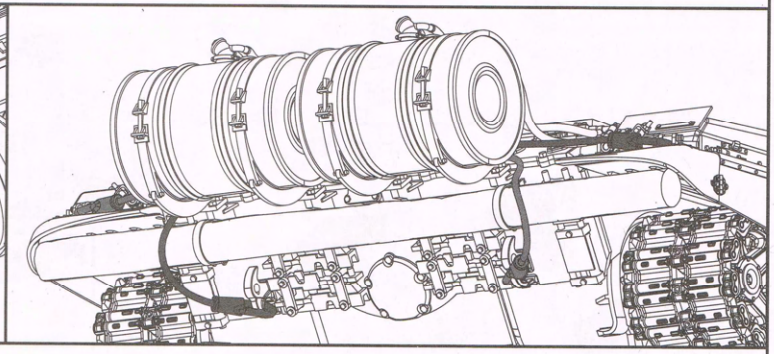



16

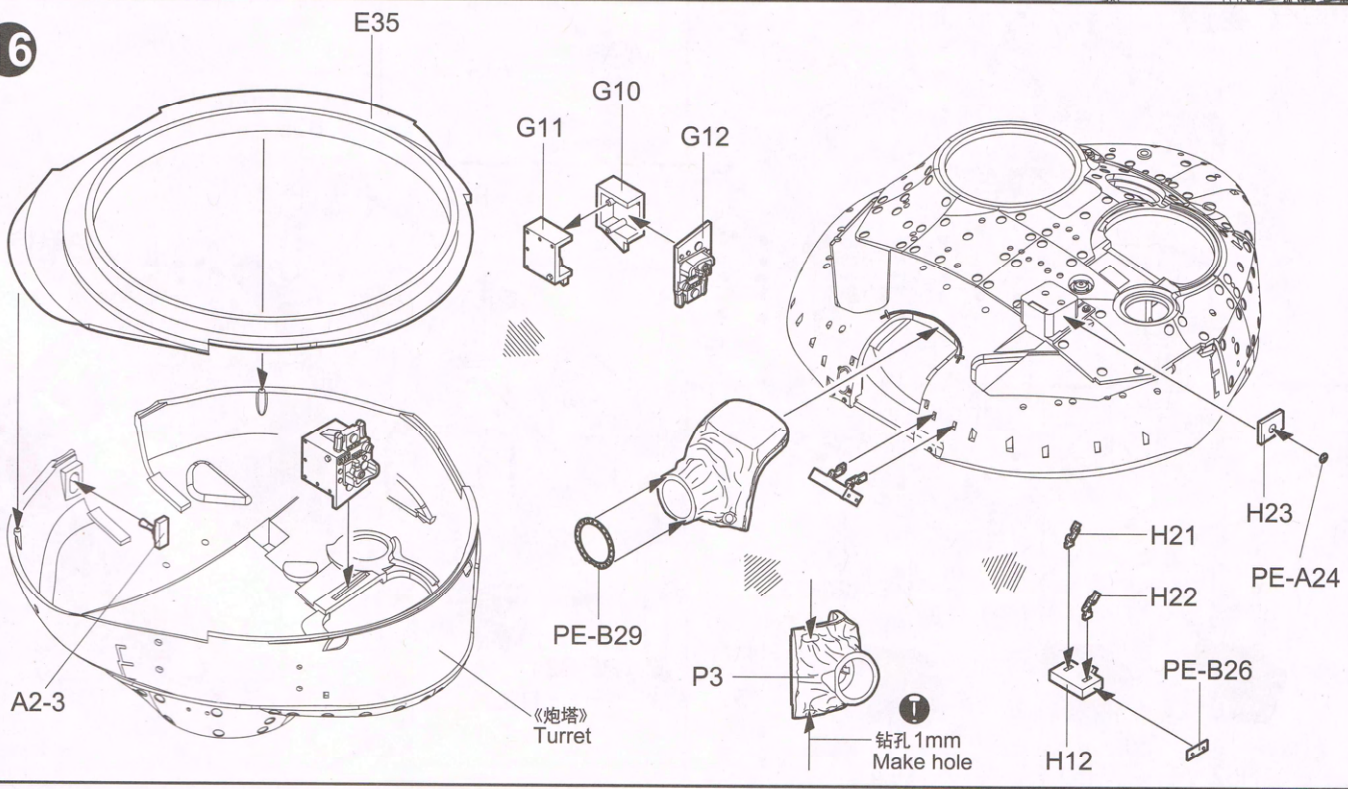

E35
G10
G11
G12
H23
H21
PE-A24
H22
PE-B29
PE-B26
P3
钻孔1mm
Make hole
H12
A2-3
《炮塔》
Turret


17

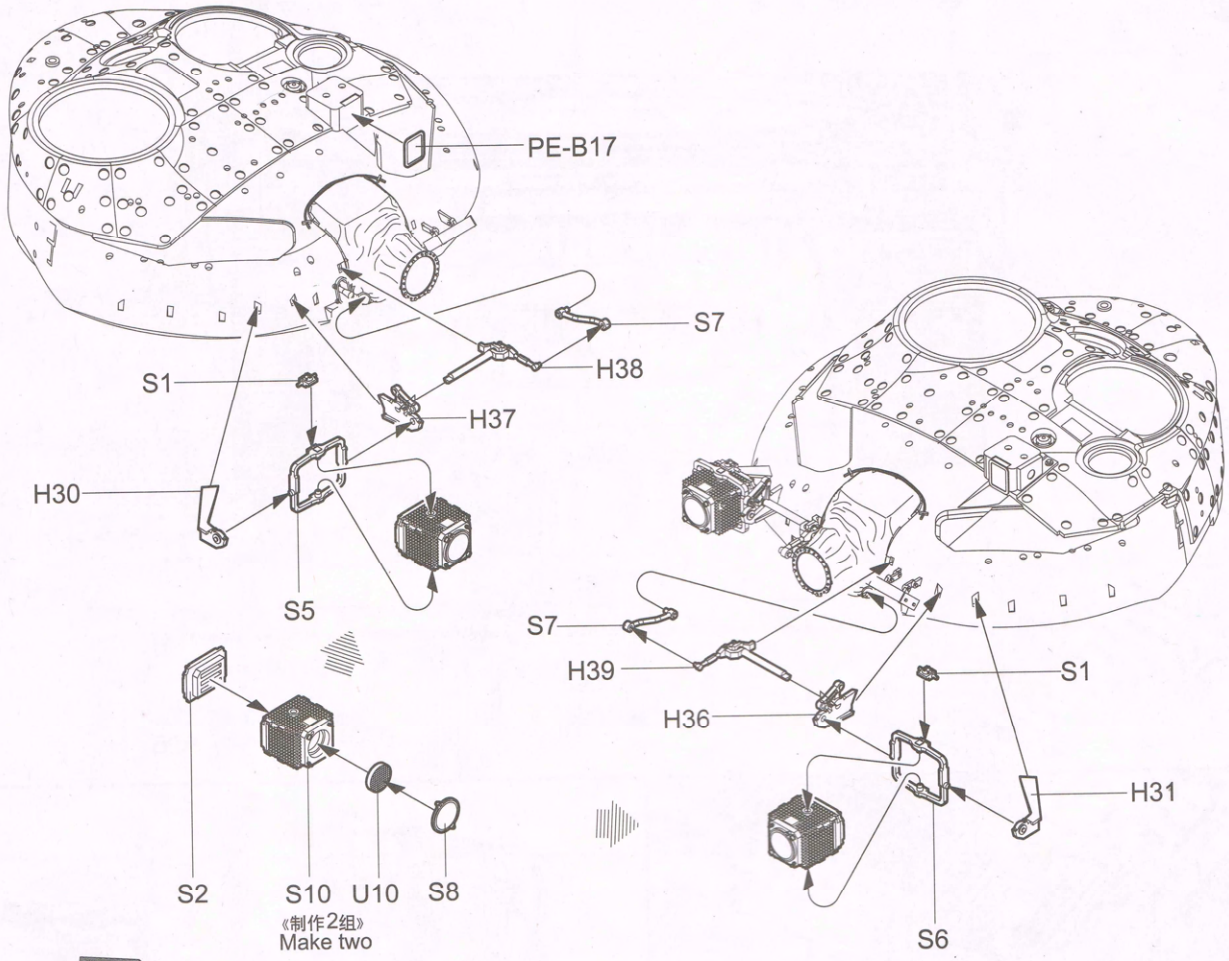
PE-B17
S7
H38
S1
H37
H30
S5
S7
H39
S1
H36
H31
S6
S2
S10
U10
S8
《制作2组》
Make two

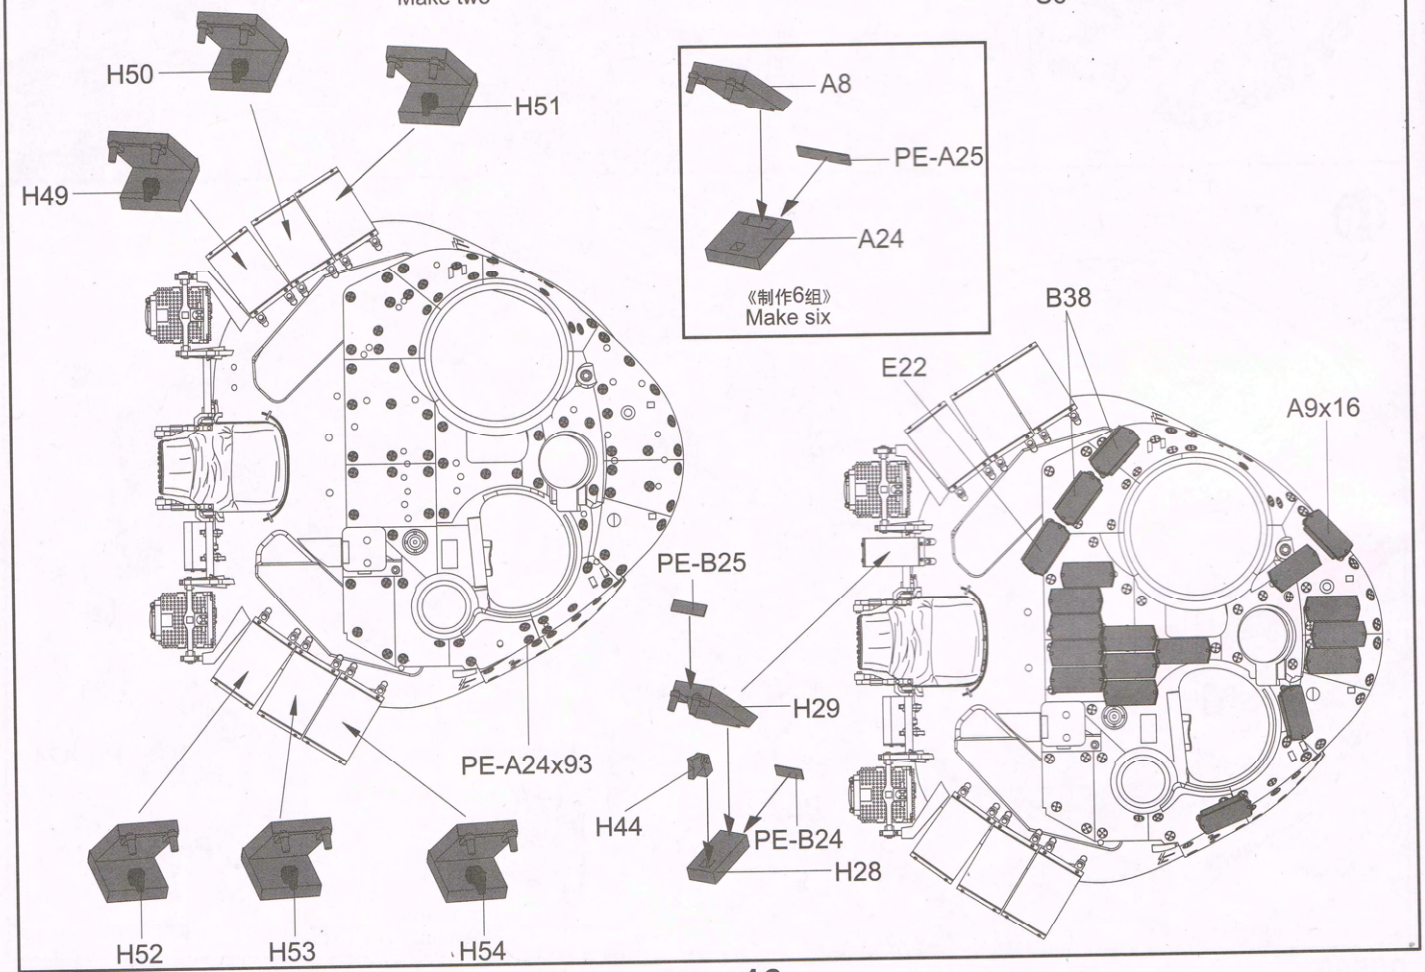

H50
H51
H49
A8
PE-A25
A24
《制作6组》
Make six
B38
E22
A9x16
PE-B25
H29
PE-A24x93
H44
PE-B24
H28
H52
H53
H54

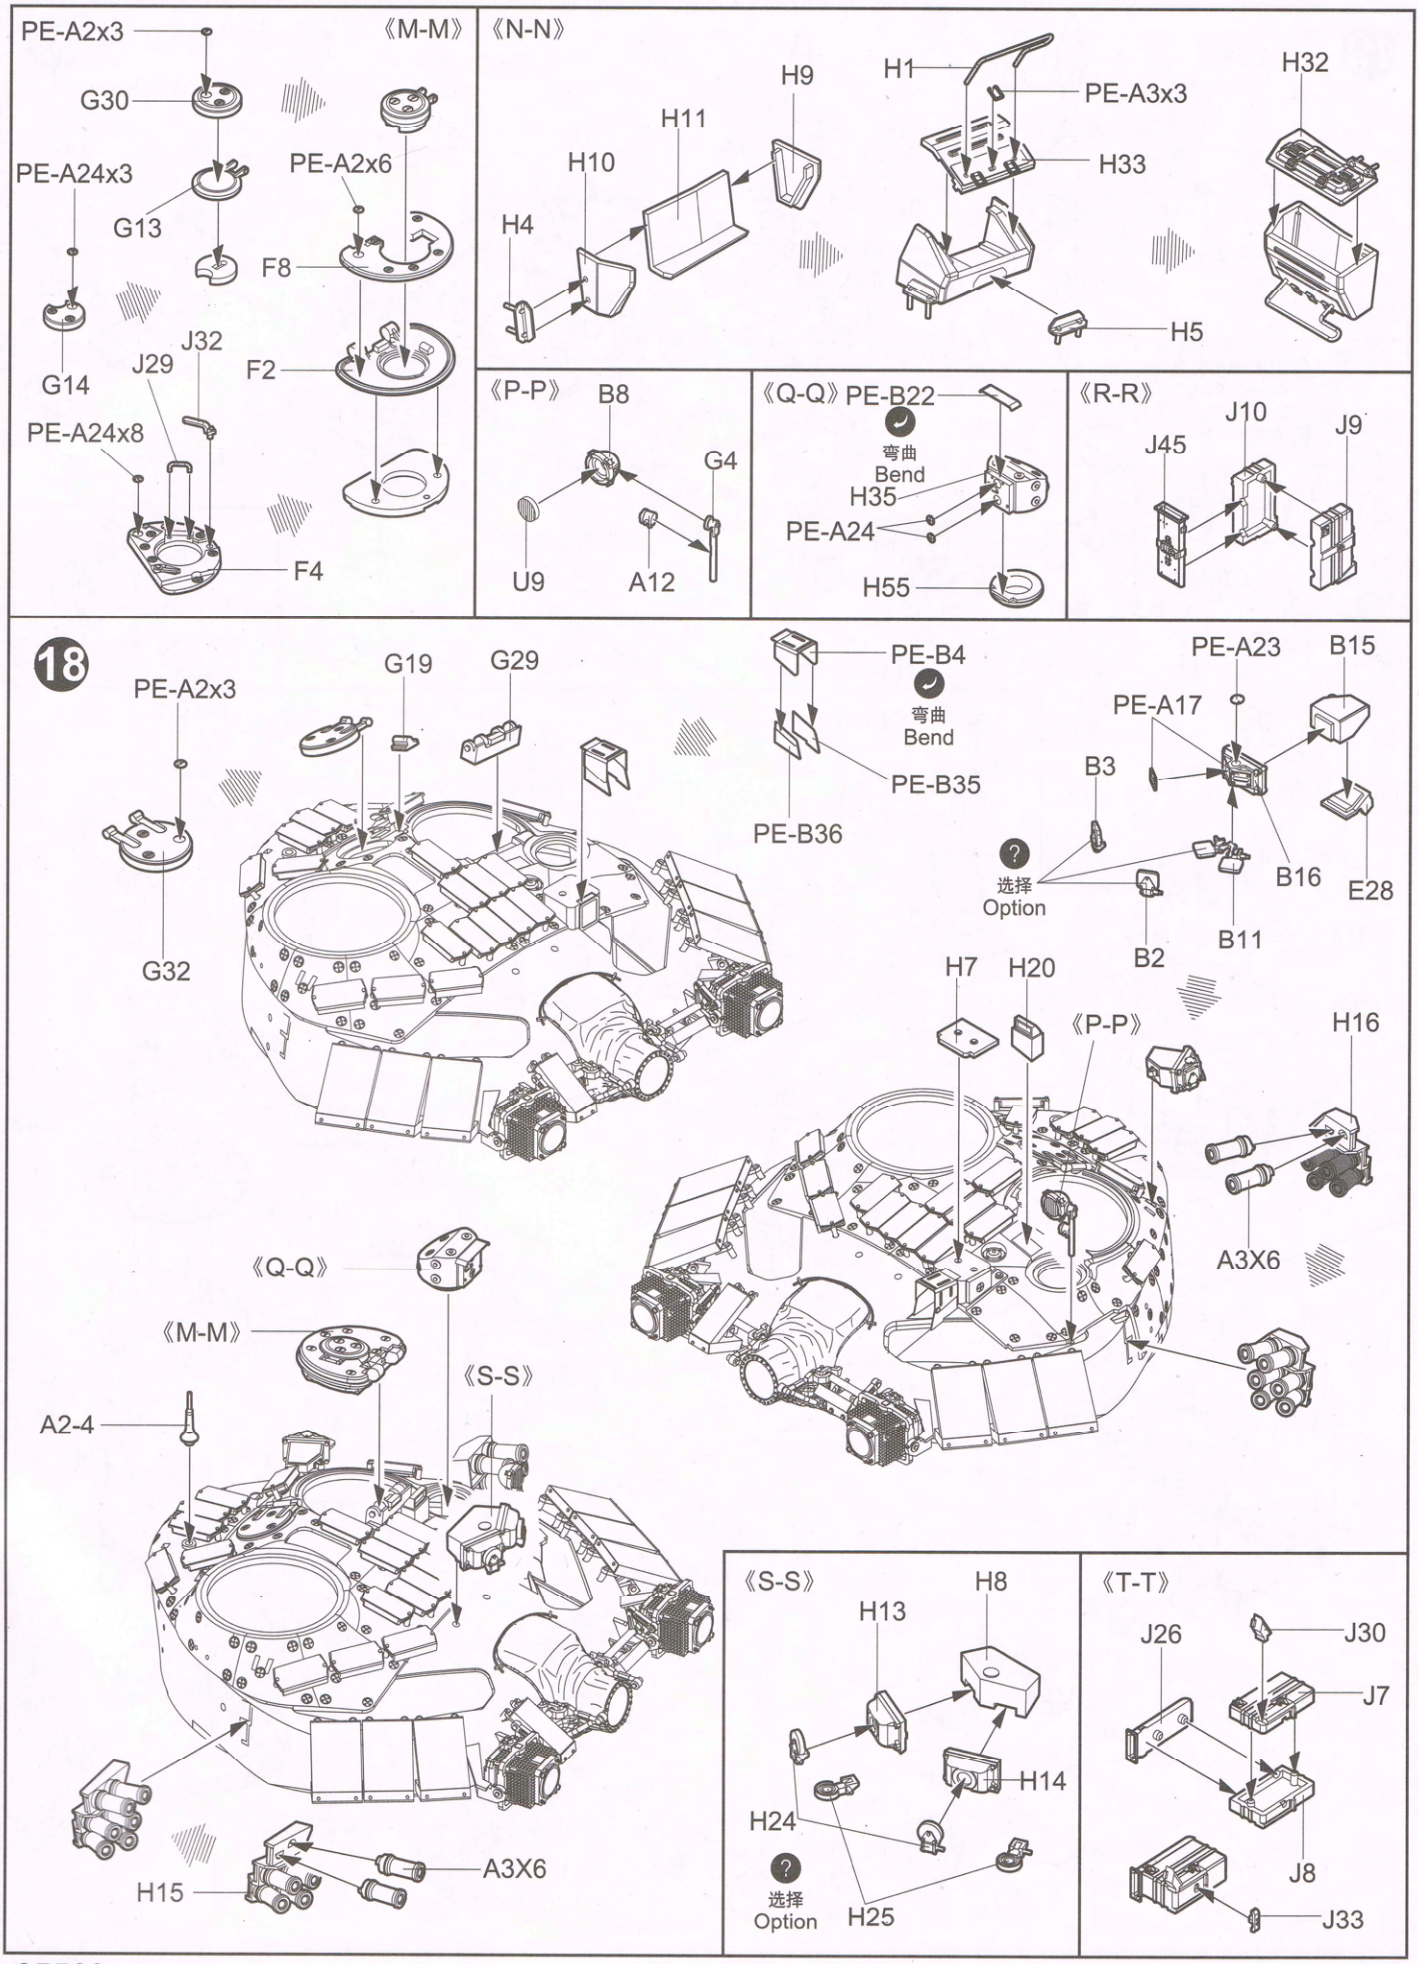
PE-A2x3
《M-M》
G30
PE-A24x3
PE-A2x6
G13
F8
G14
J29
J32
F2
PE-A24x8
F4
《N-N》
H9
H1
PE-A3x3
H32
H11
H10
H33
H4
H5
《P-P》
B8
G4
U9
A12
《Q-Q》
PE-B22
弯曲
Bend
H35
PE-A24
H55
《R-R》
J10
J9
J45
18
PE-A2x3
G19
G29
PE-B4
弯曲
Bend
PE-B35
PE-B36
PE-A23
B15
PE-A17
B3
选择
Option
B16
E28
B2
B11
G32
H7
H20
《P-P》
H16
A3X6
《Q-Q》
《M-M》
《S-S》
A2-4
H15
A3X6
《S-S》
H8
H13
H14
H24
选择
Option
H25
《T-T》
J26
J30
J7
J8
J33

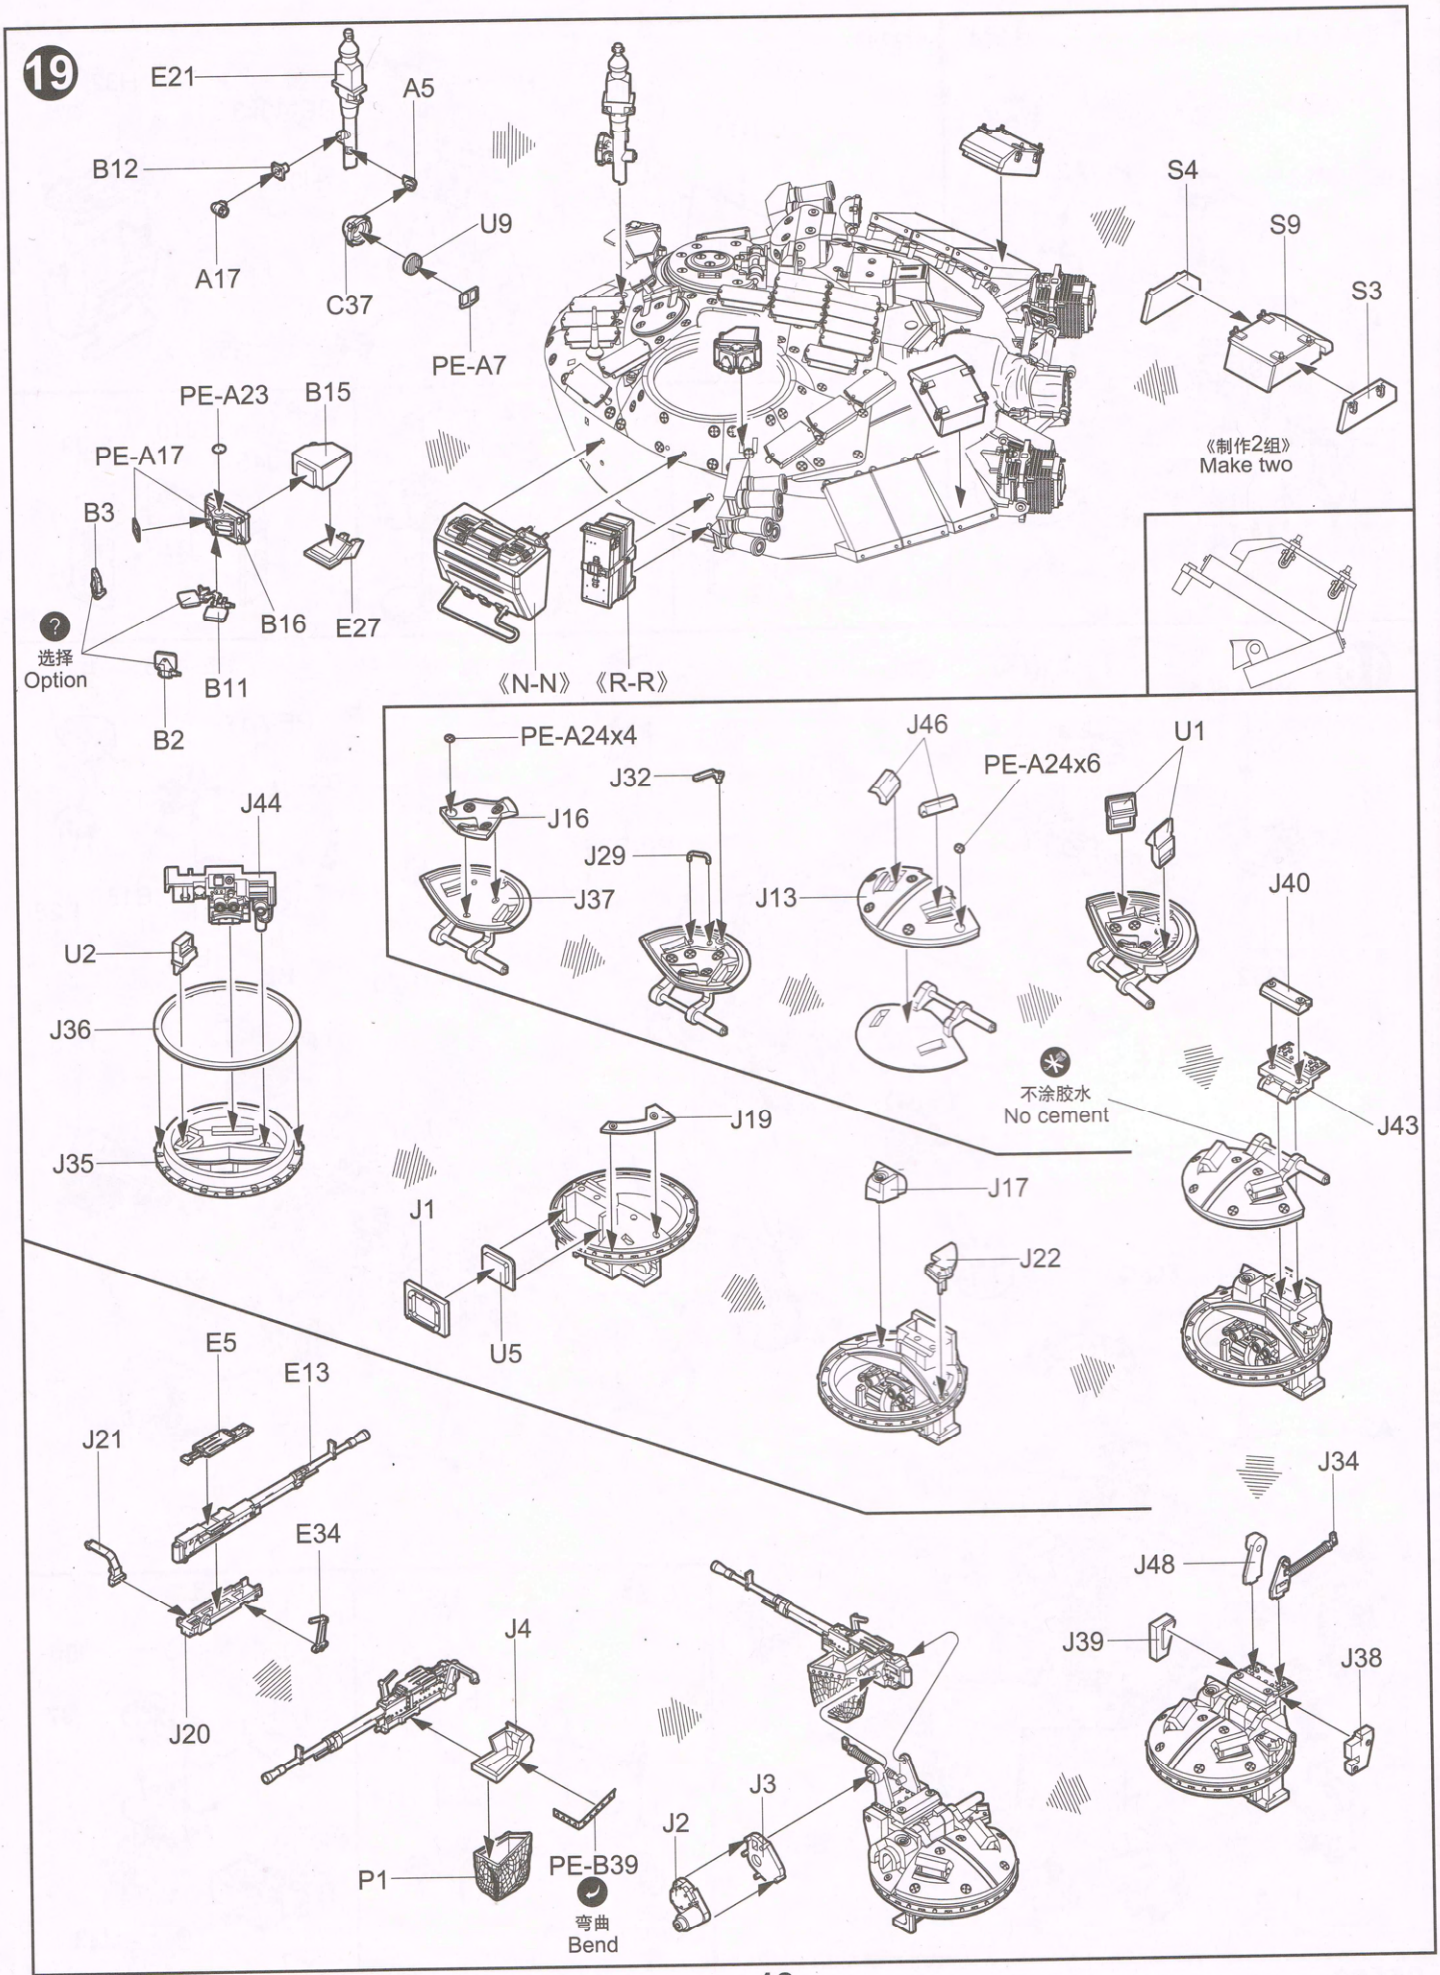
19
E21
A5
B12
U9
A17
C37
PE-A7
PE-A23
B15
PE-A17
B3
B16
E27
选择
Option
B11
B2
《N-N》
《R-R》
S4
S9
S3
《制作2组》
Make two
PE-A24x4
J32
J16
J29
J37
J46
PE-A24x6
J13
U1
J40
J44
U2
J36
J35
不涂胶水
No cement
J43
J19
J1
U5
J17
J22
E5
E13
J21
E34
J20
J4
P1
PE-B39
弯曲
Bend
J3
J2
J34
J48
J39
J38

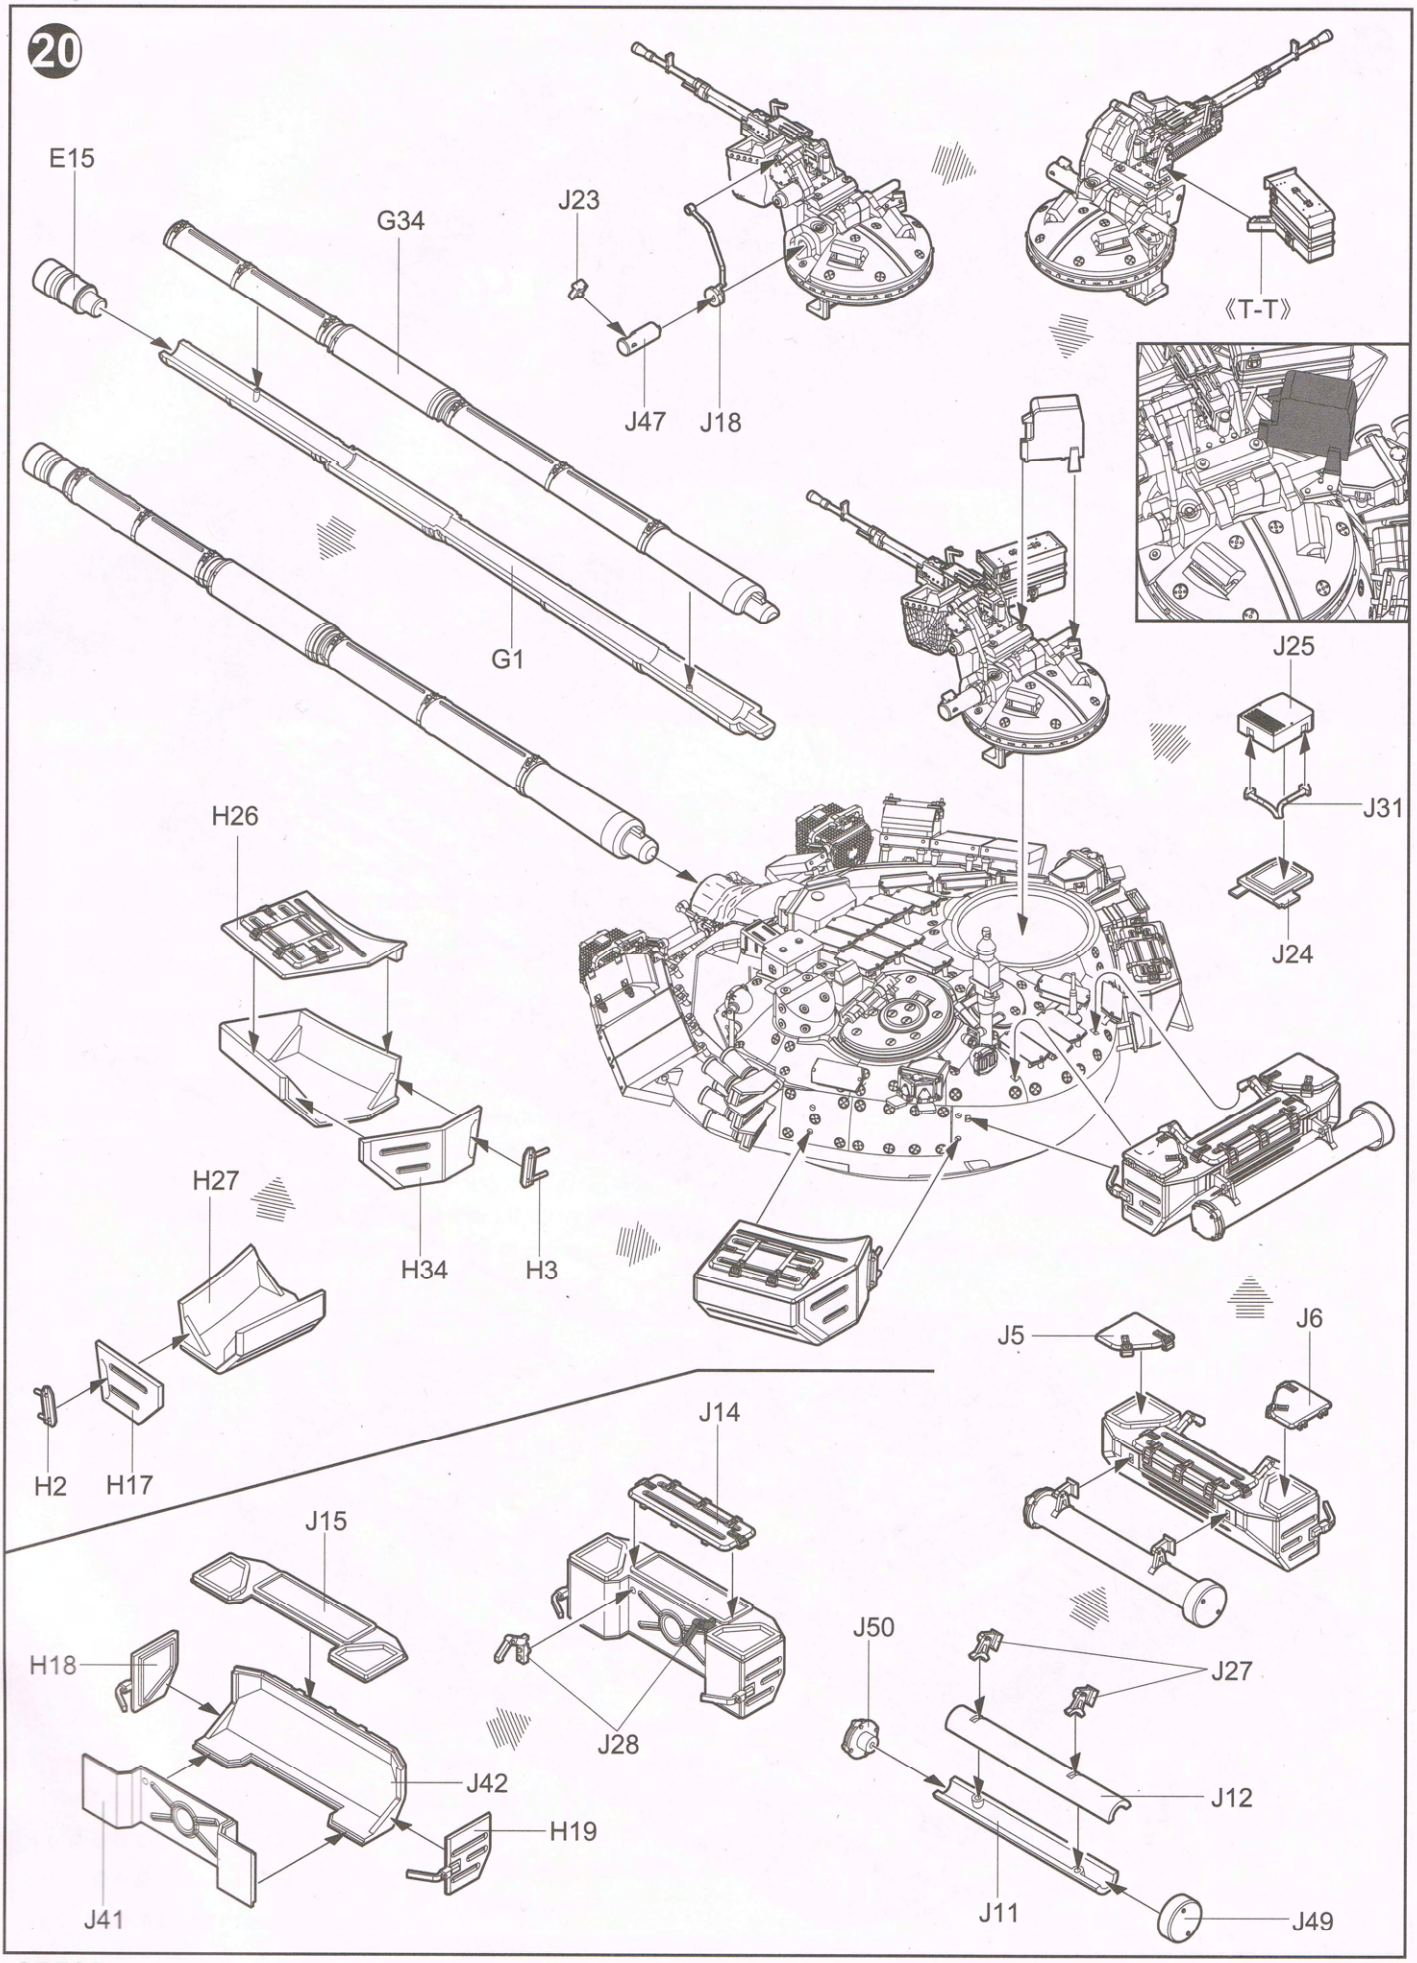
20
E15
G34
J23
J47
J18
《T-T》
G1
J25
J31
J24
H26
H27
H34
H3
H2
H17
J5
J6
J14
J15
H18
J28
J42
H19
J41
J50
J27
J12
J11
J49

21

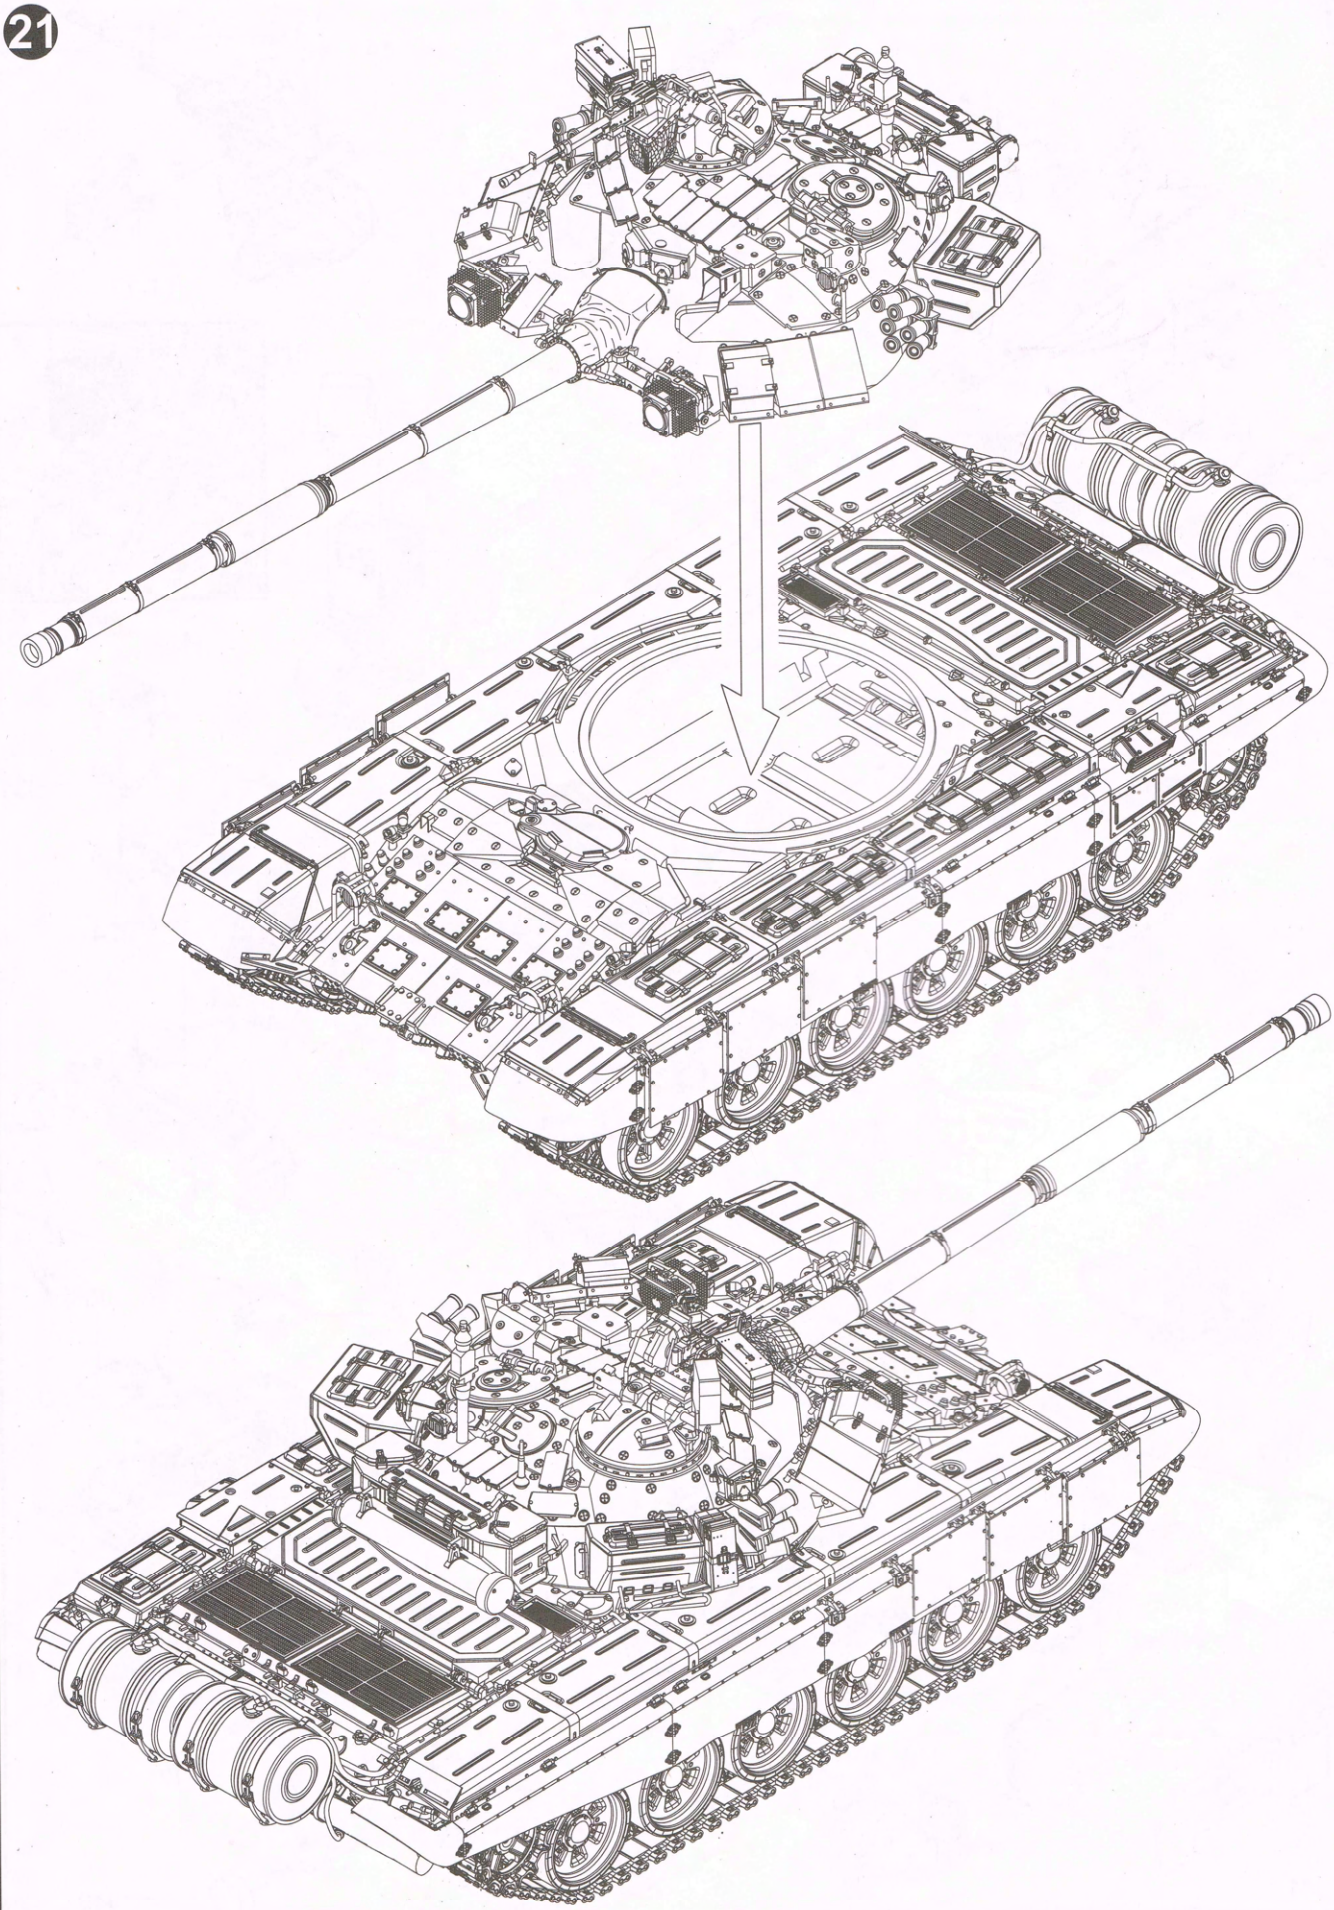

涂装同标贴指示
Painting & Marking guide

A

PAINT REFERENCE COLOUR

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
Light Green 绿色	H 303 303	–	1713	XF20	117
Yellow 黄色	H 313 313	819	1706	–	121
Wood Brown 木棕色	H 37 43	983	1701	–	186
Tire Black 胎黑色	H 77 137	–	–	–	–
Metal Black 黑铁色	H 18 28	864	1402	–	–



H☒ AQUEOUS HOBBY COLOR ■ Mr. COLOR


05560 1/35 Russian T-90 MBT – Cast Turret Ⓐ


涂装同标贴指示
Painting & Marking guide


B


PAINT REFERENCE COLOUR

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
Light Green 绿色	H 303 303	–	1713	XF20	117
Yellow 黄色	H 313 313	819	1706	–	121
Tire Black 胎黑色	H 77 137	–	–	–	–
Metal Black 黑铁色	H 18 28	864	1402	–	–
Flat Black 哑光黑	H 12 33	950	1749	XF1	33

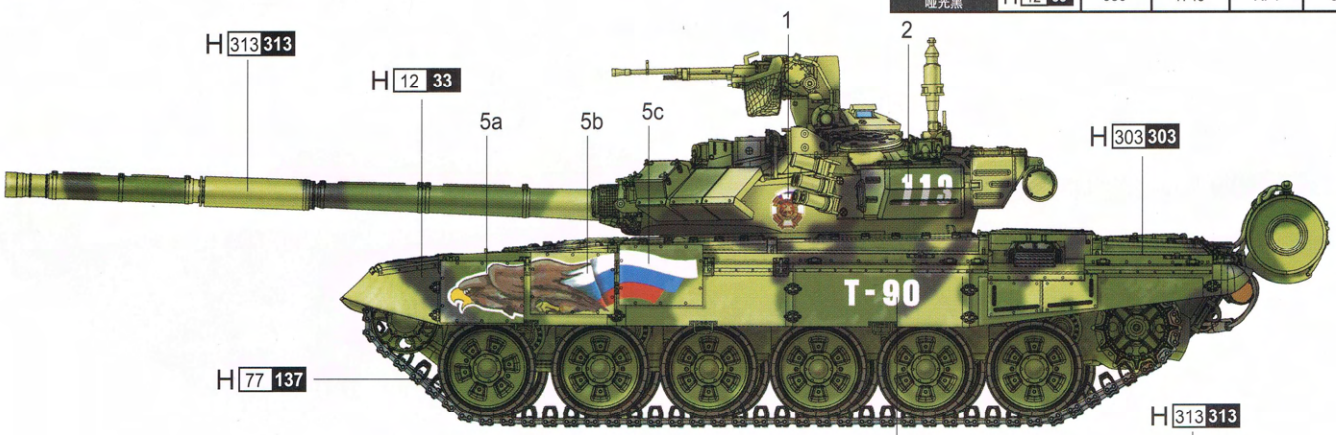

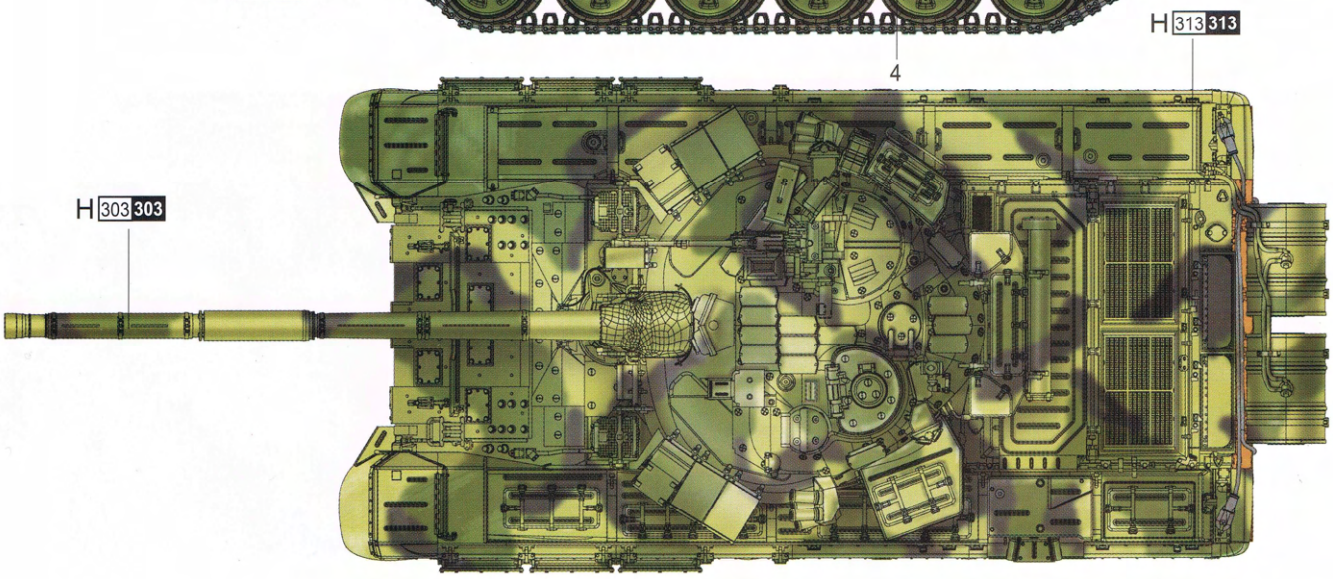

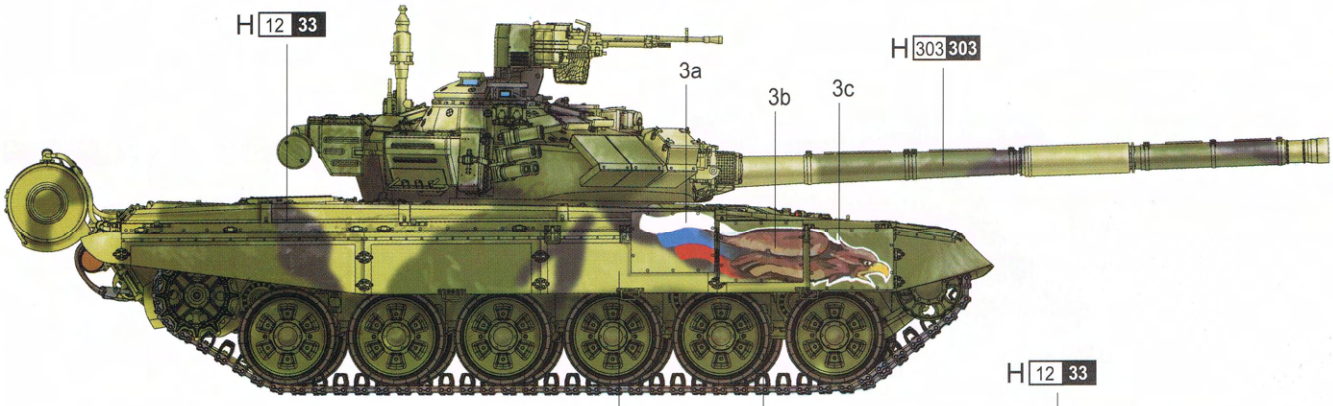

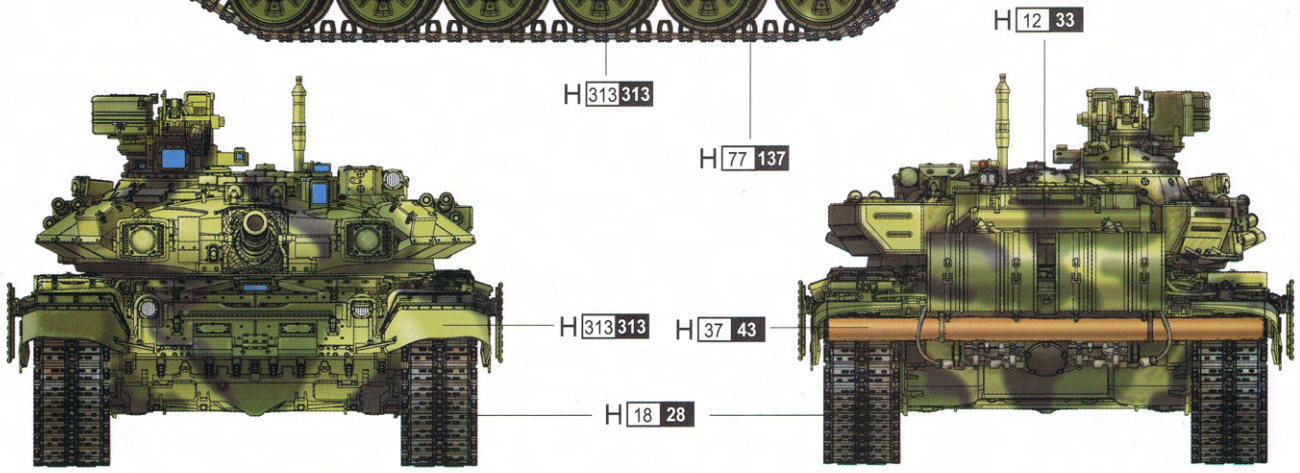

H☒ AQUEOUS HOBBY COLOR ■ Mr. COLOR

05560 1/35 Russian T-90 MBT – Cast Turret Ⓑ