





Lotus 72 CAR02a Instructions

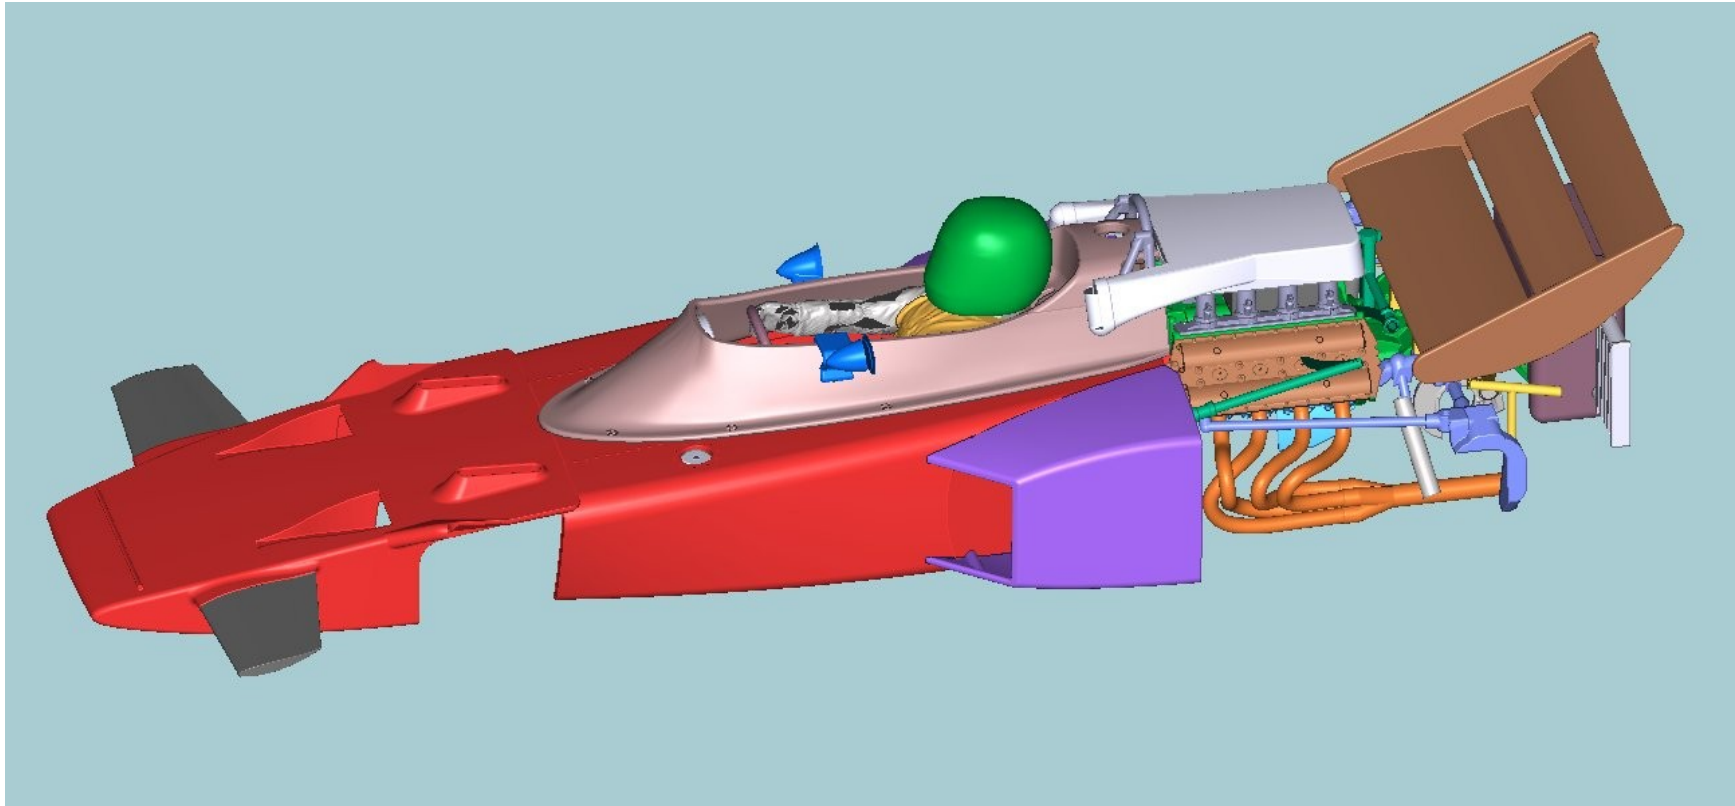


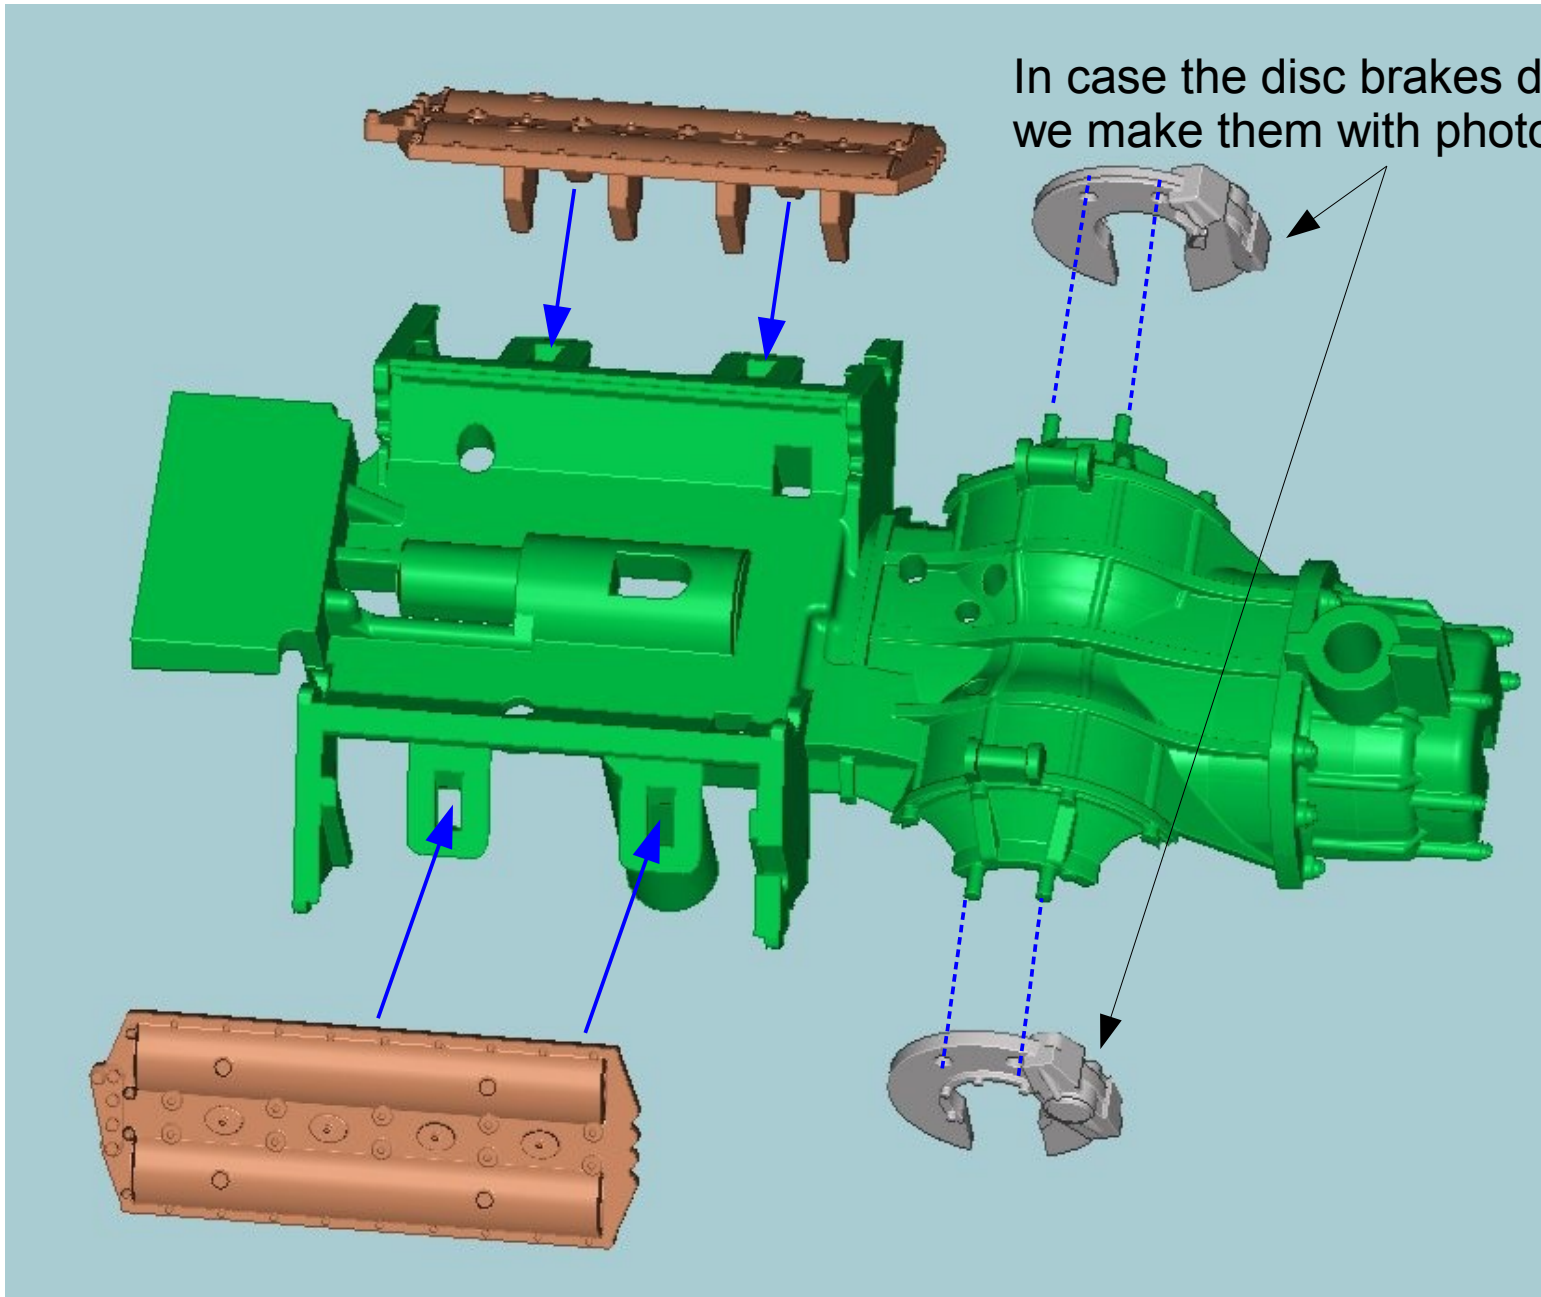


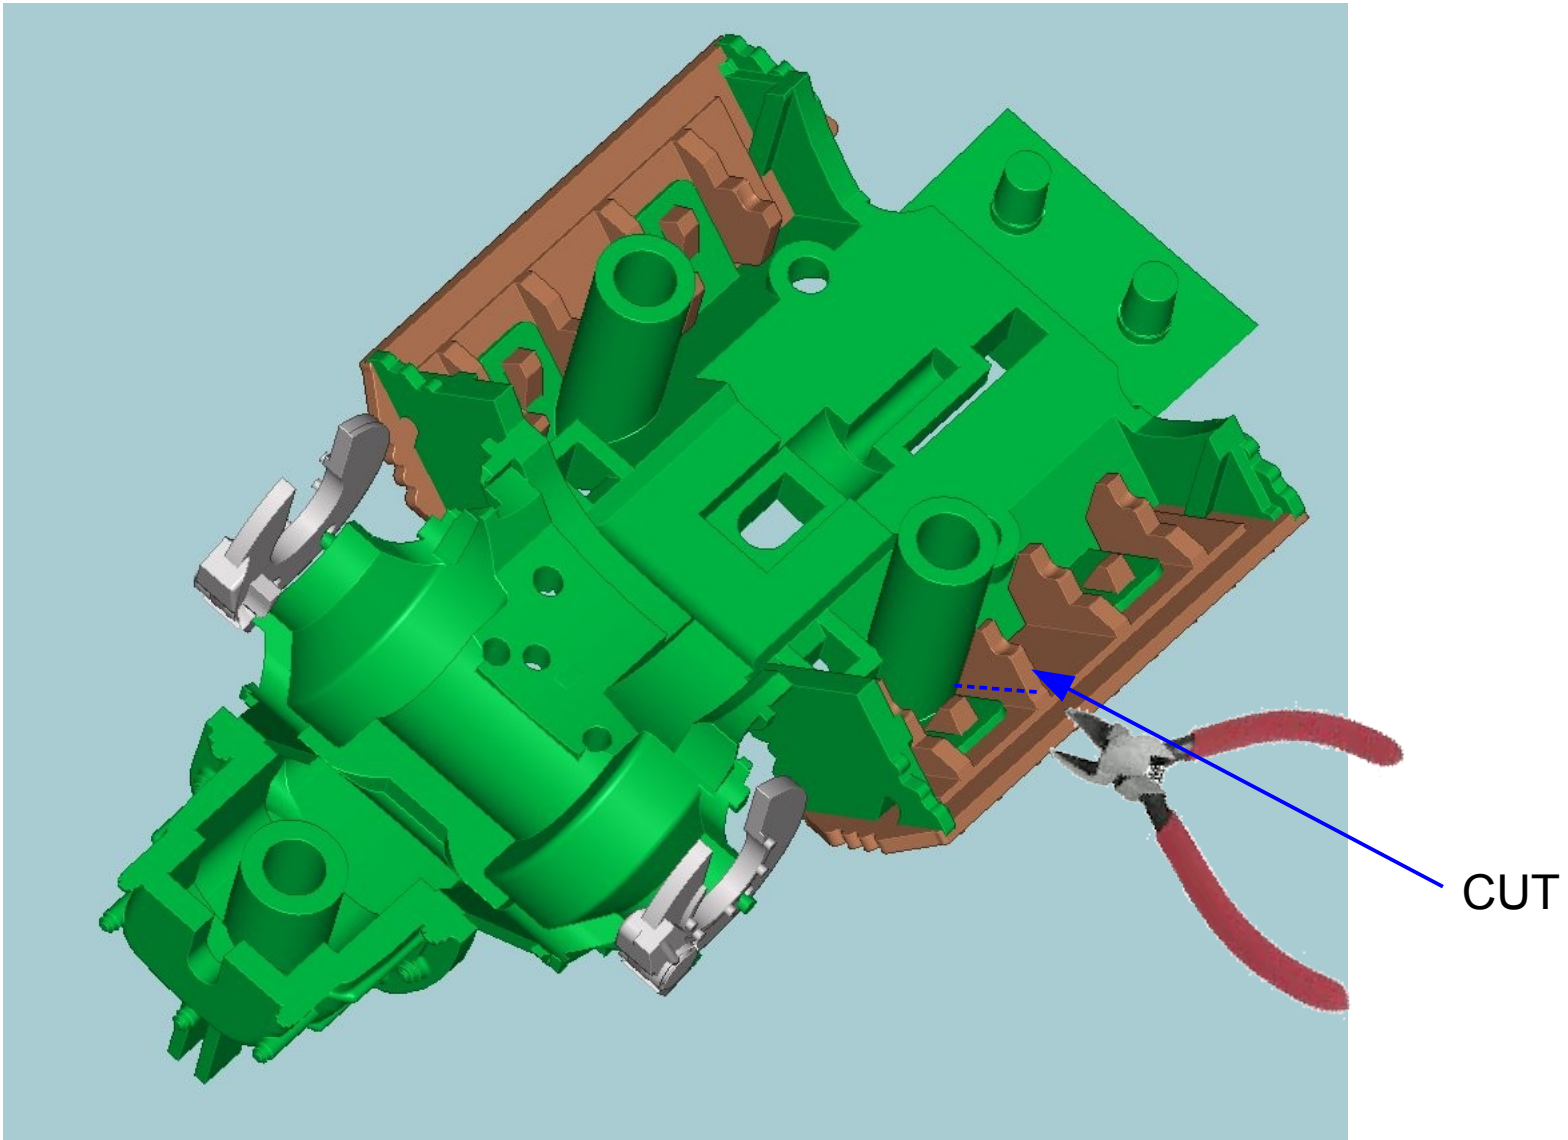


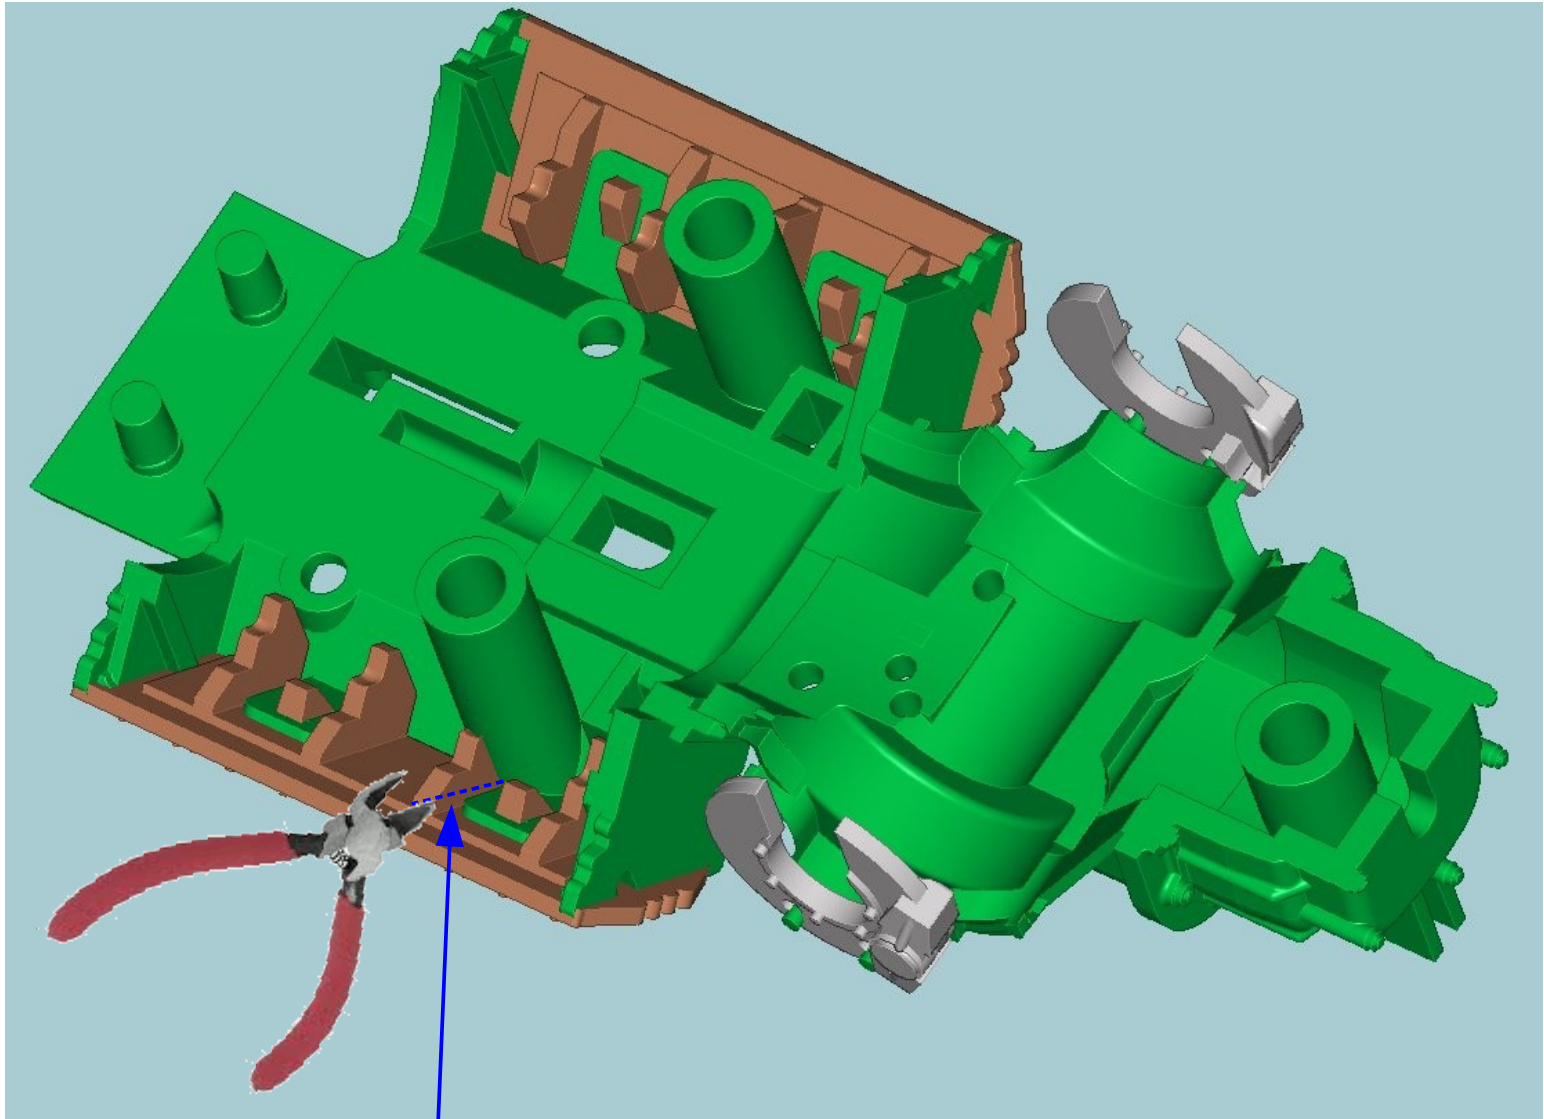



CUT

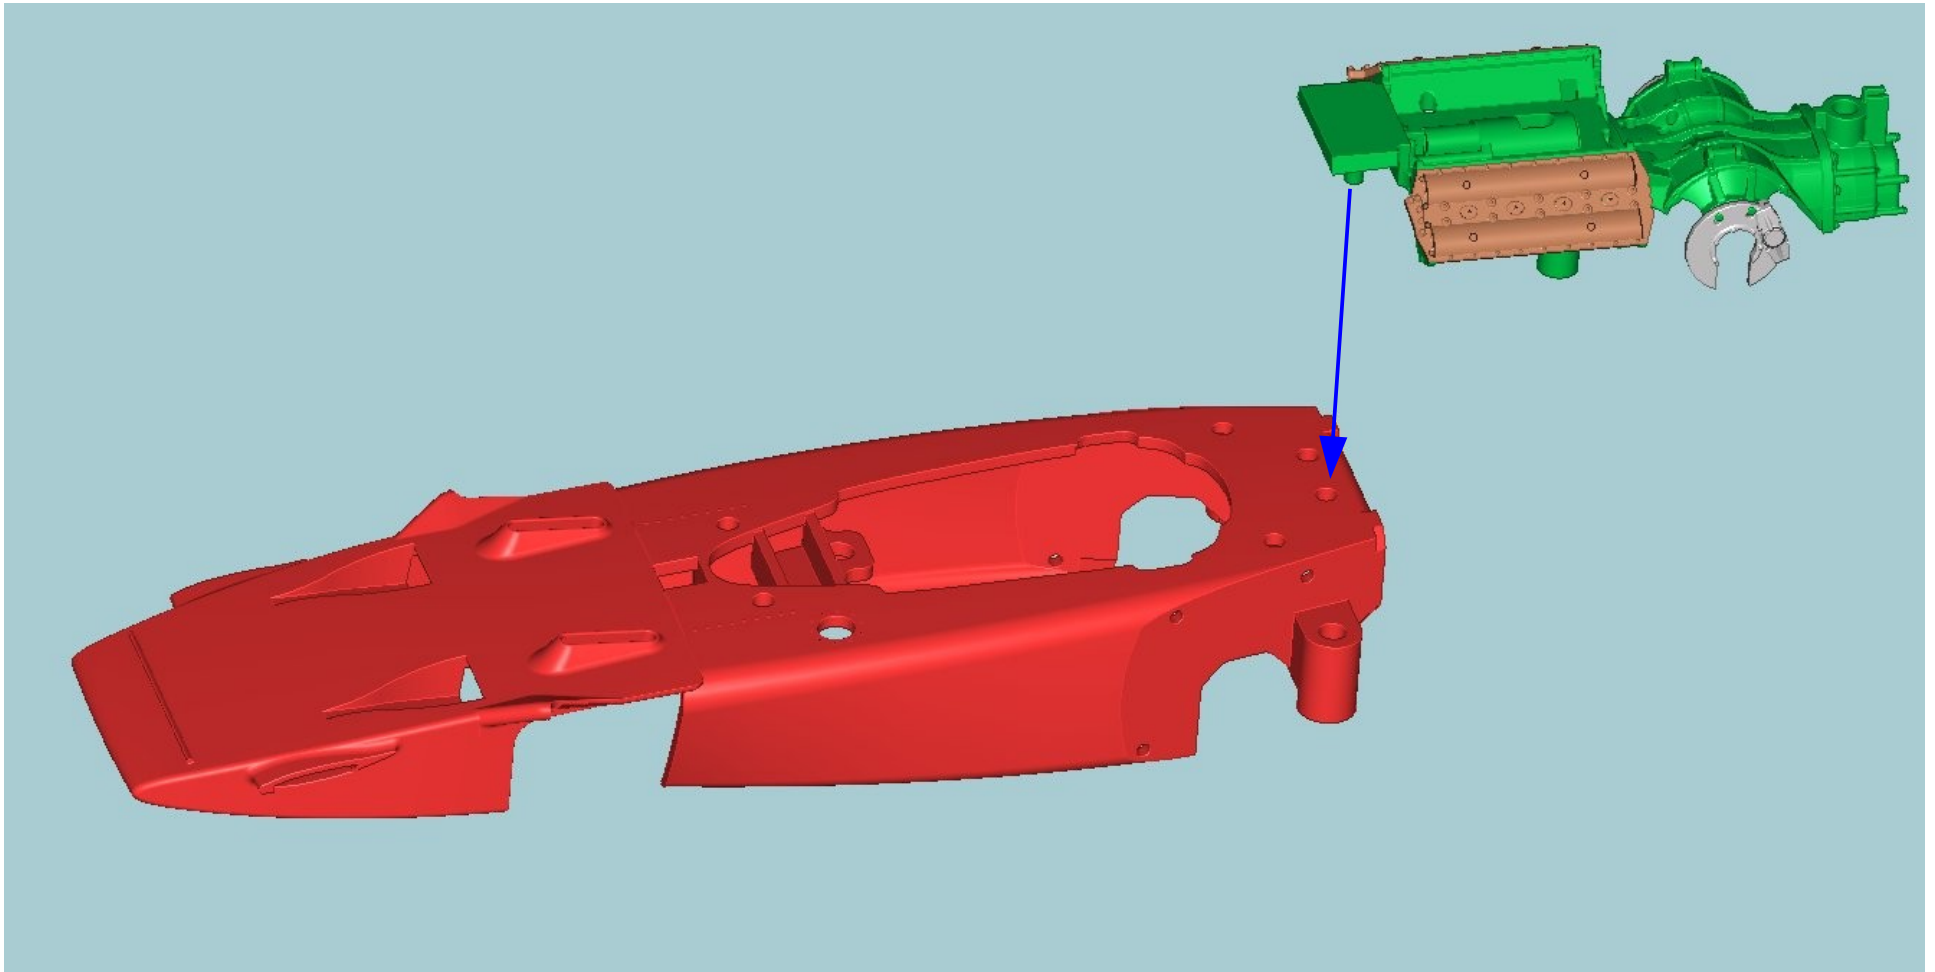


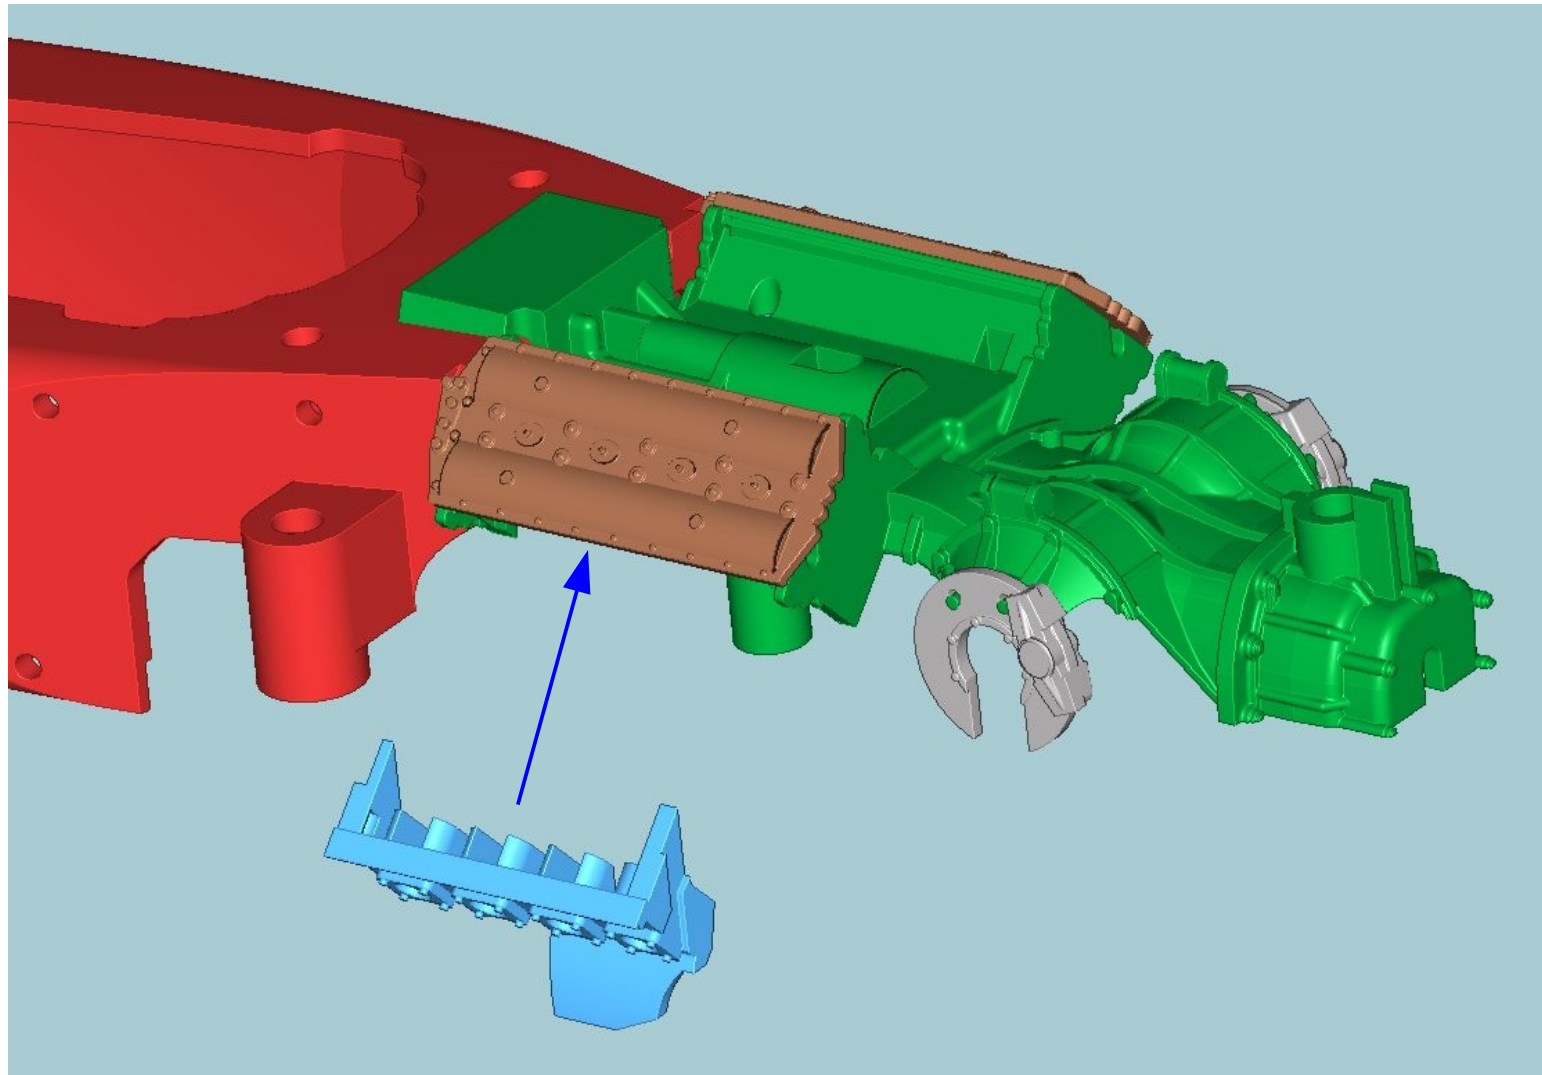


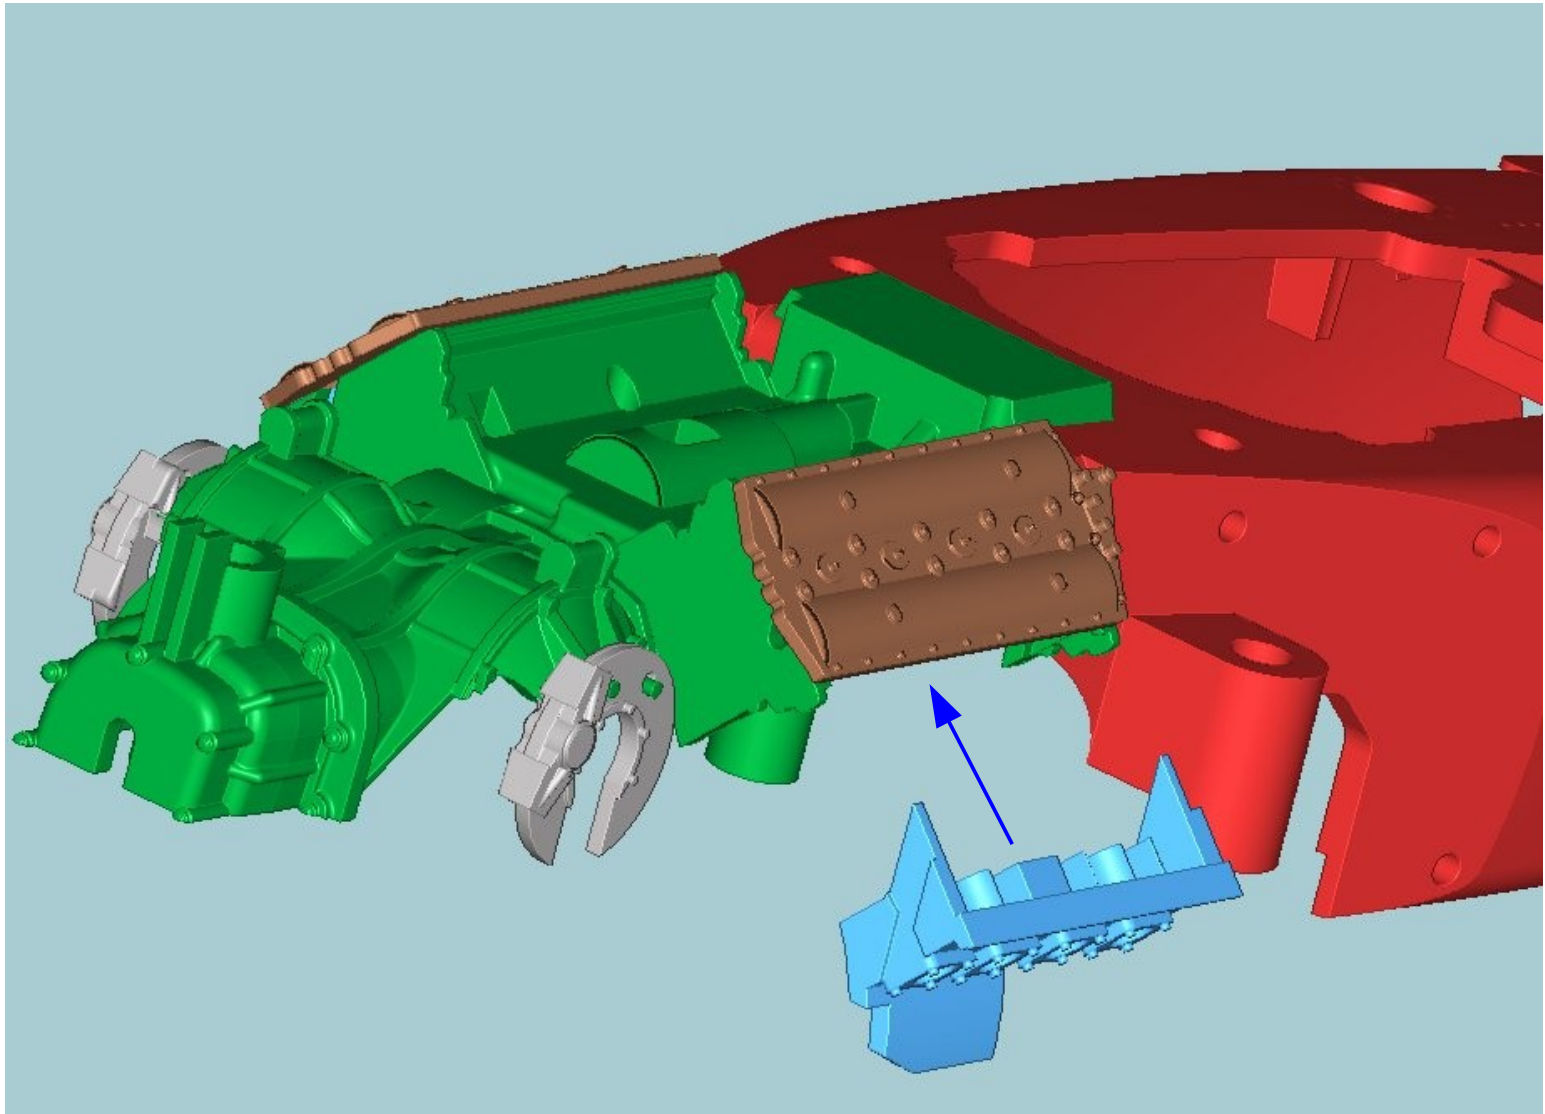



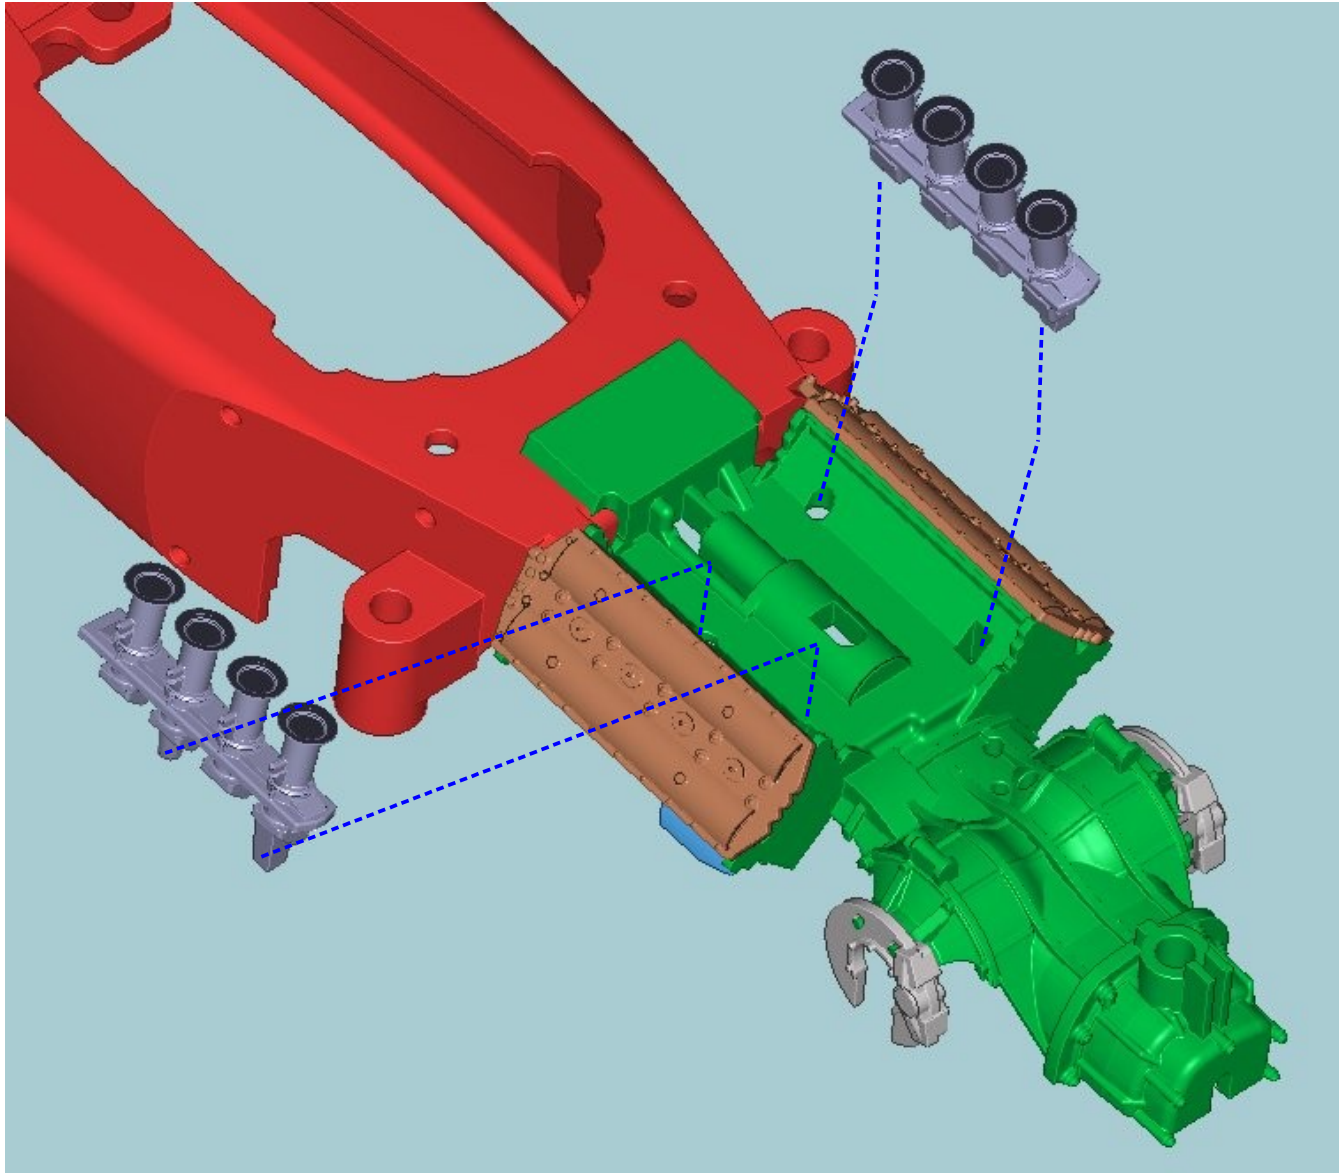


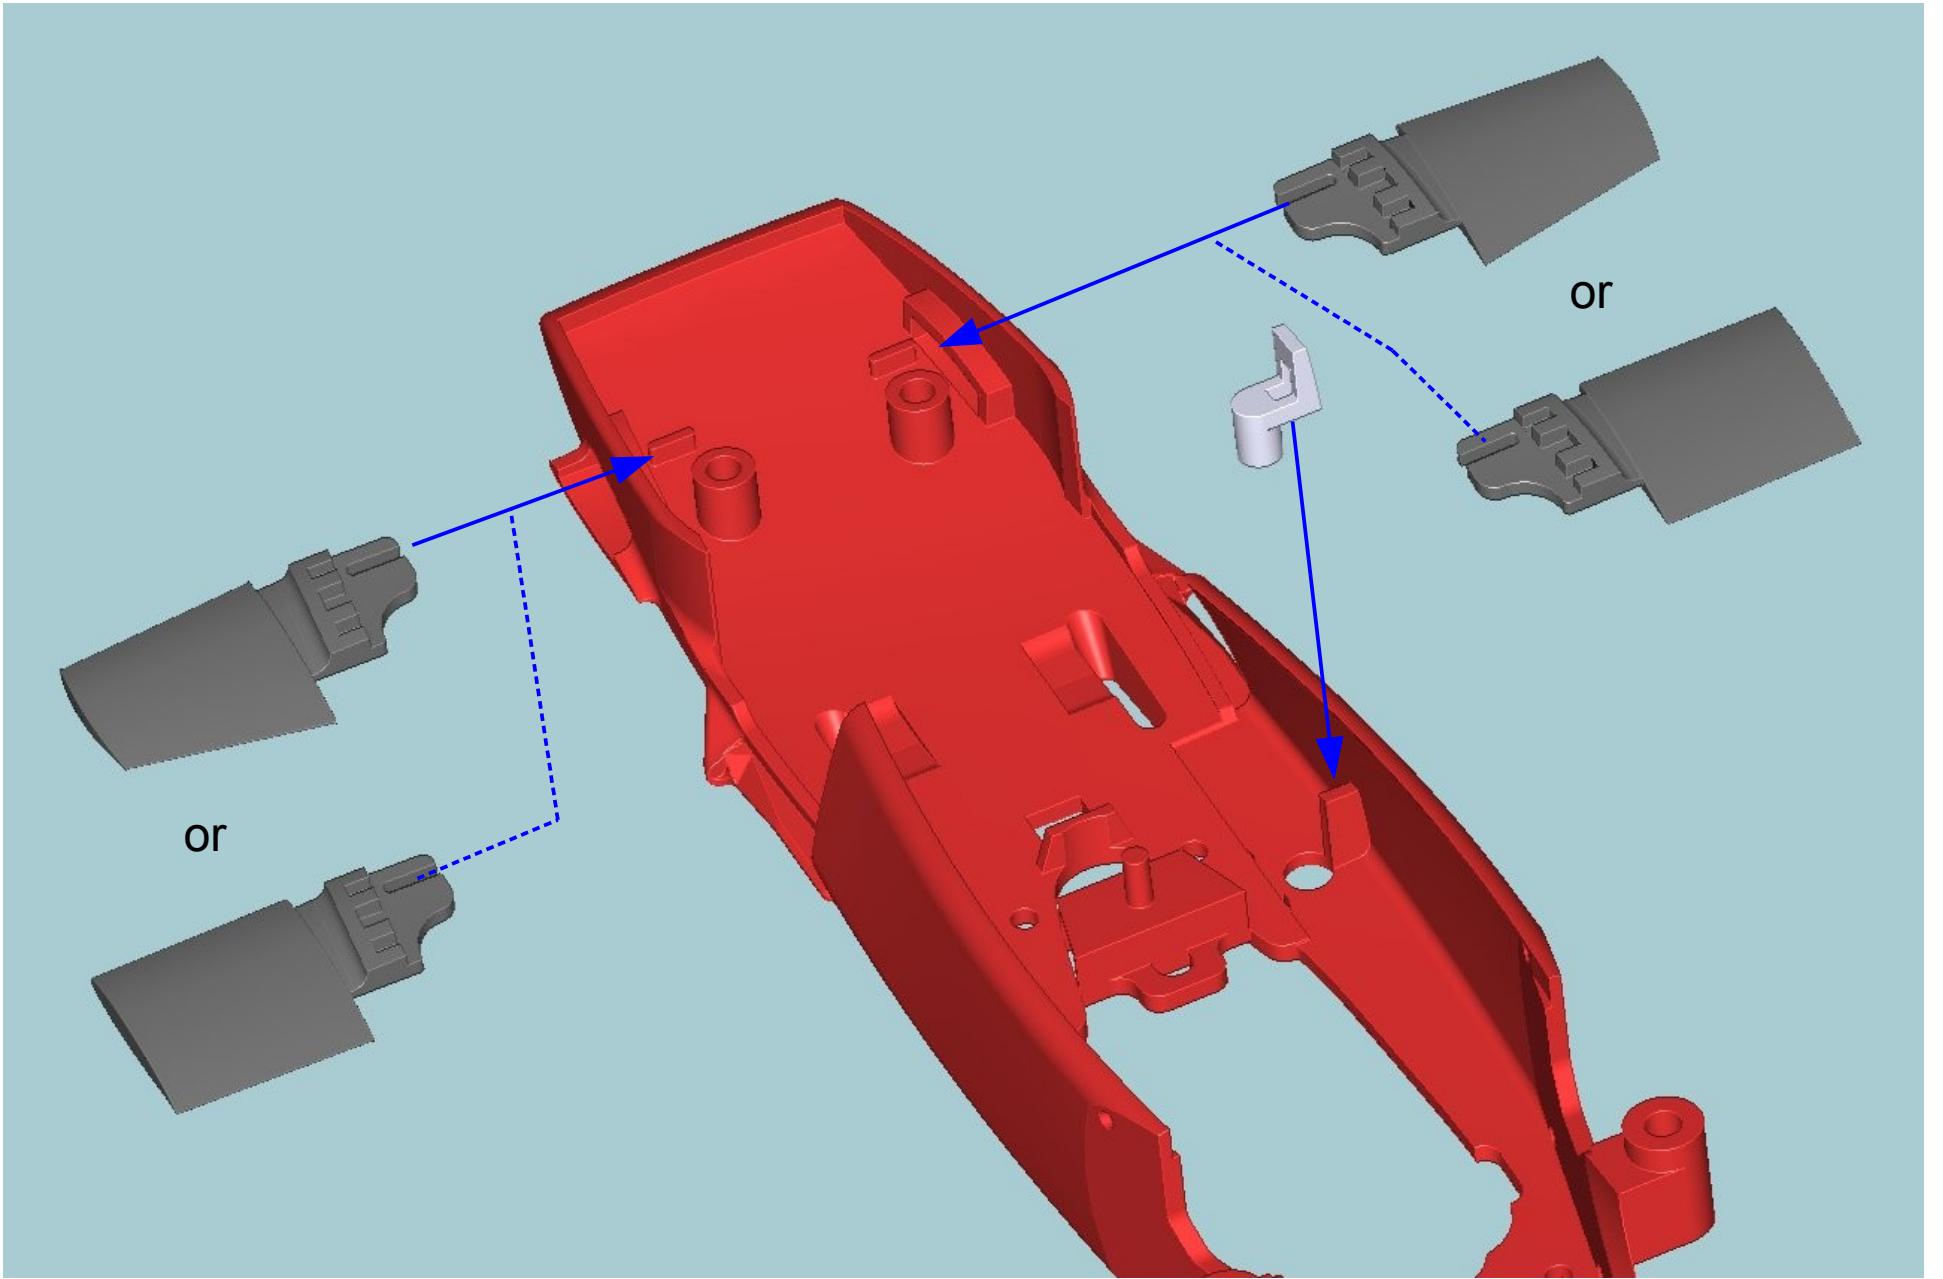


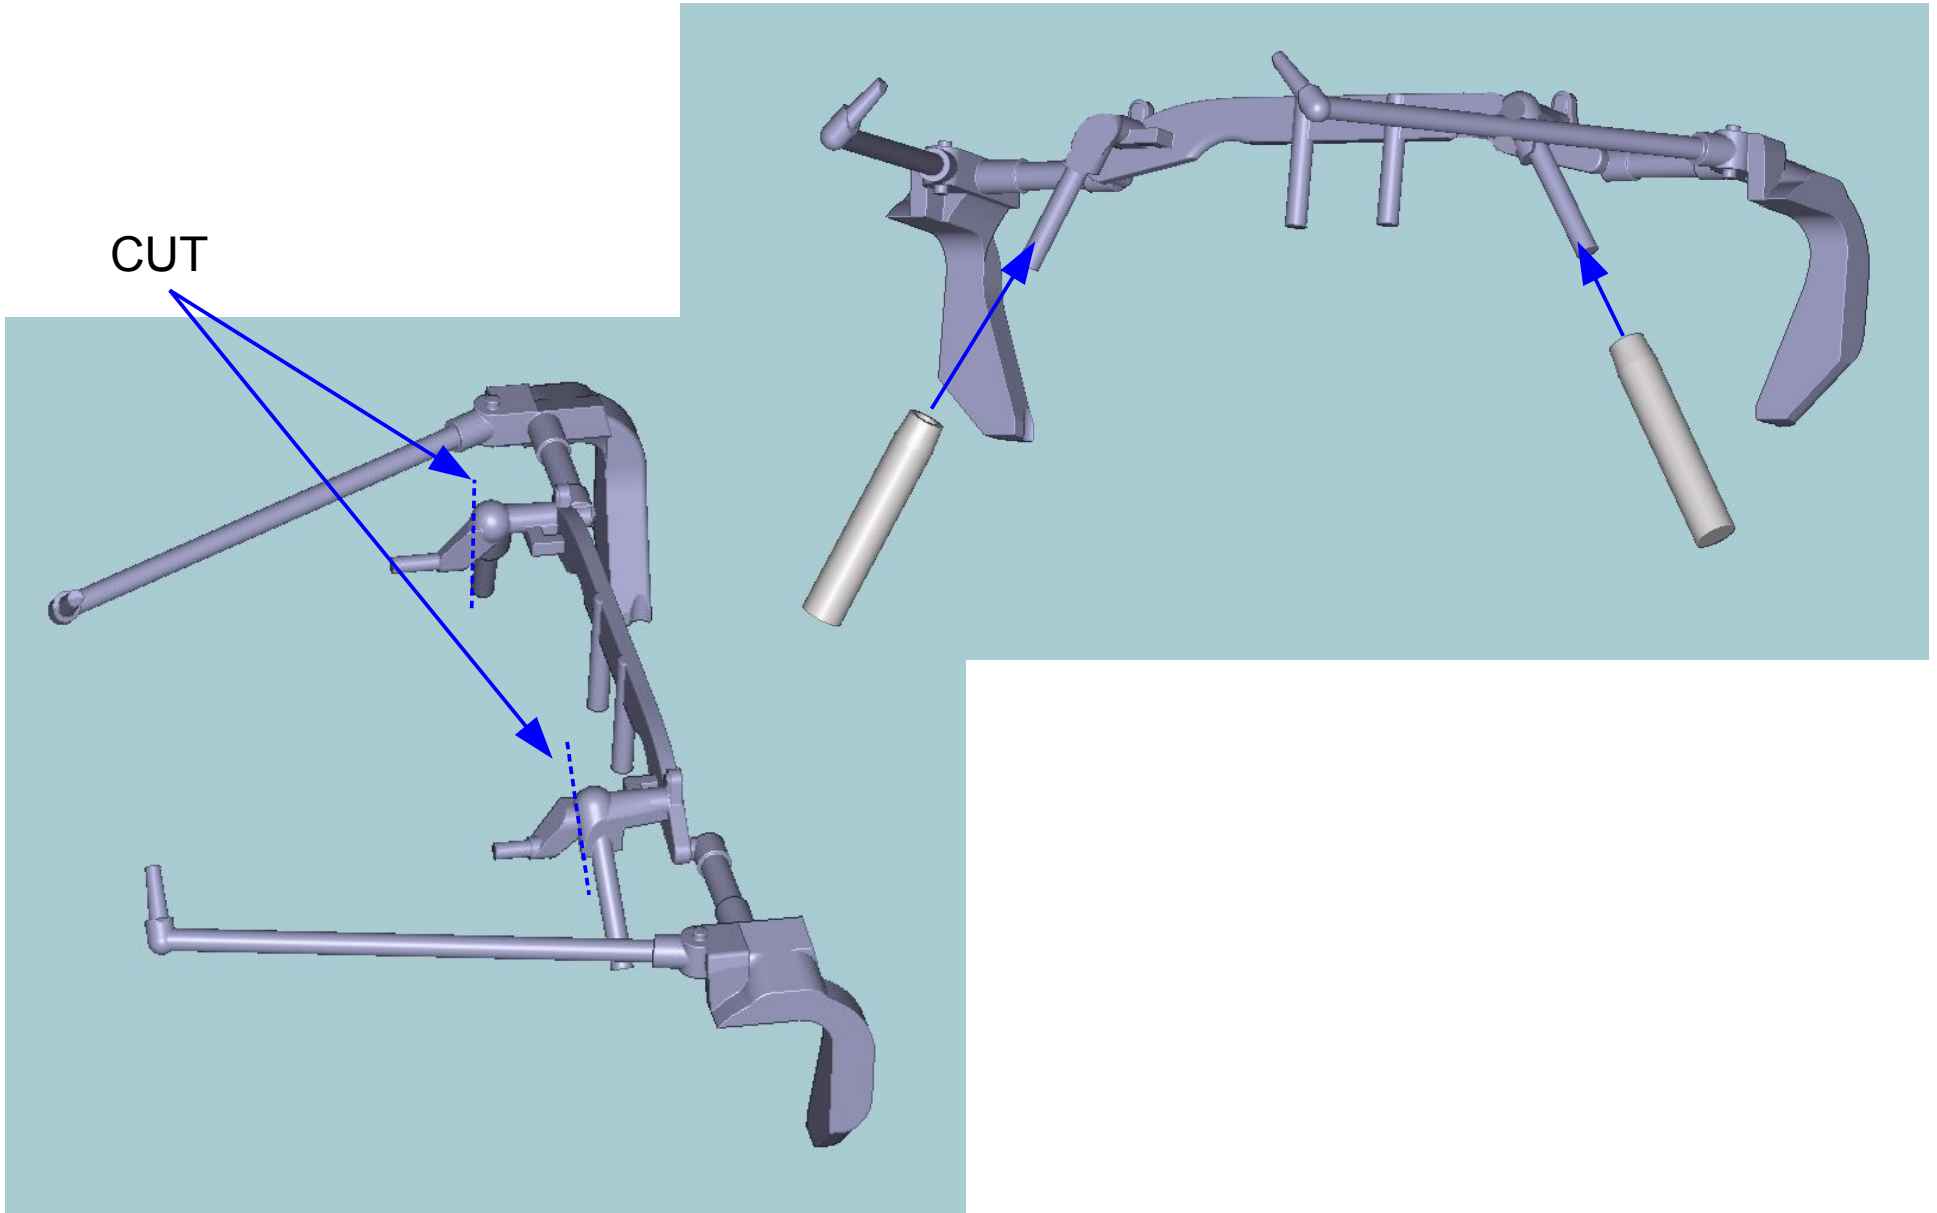


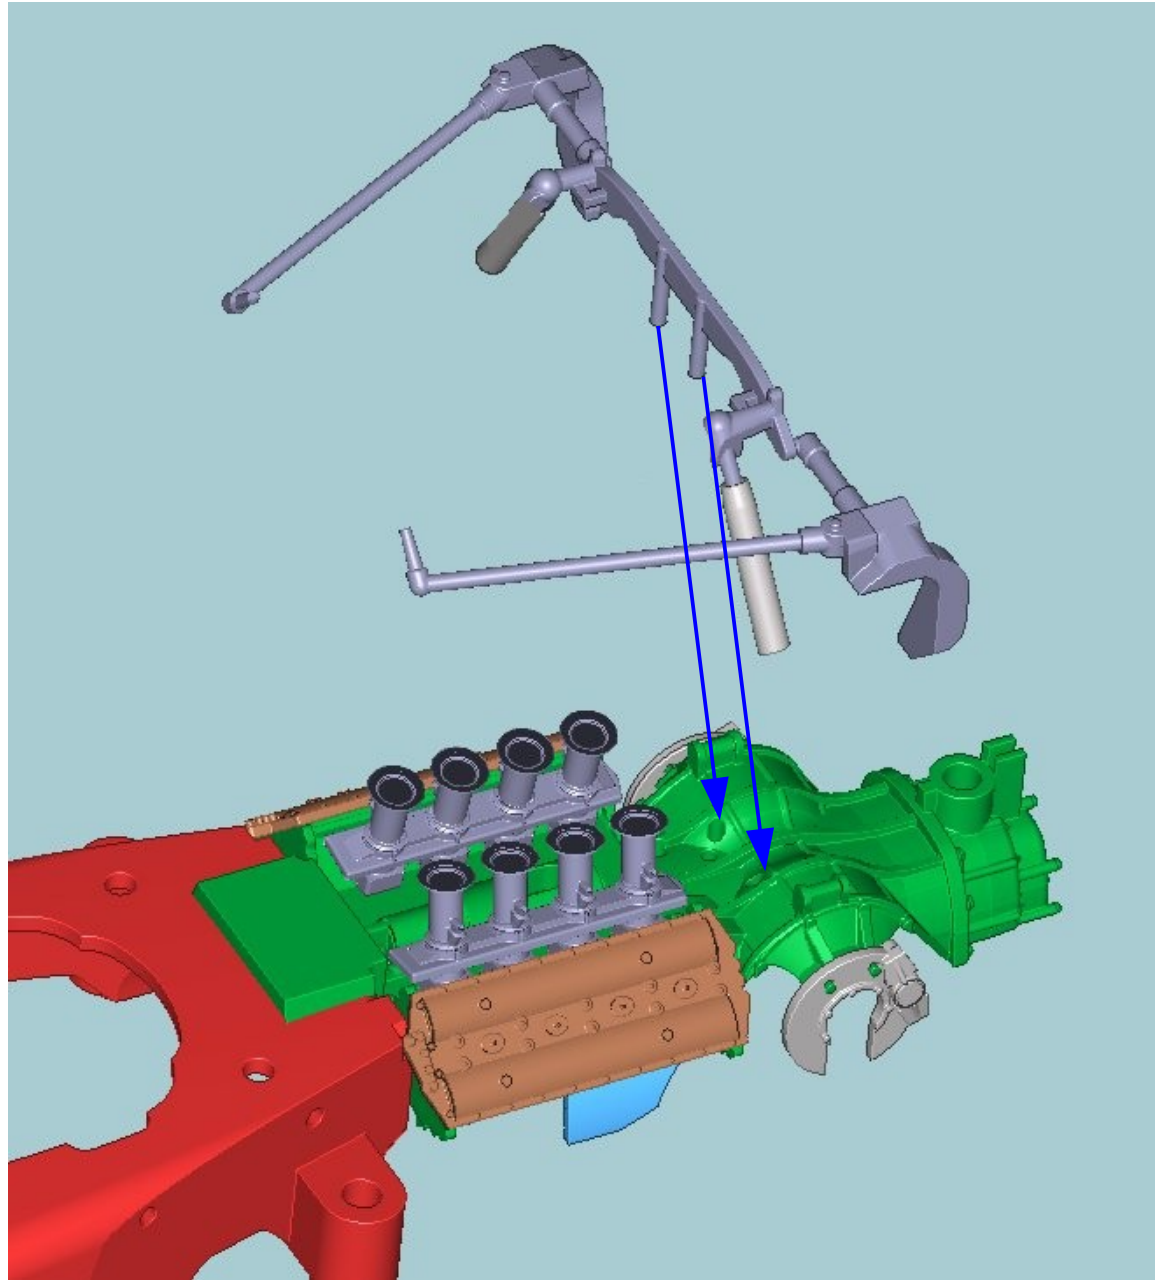


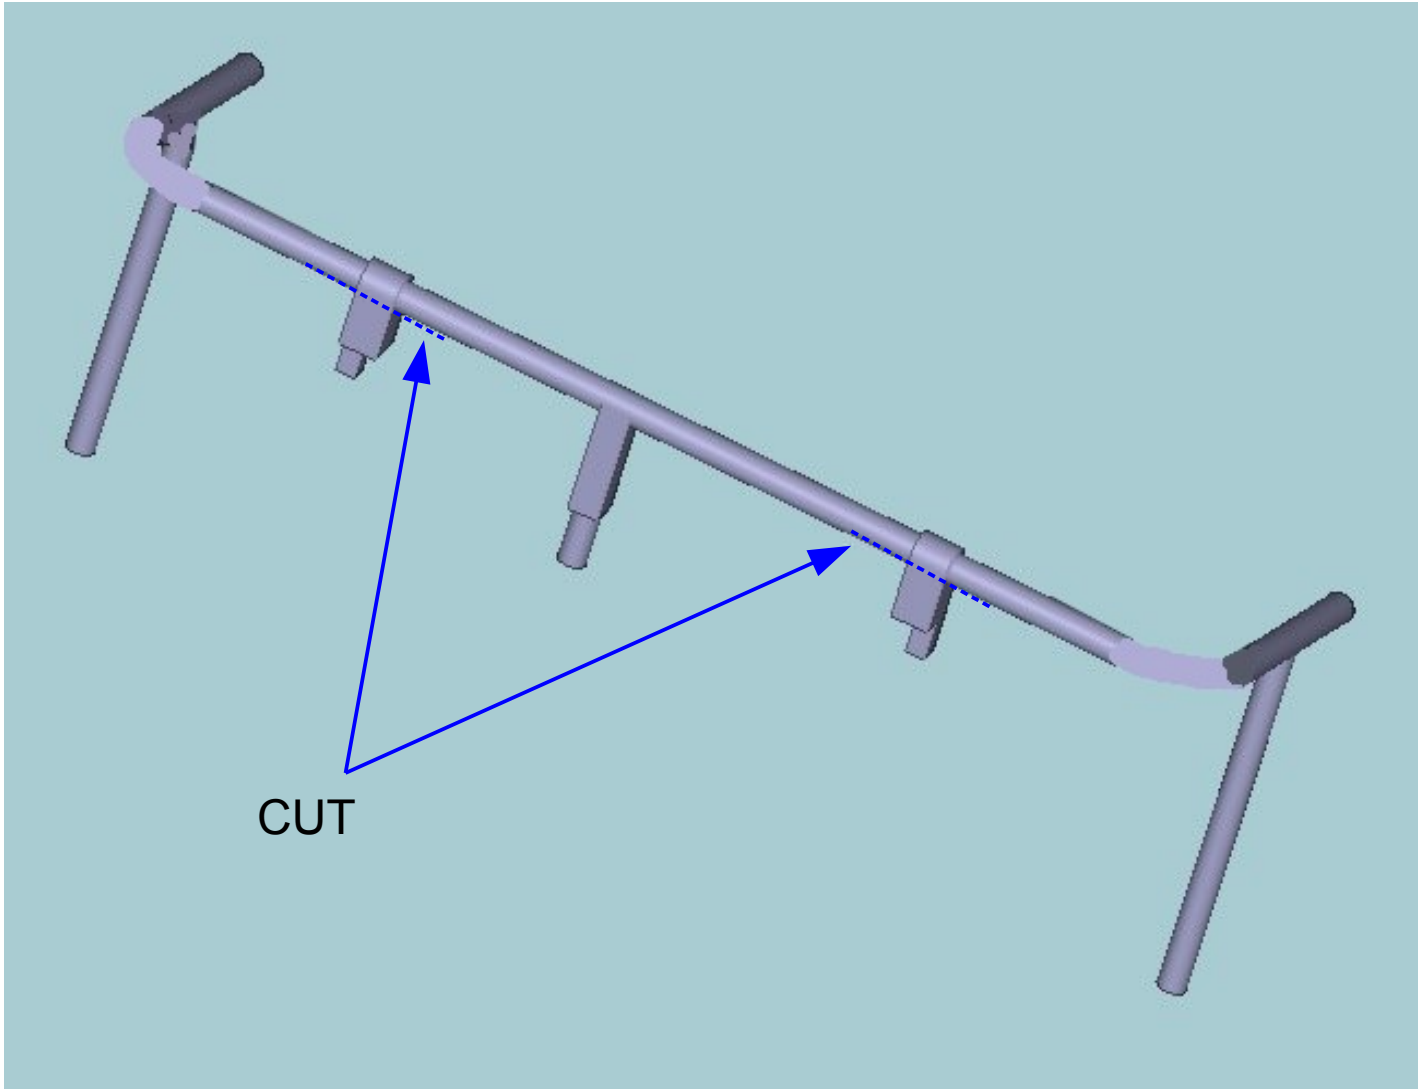


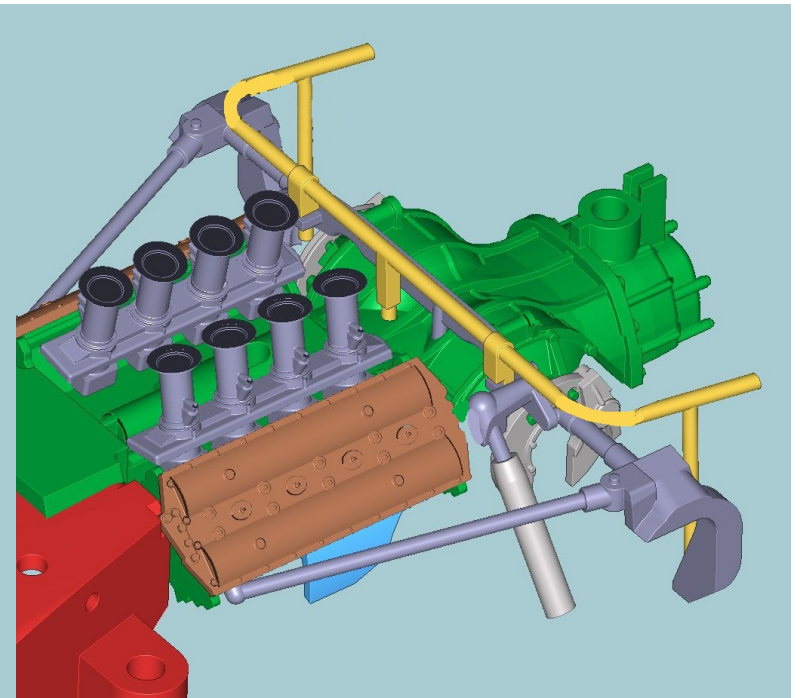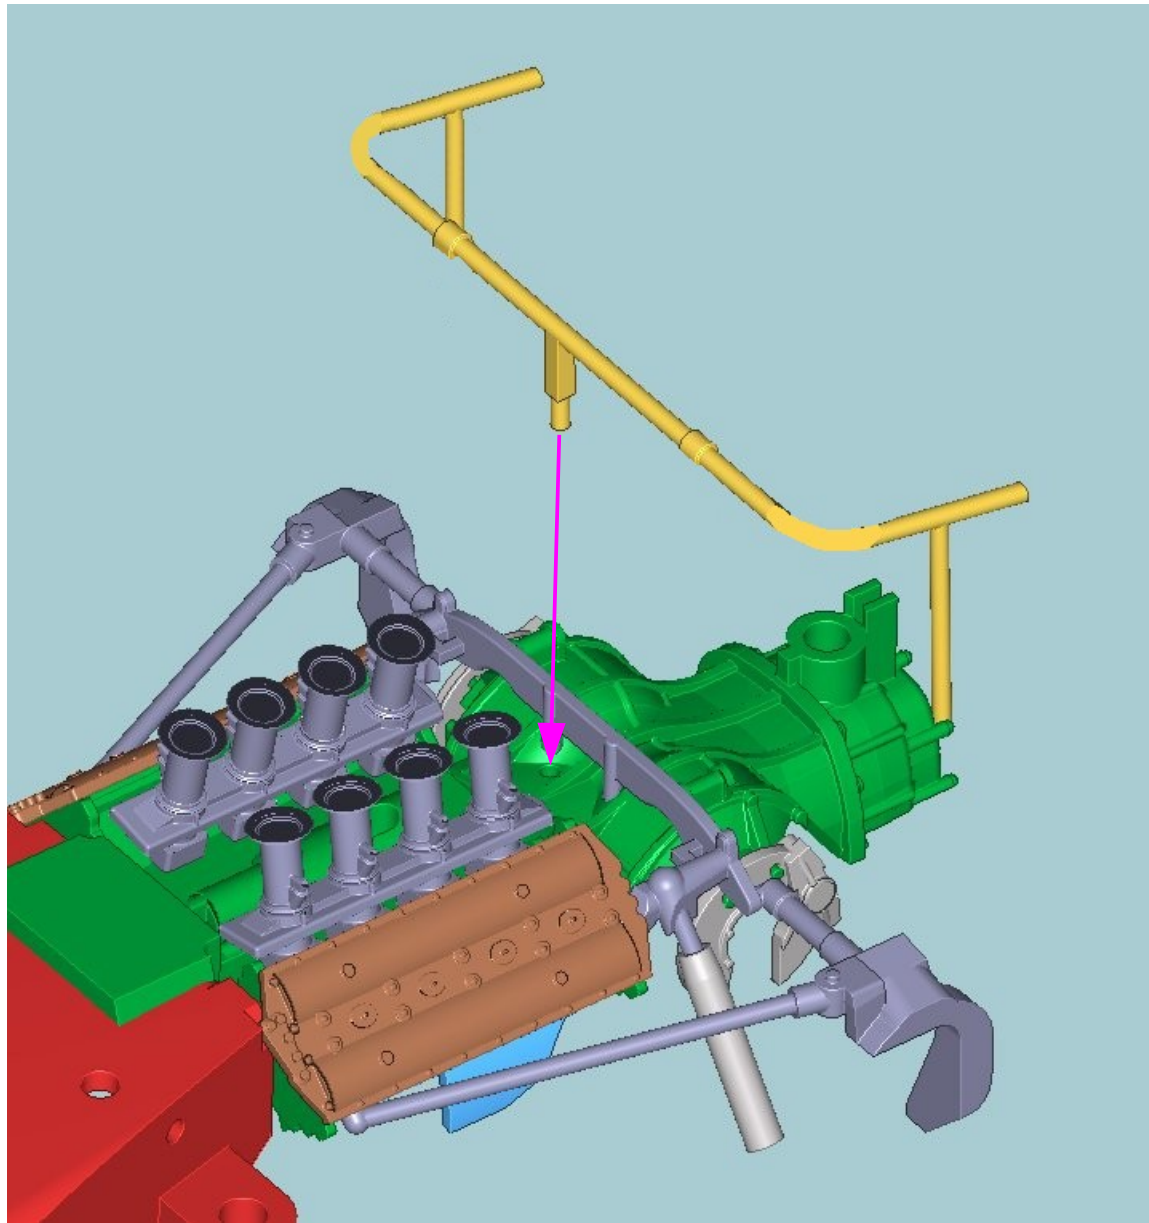

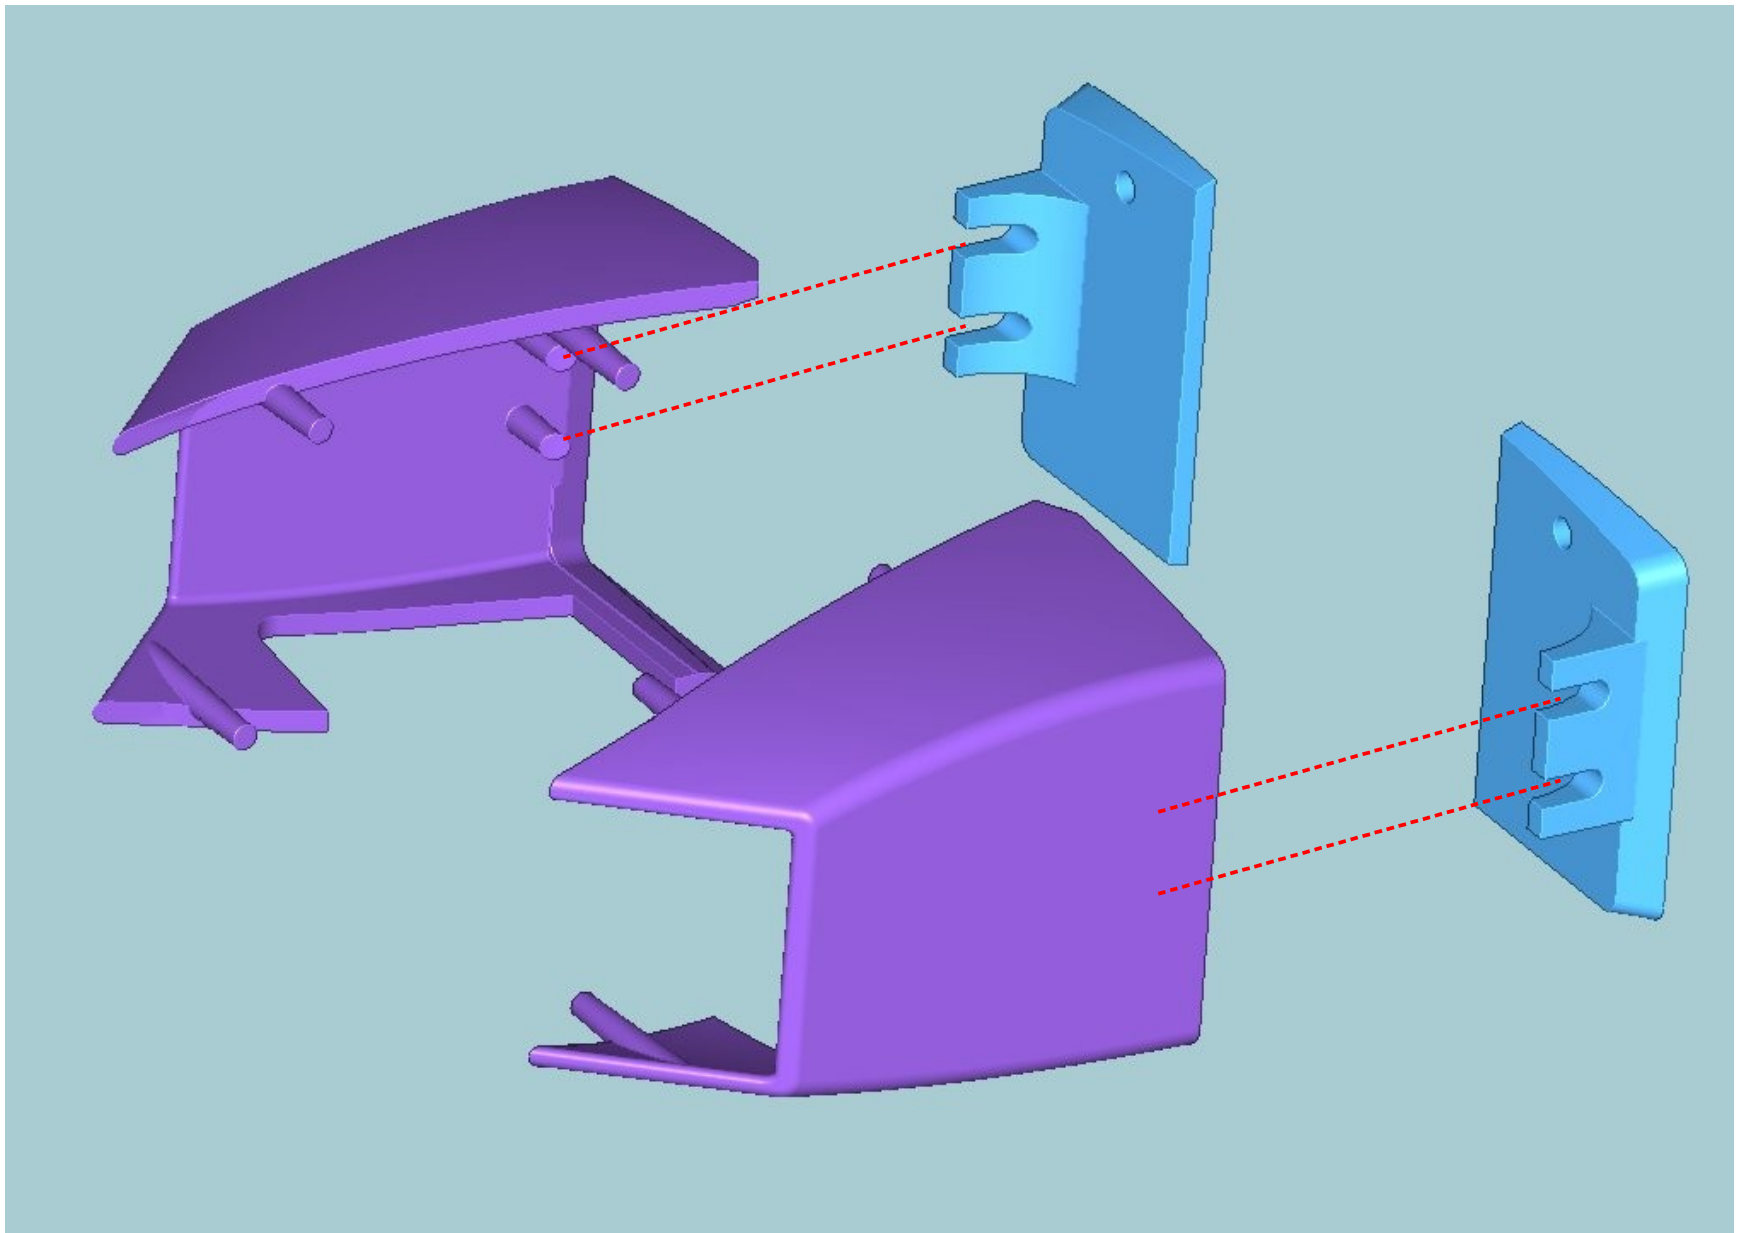

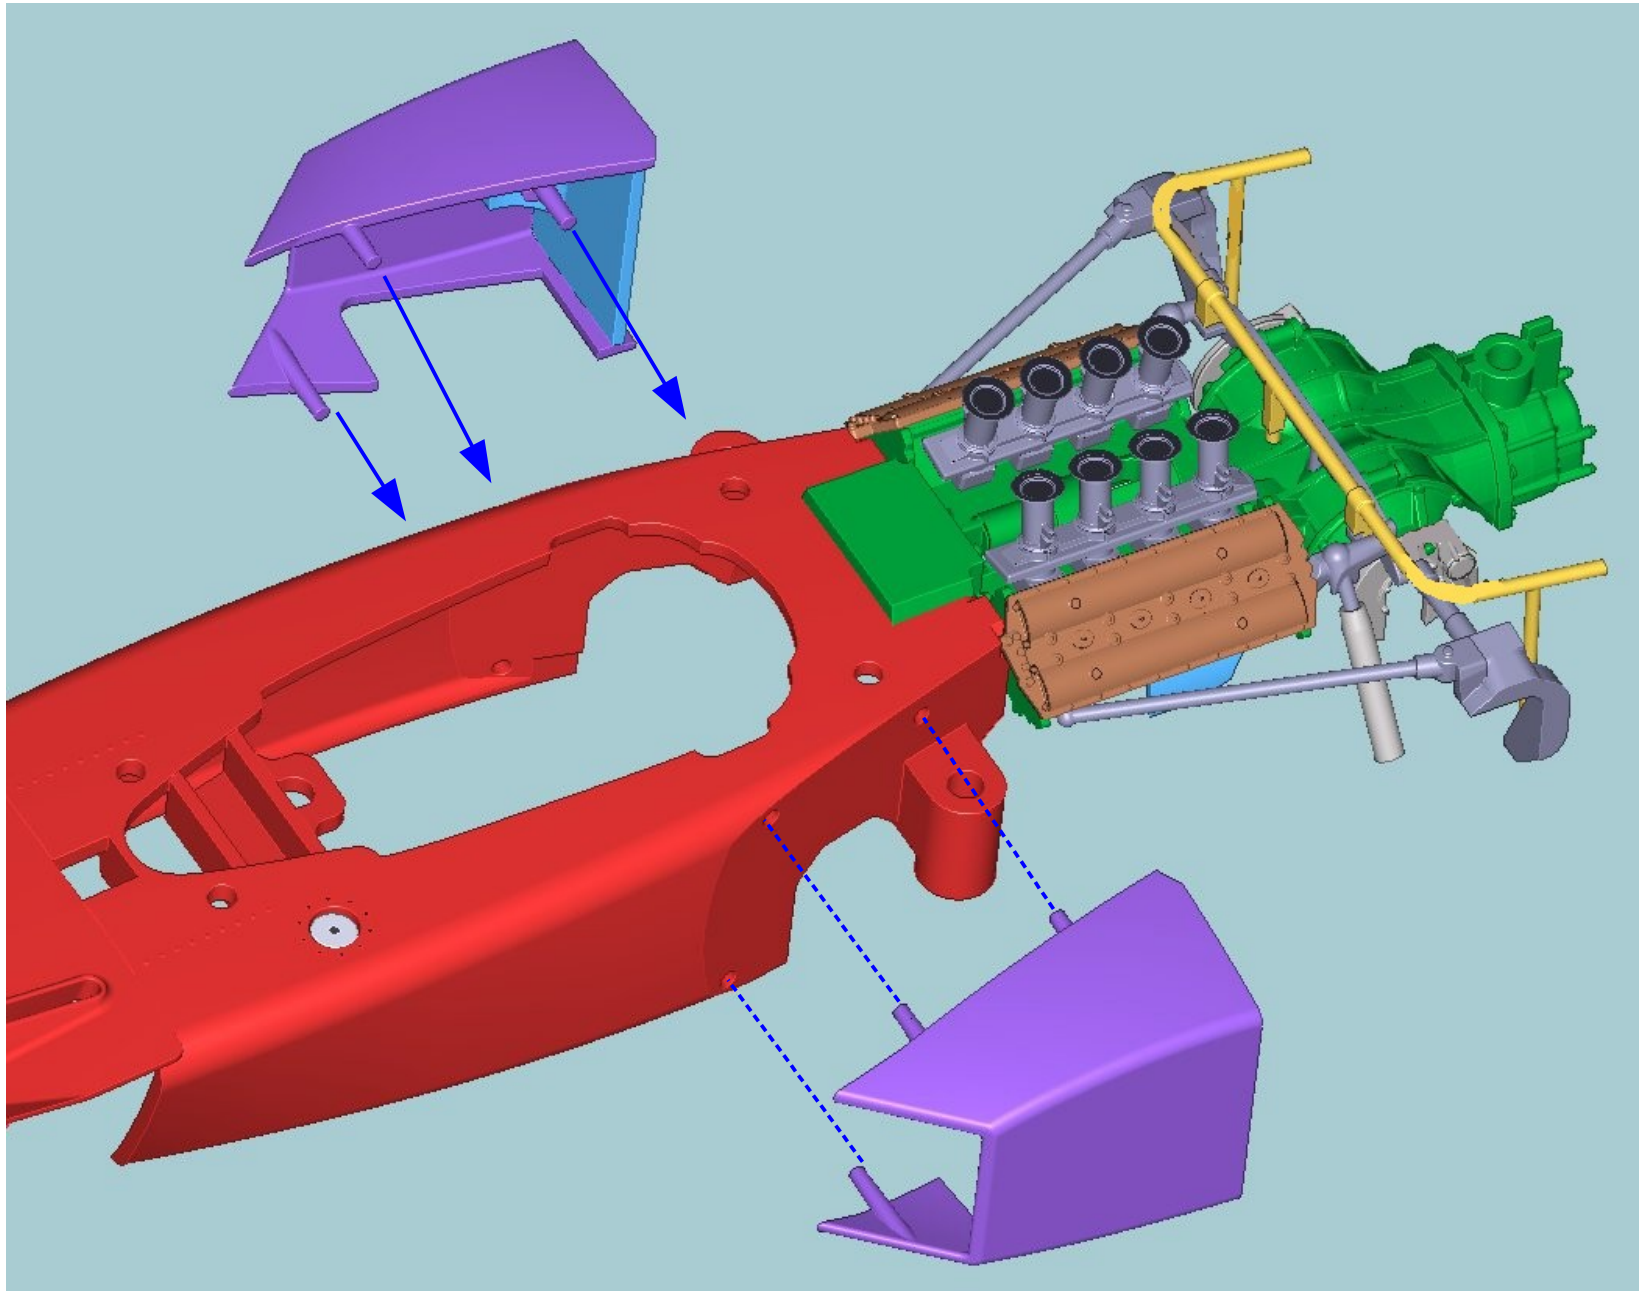


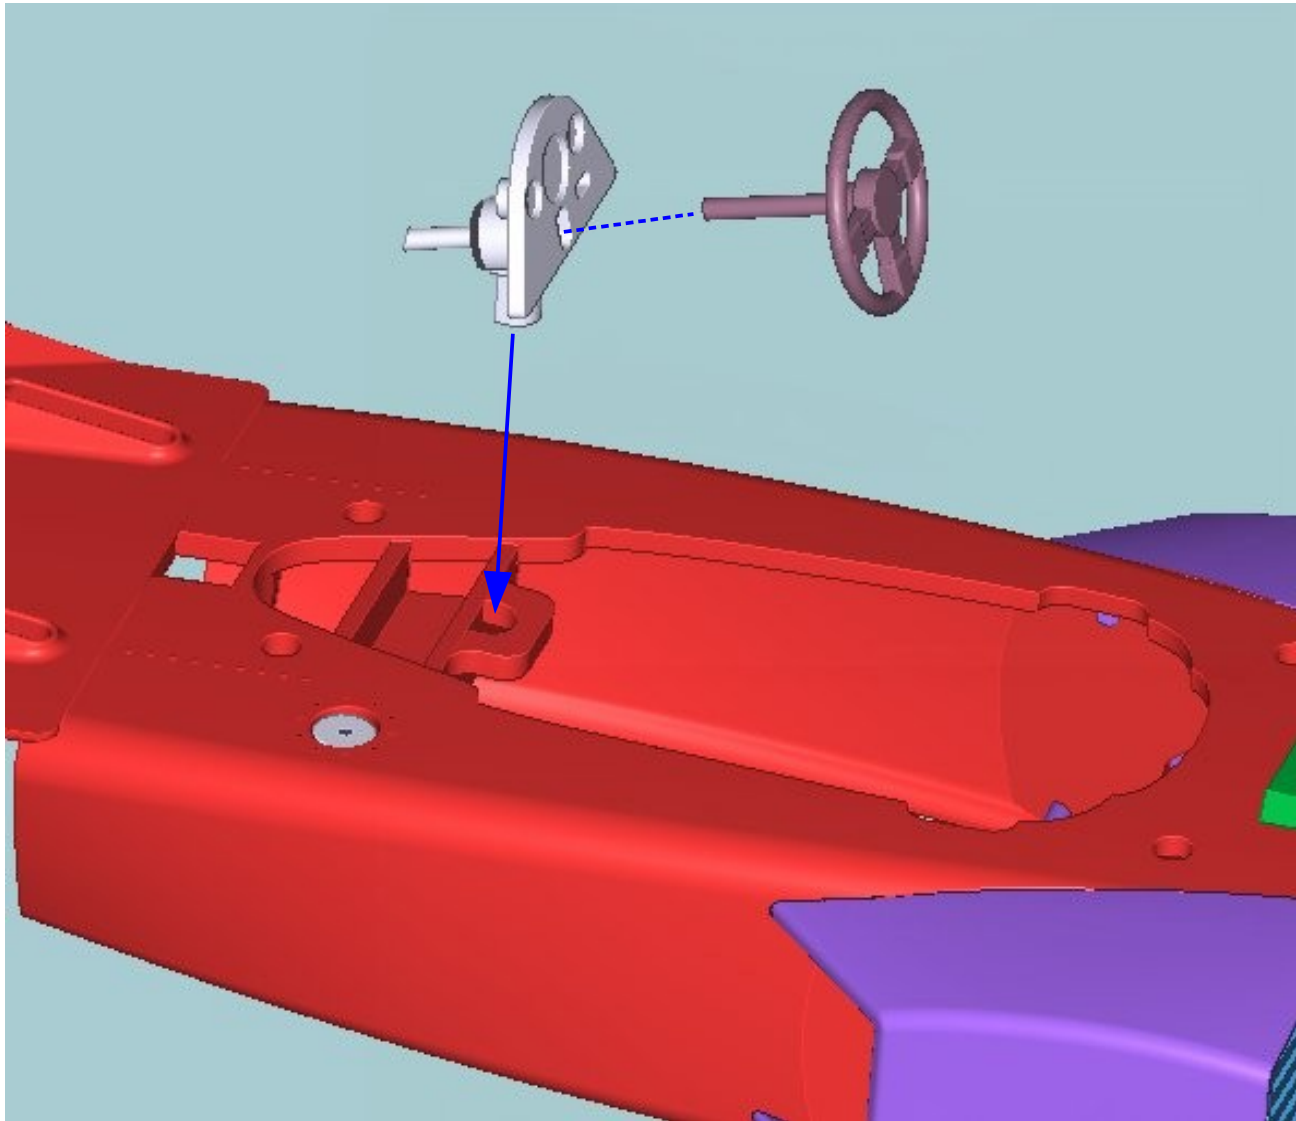



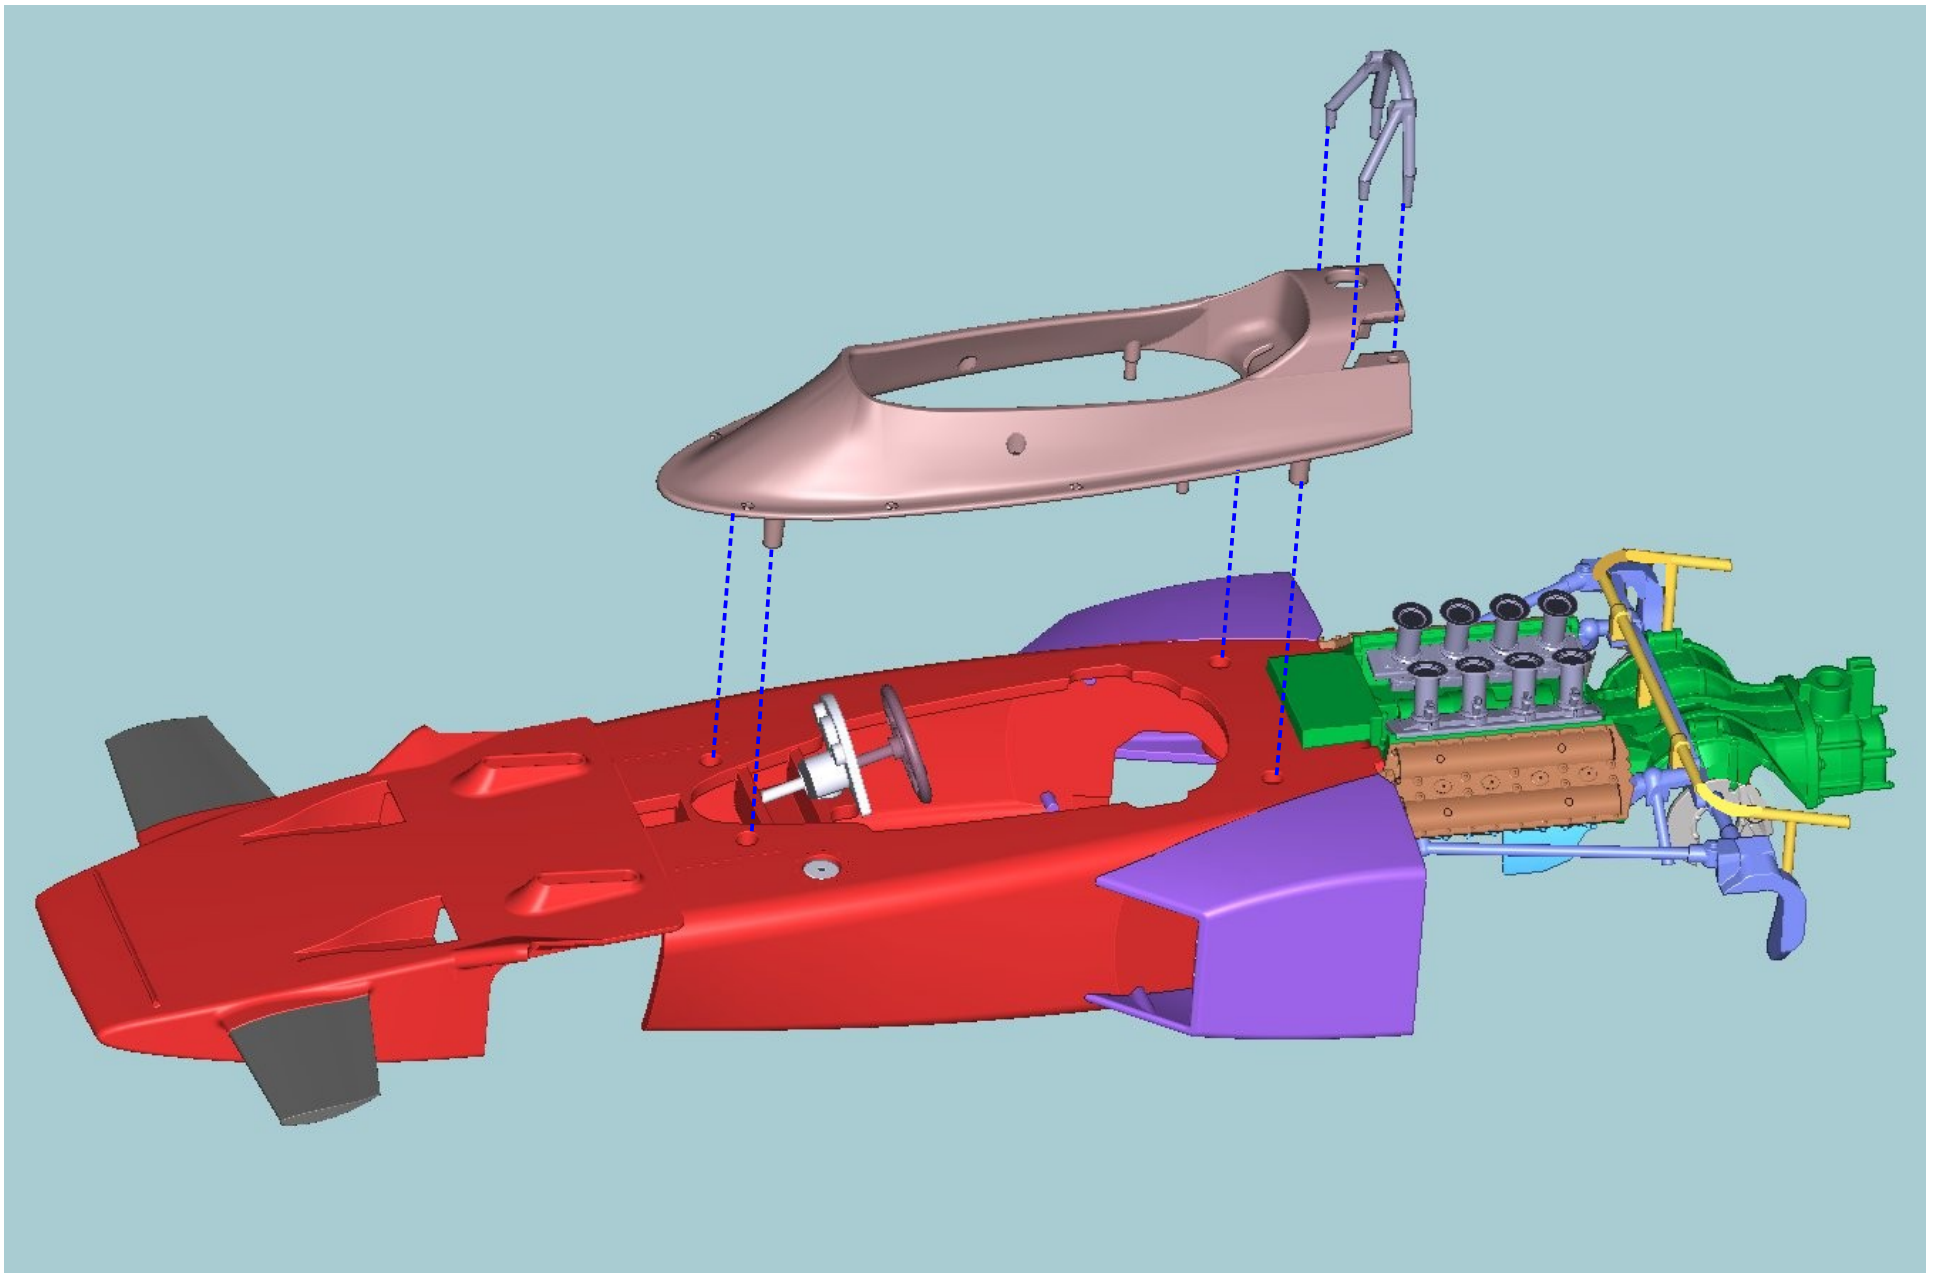




Lotus 72






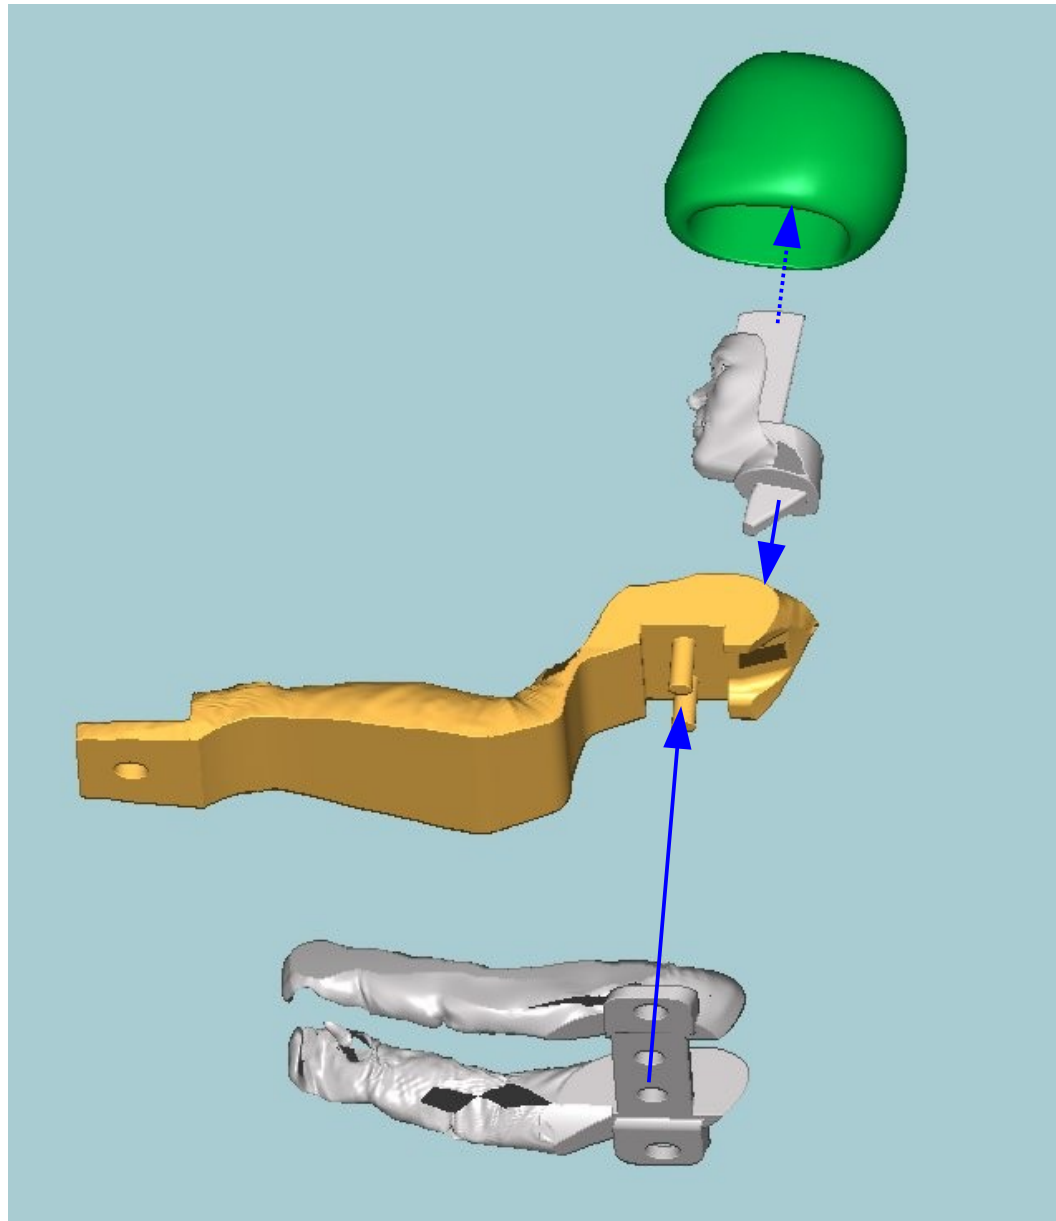


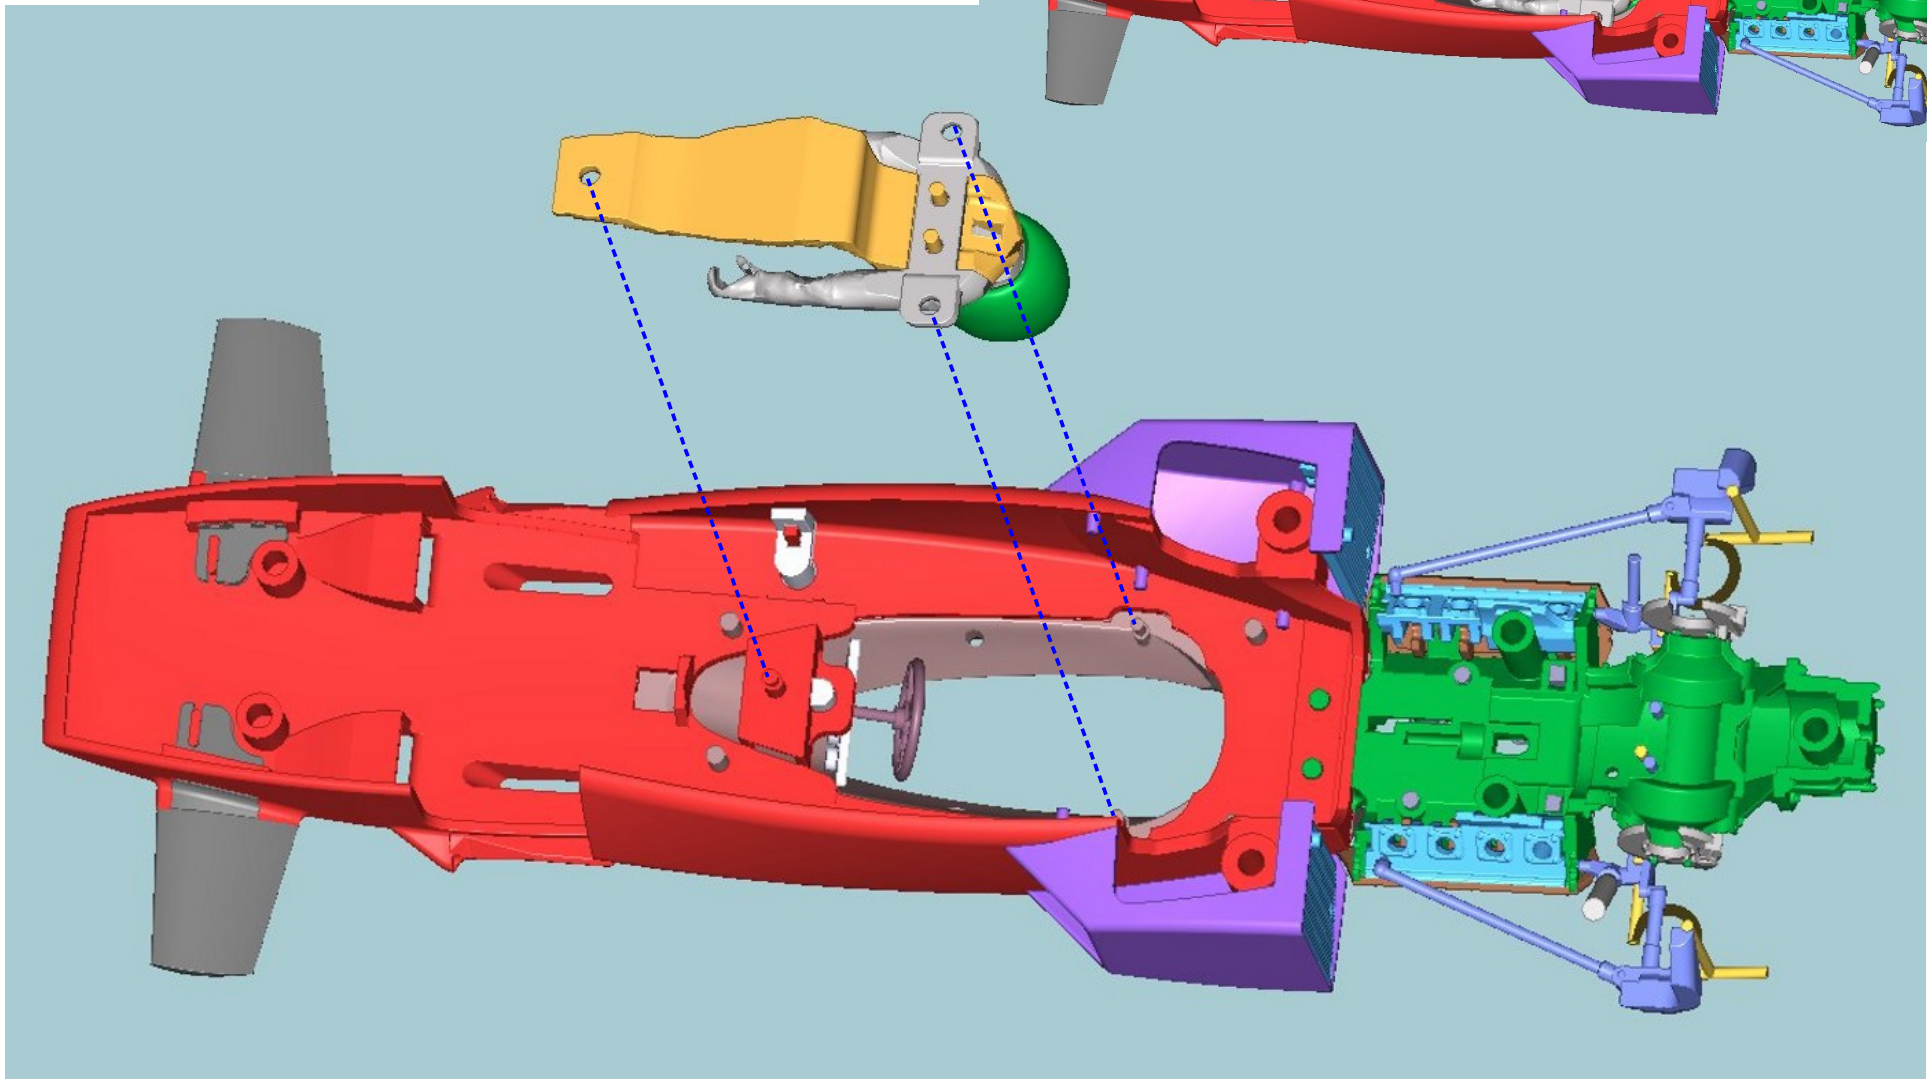


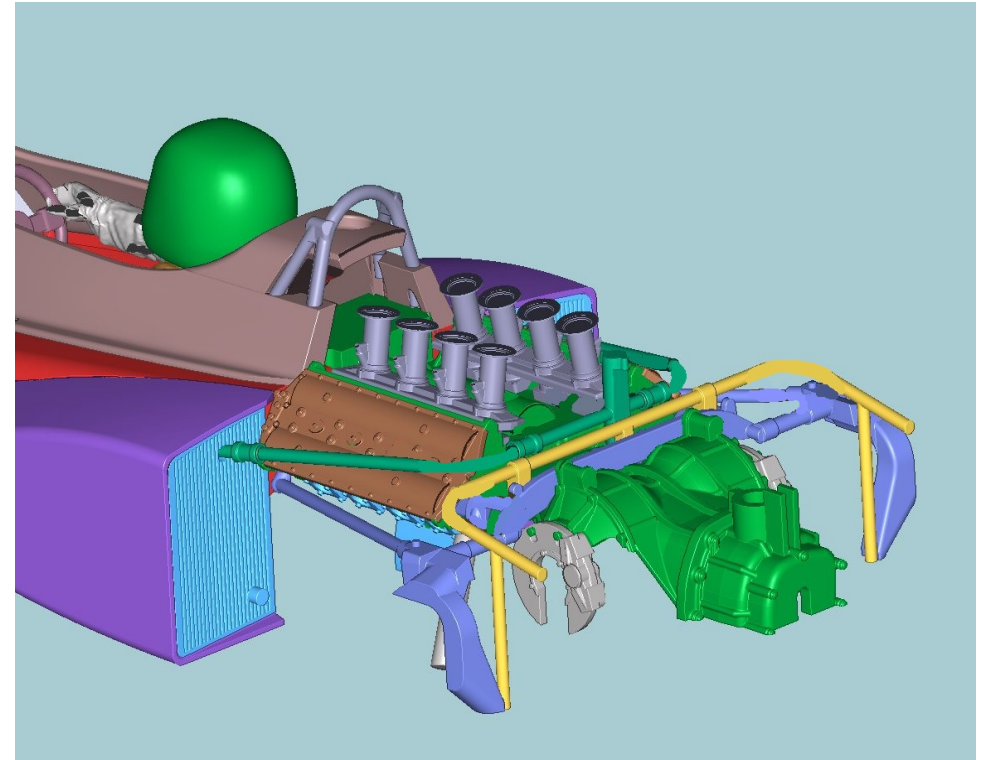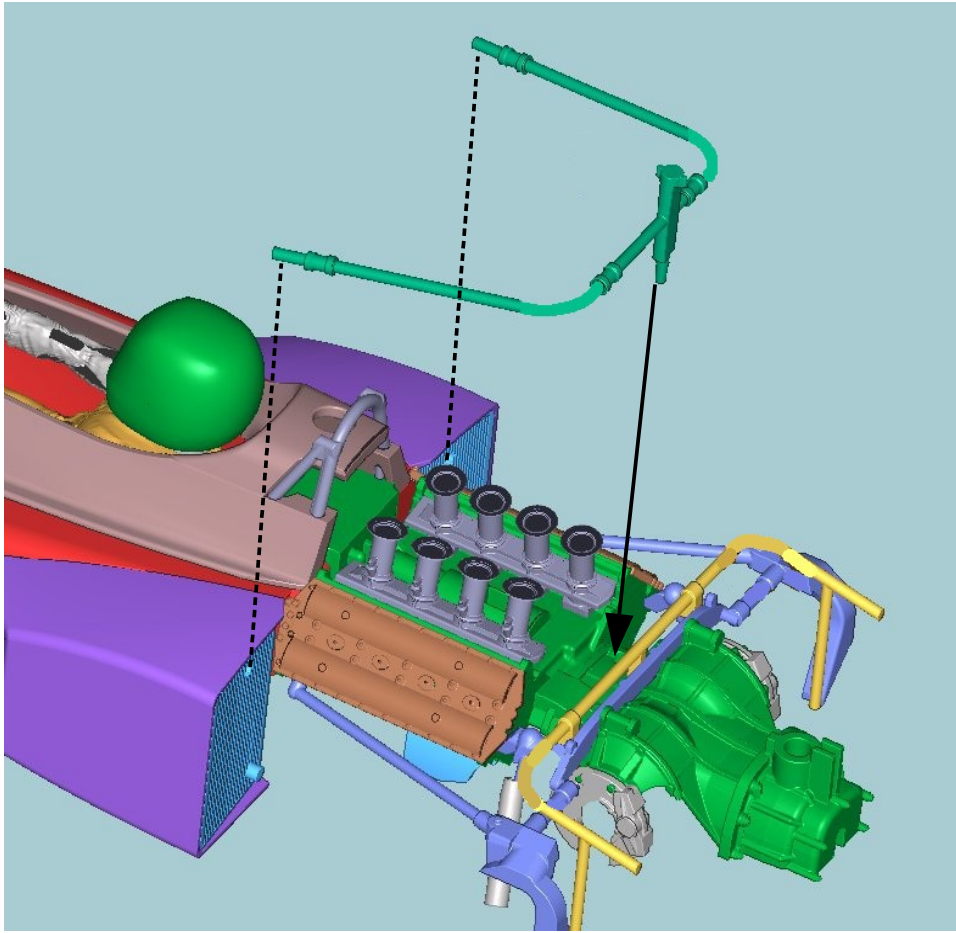


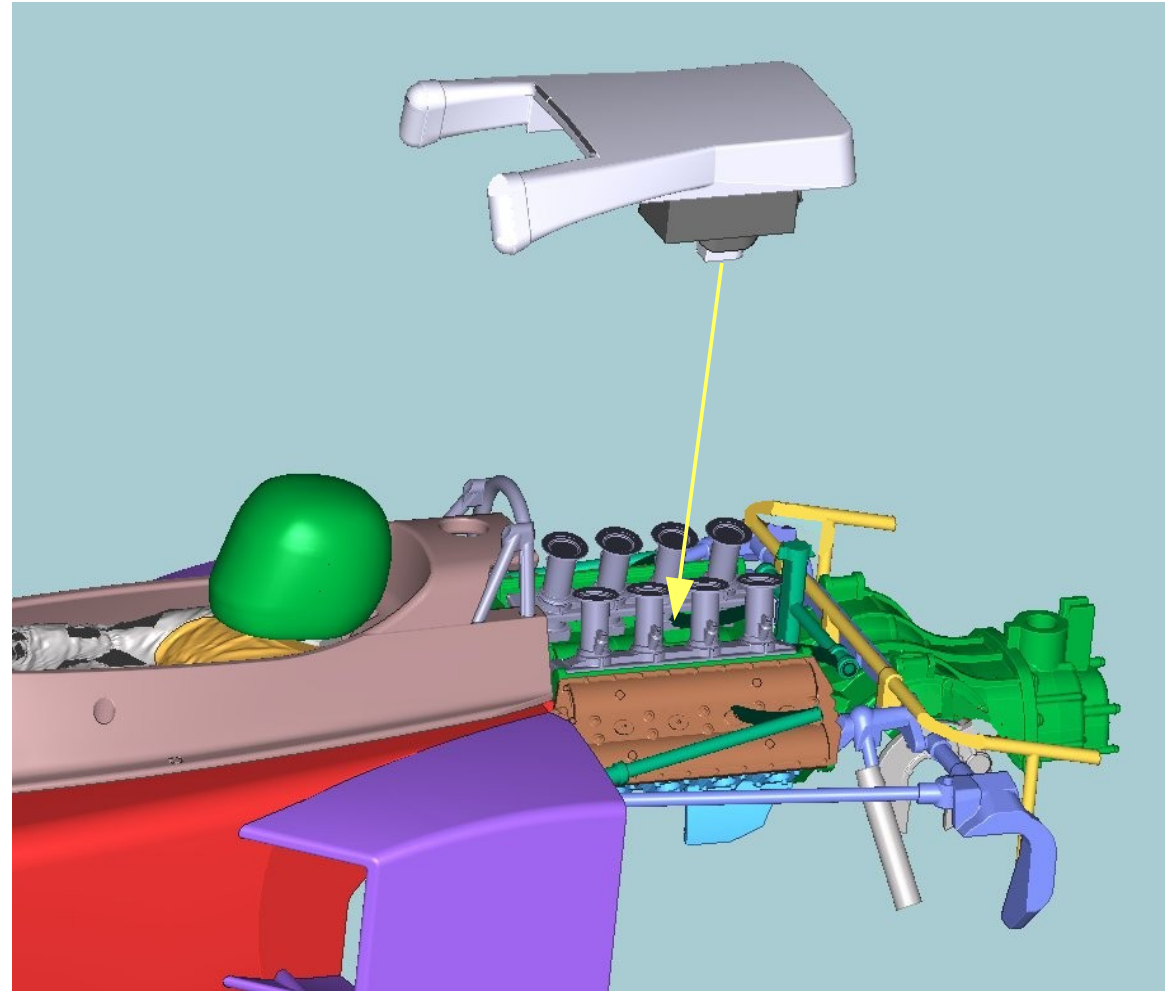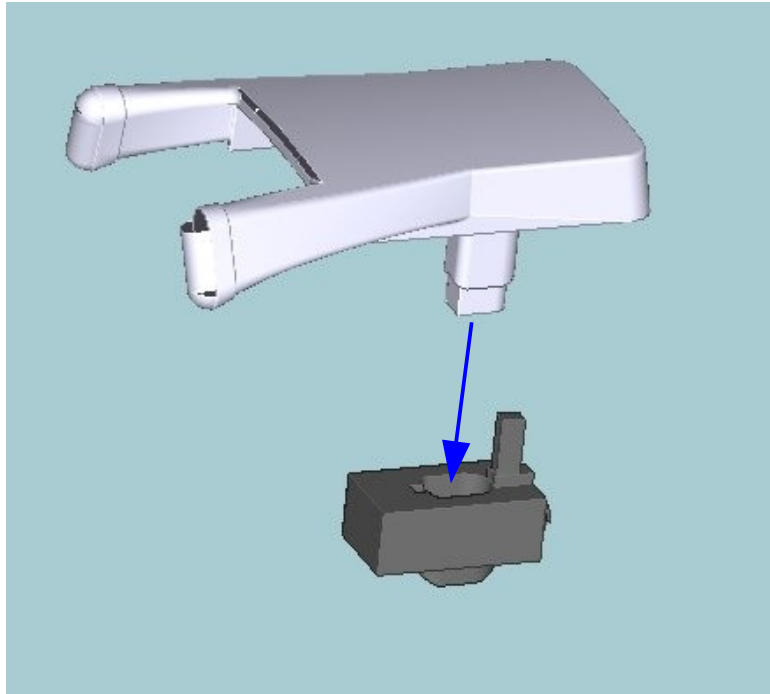


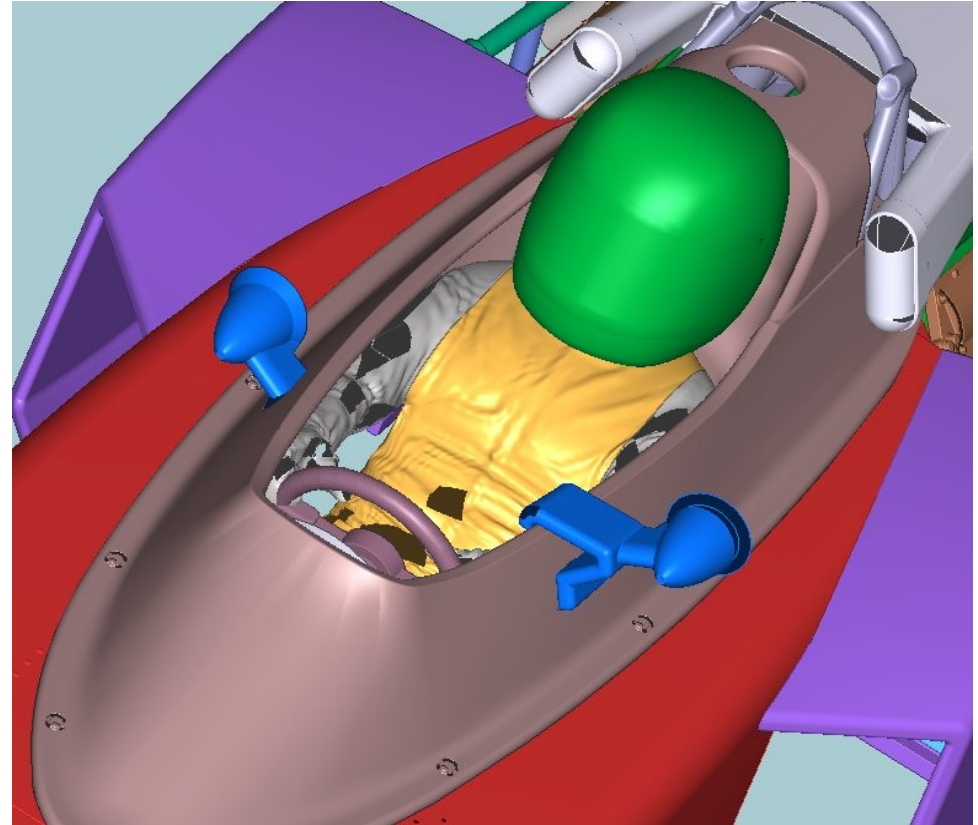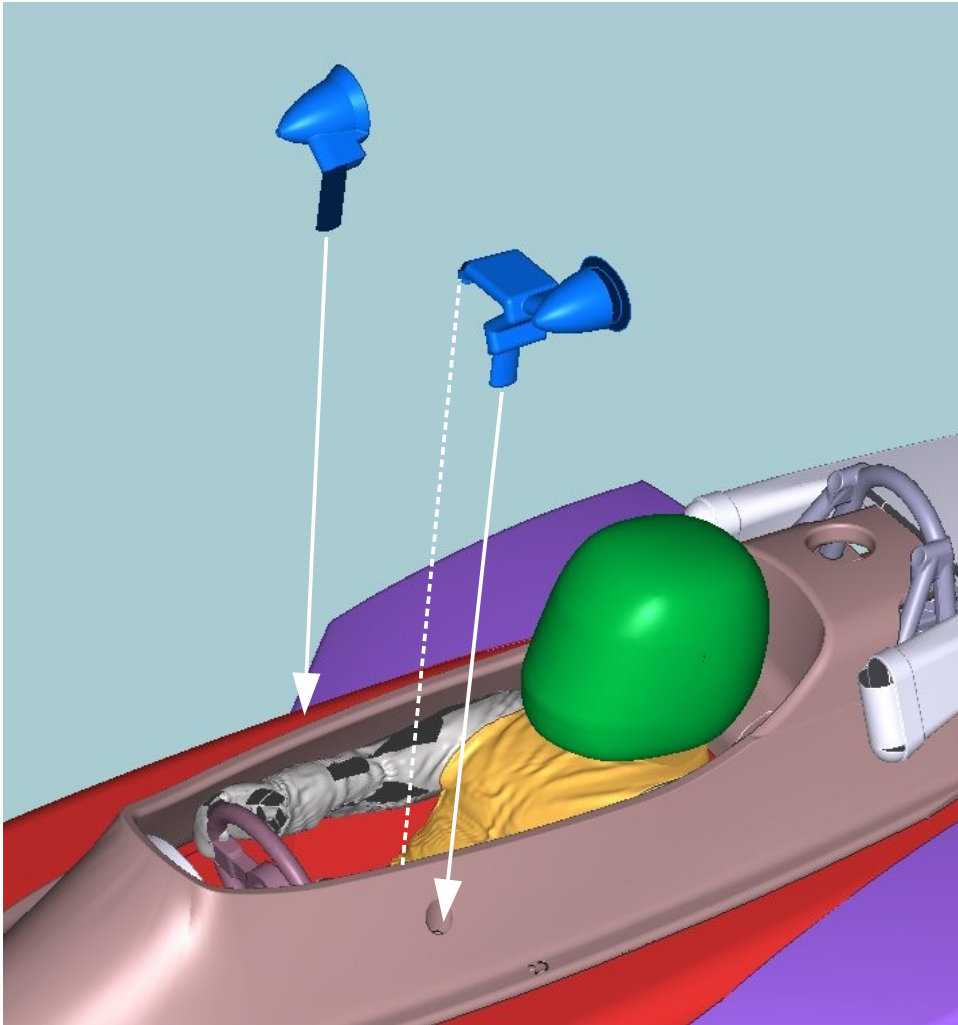


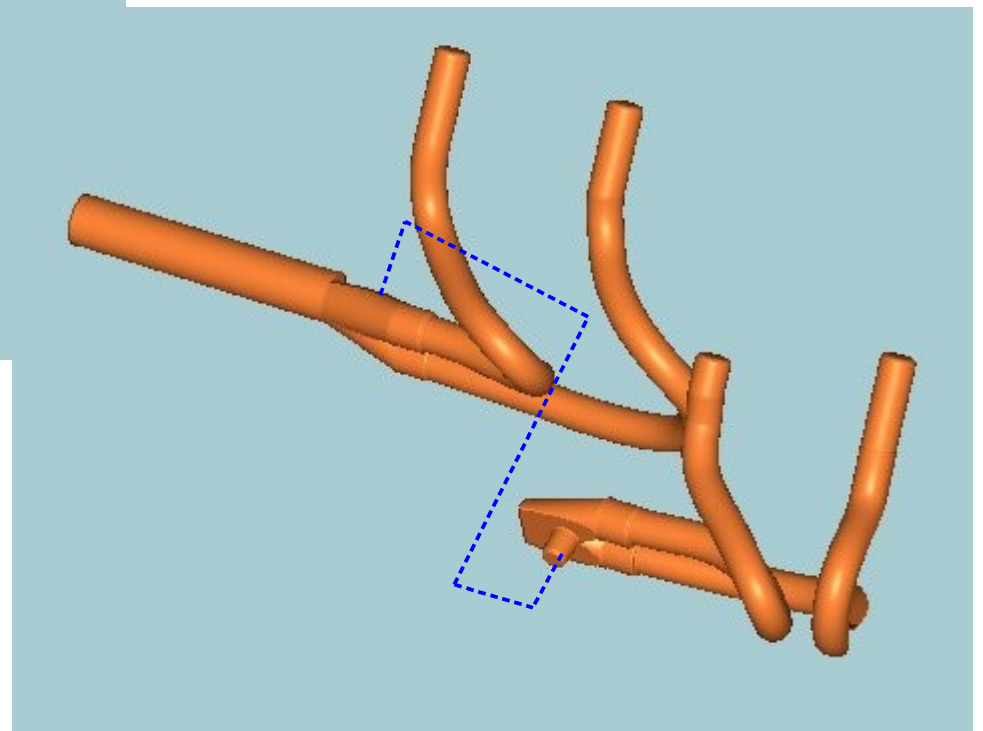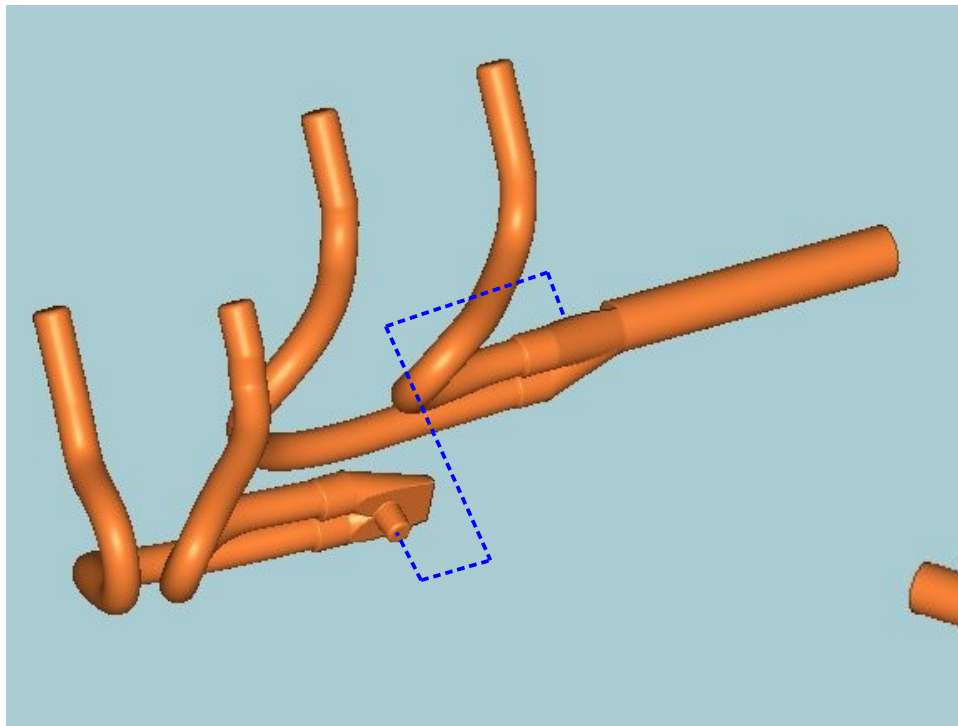


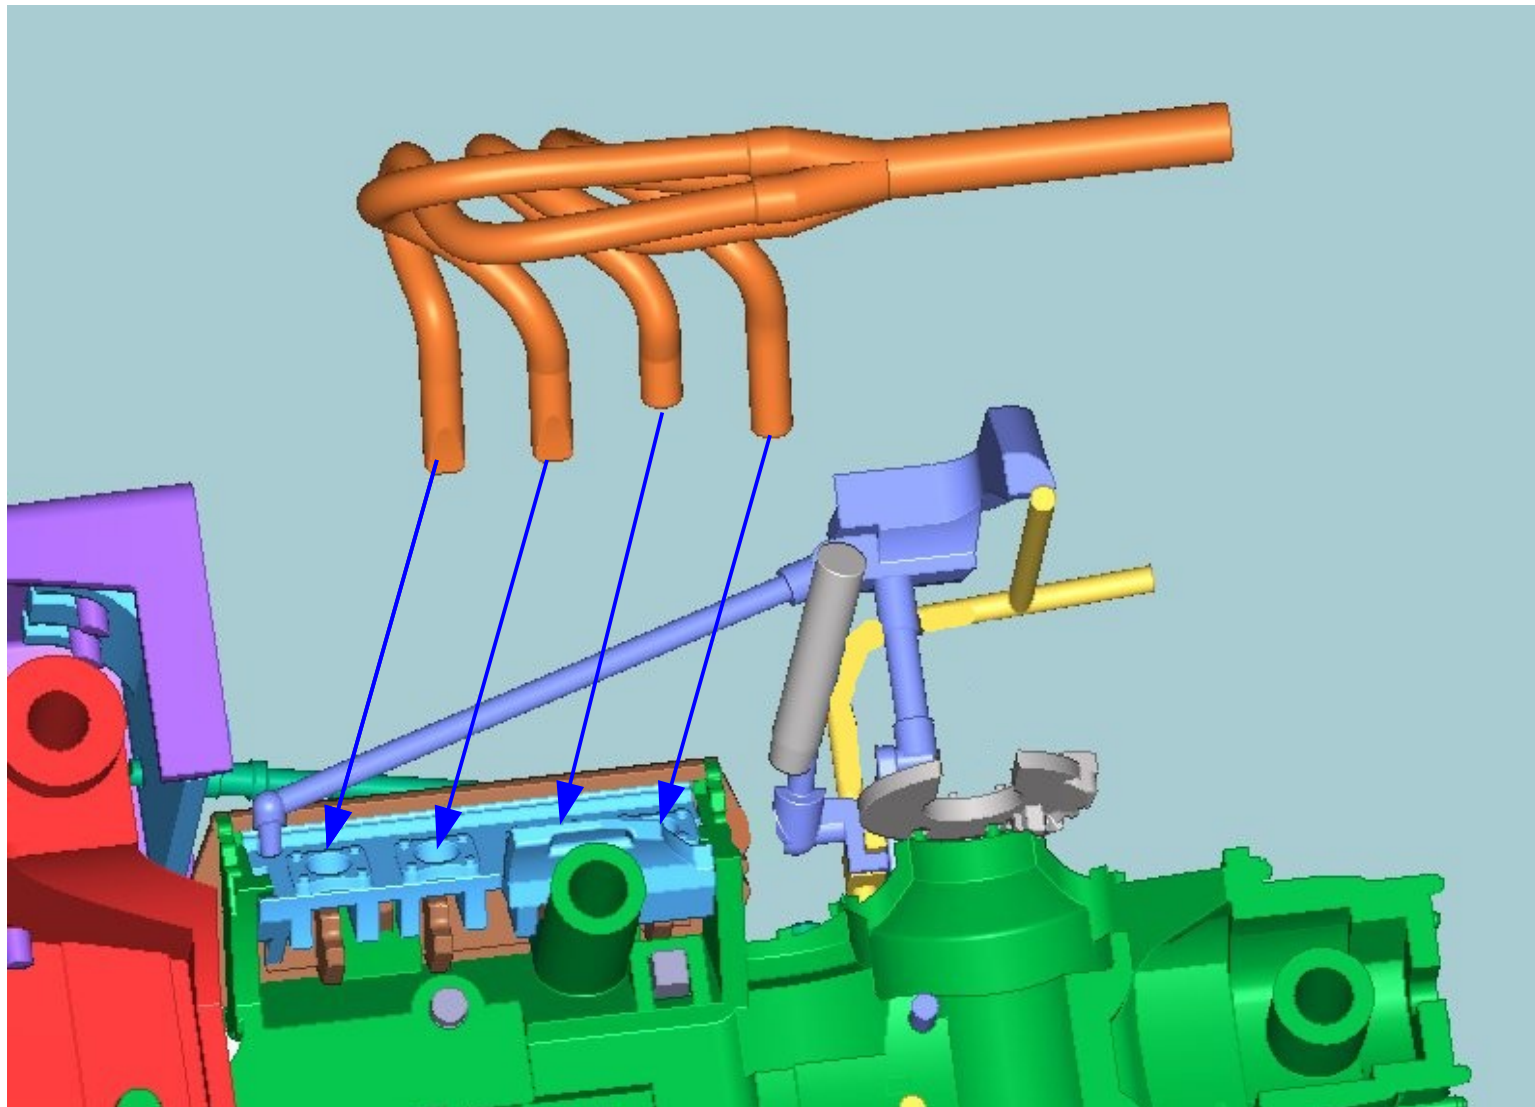


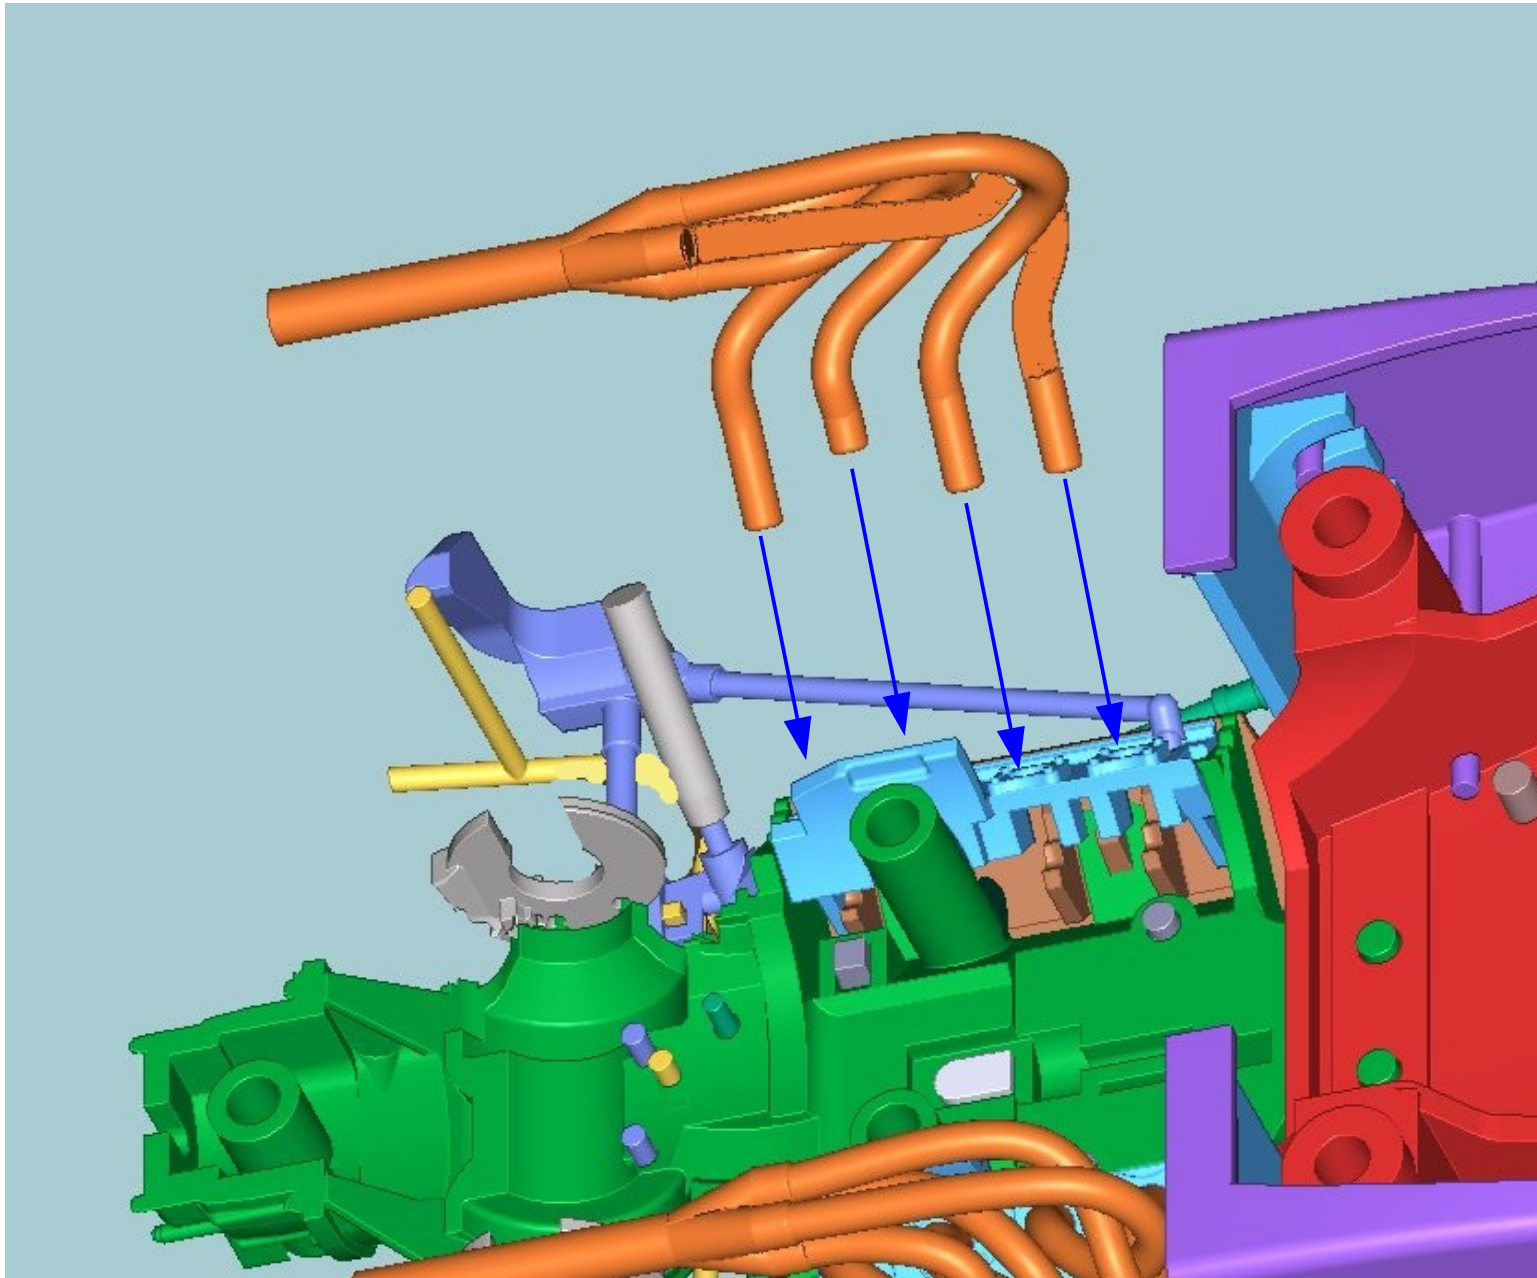

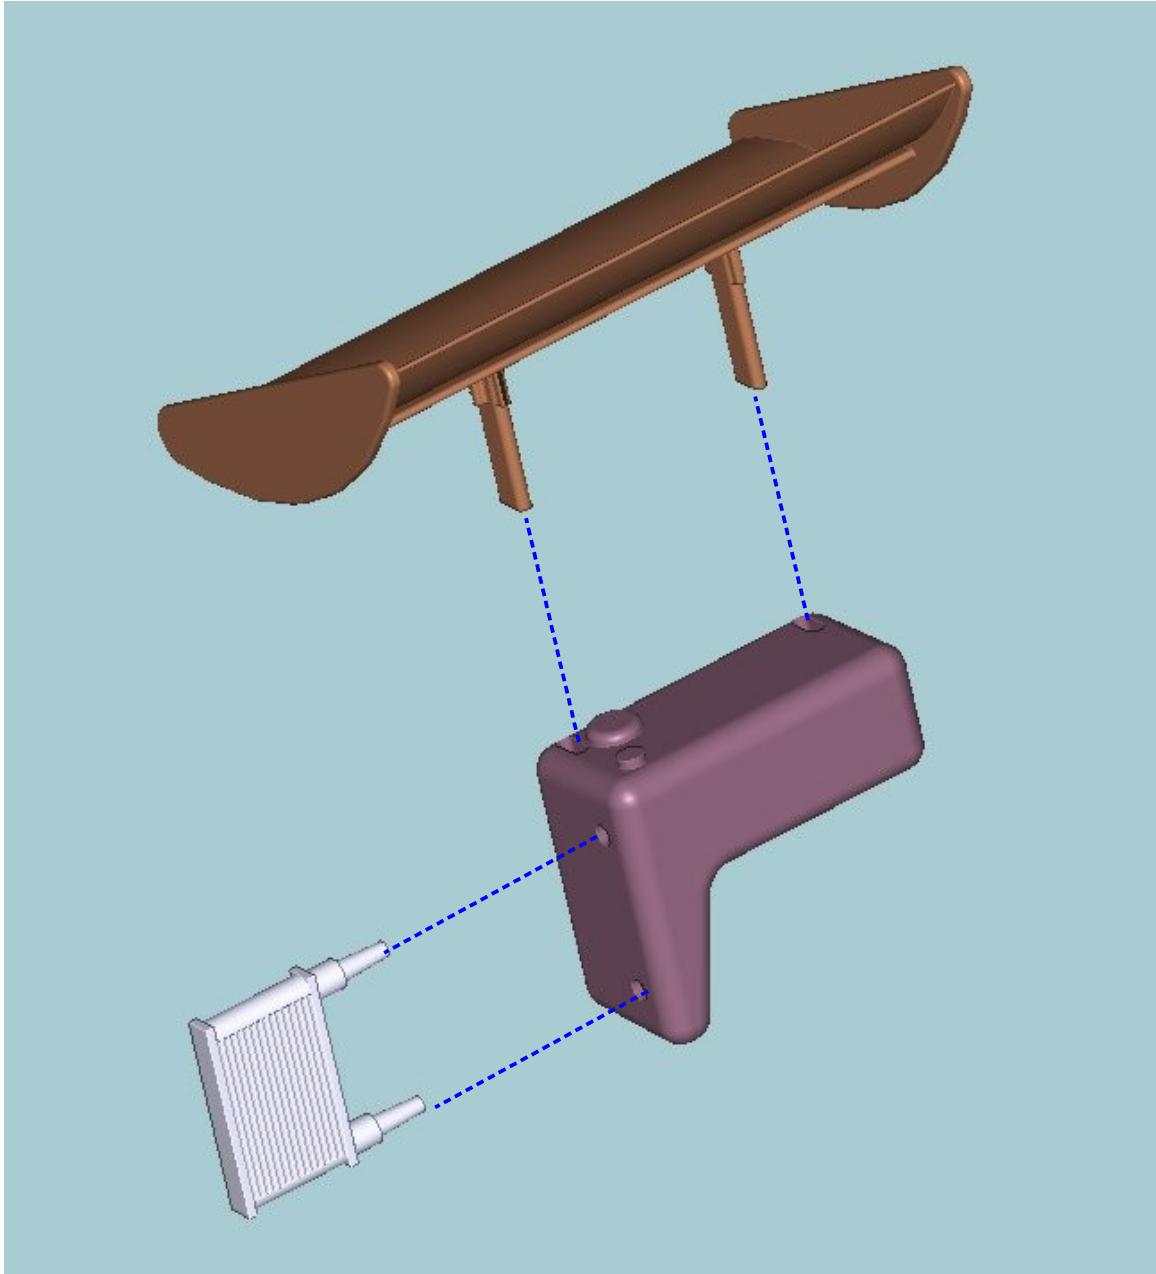

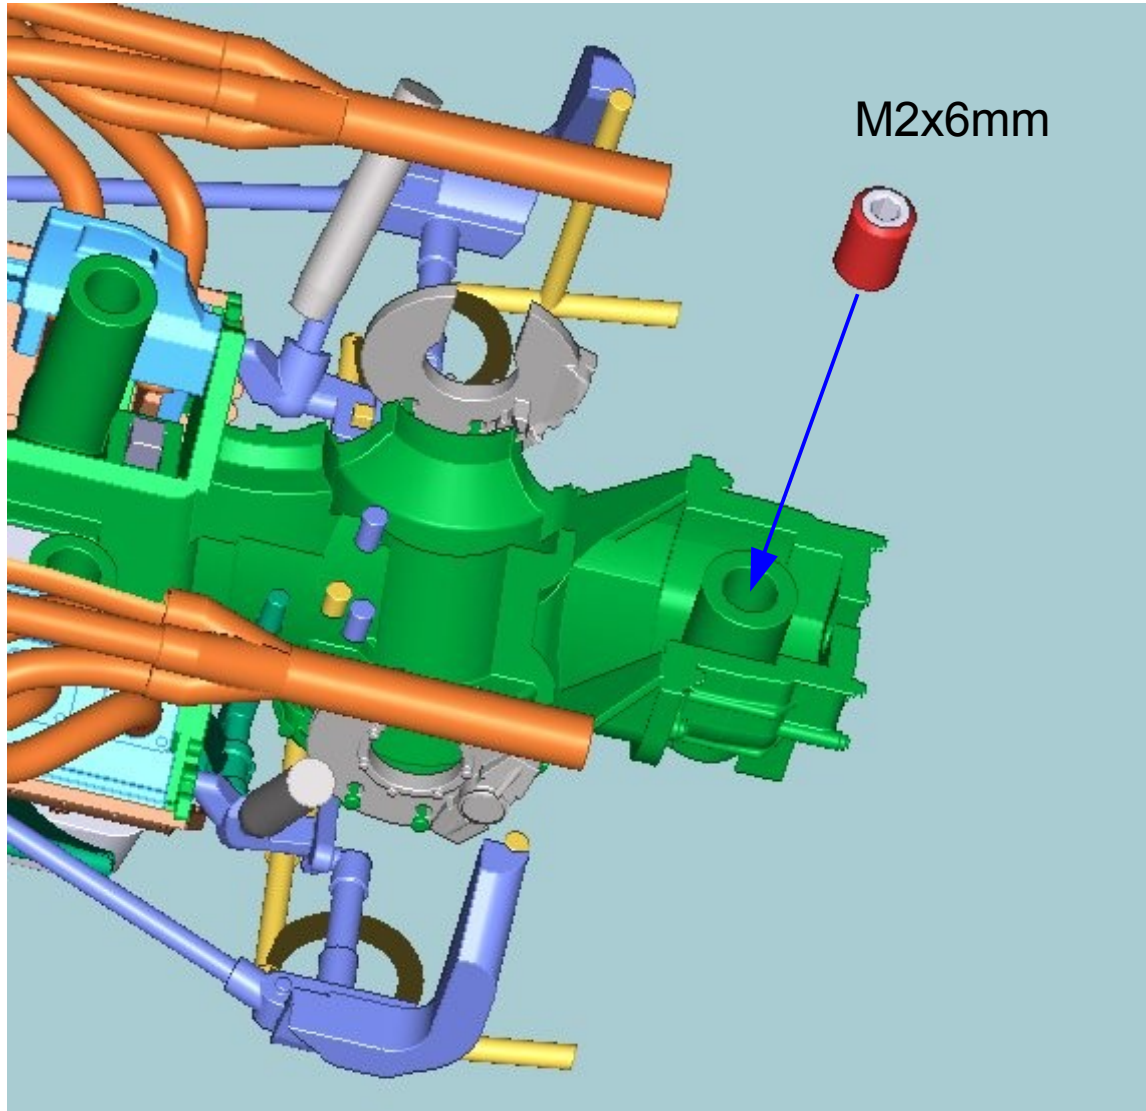

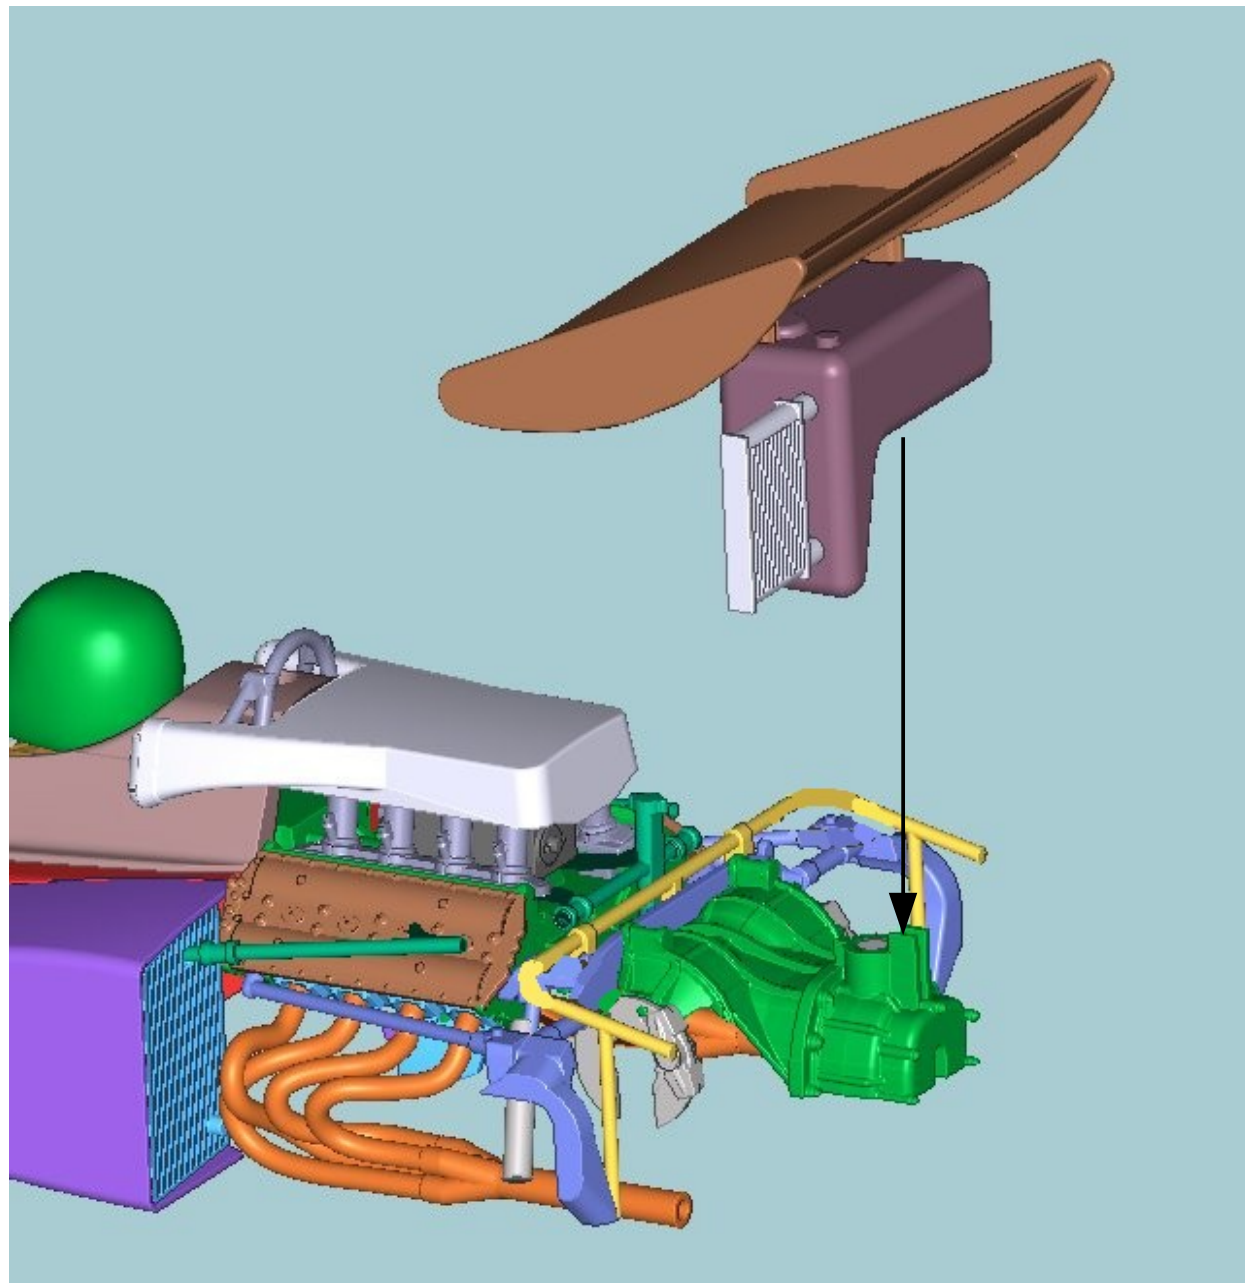

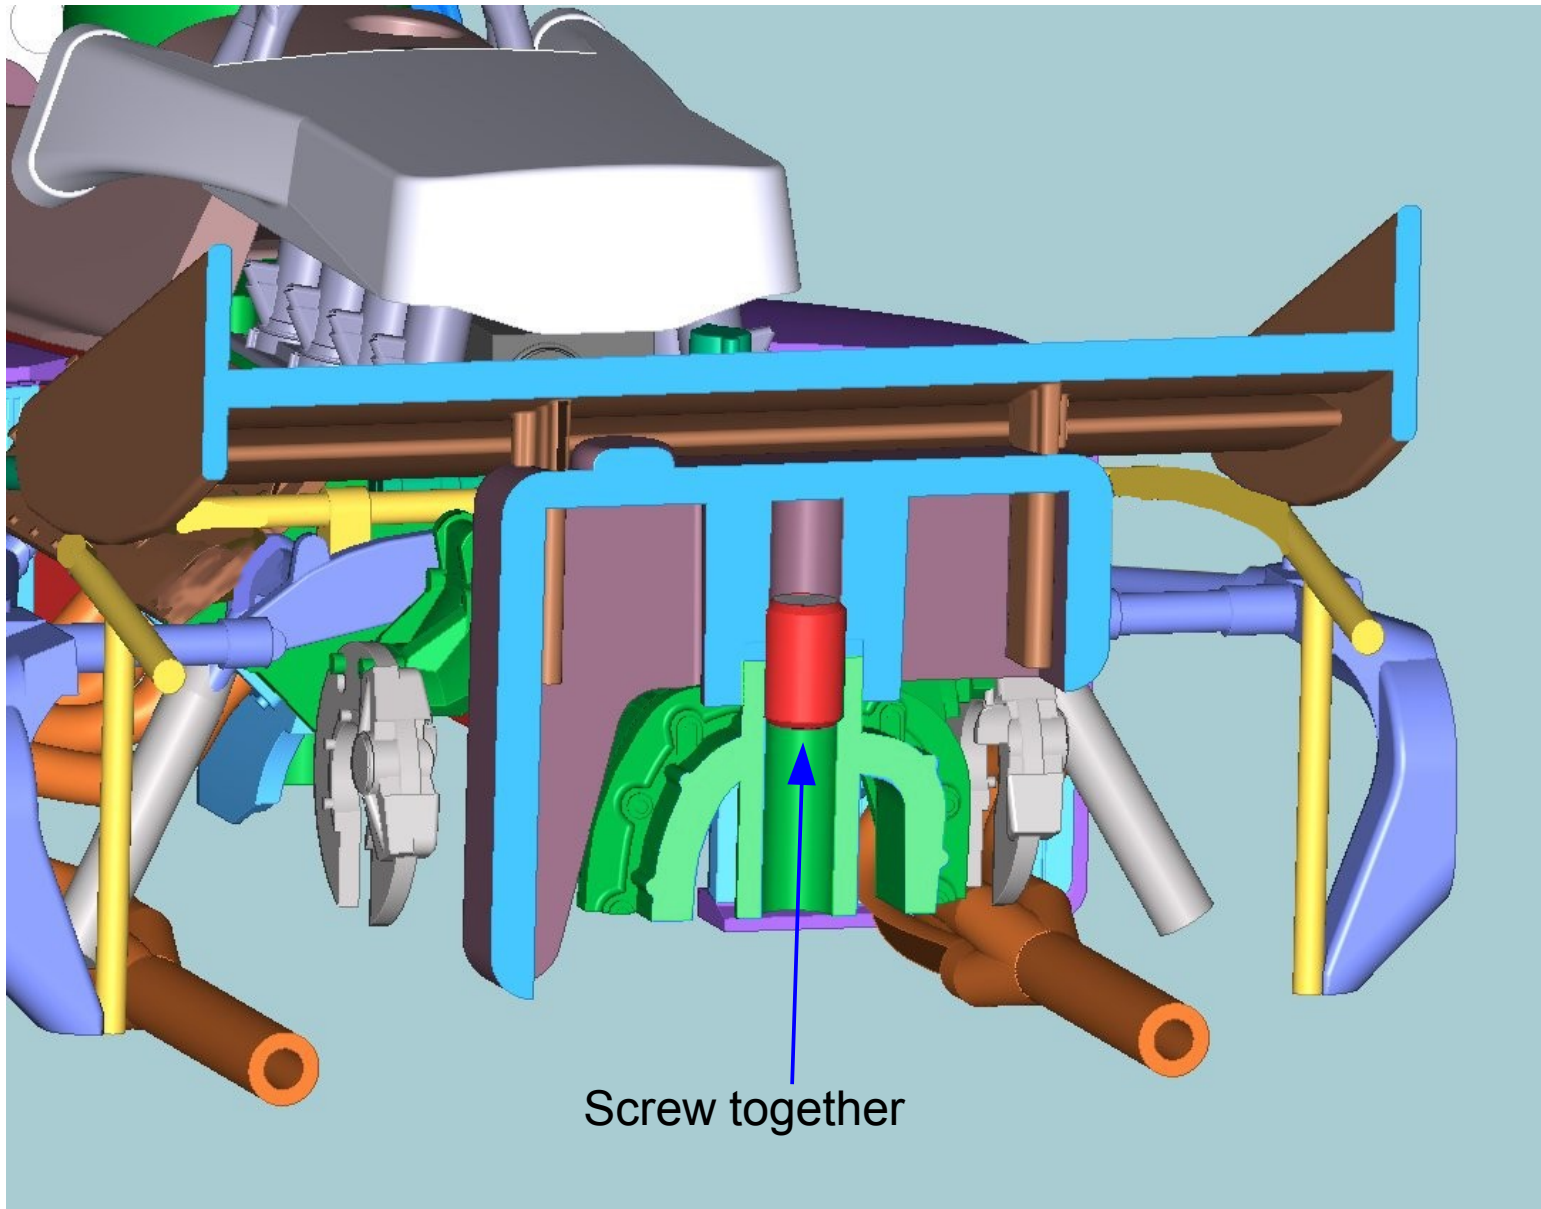

Screw together

